

transmission in speed, the engine does not will launch.

(2 If the engine is running and the transmission is gets into speed while the stand is late