

AIR FILTER The element of the air filter must be cleaned of
once in a while.

- (1) Fill a cleaning container with solvent that is not flammable () . Dive
the in the solvent and level.
- (2) You learned the element by pressing it between the. souls hand in hand
to remove excess solvent. I don't twist the element because It could
crack.