

REAR SUSPENSION

Spring adjustment.

To adjust the initial cerga of the springs, turn the regulator to the right. or to the left, u depending on the desired position. Position: 1 offers the initial load of the softer springs and the posi- 5 the most rigid.