



CHECKING THE OIL LEVEL OF THE Engine

Make sure the engine oil level is! between the "1" (low) and "F*Wleno) of the sale of the () while the motorcycle is in position. vertical tion.

(a) CAUTION:

Mo never get the motor cyclist up and running when the engine oil level is below

"L" (low) mark in the inspection window.

Never exceed the "F" mark (lena) and the nivel de acá.

COMPROBACION DEL NIVEL DE ACEITE DEL MOTOR

Asegúrese de que el nivel del aceite del motor esté entre las marcas "L" (bajo) y "F" (lleno) de la ventanilla ① mientras mantiene la motocicleta en posición vertical.

⚠ PRECAUCION:

No ponga nunca en funcionamiento la motocicleta cuando el nivel de aceite del motor esté por debajo de la marca "L" (bajo) en la ventanilla de inspección. No sobrepase nunca tampoco la marca "F" (lleno) del nivel de aceite.