



LOCATION OF THE NUMBER AS STANDARD

The serial numbers of the frame and/or motor are they use to enrol the motociota. It was also used help 6 your dealer when ask for parts or to refer to information about special service.

The frame number () is stamped on the head tube. The engine number it's stamped on the crankcase.

LOCALIZACION DEL NUMERO DE SERIE

Los números de serie del bastidor y/o motor se usan para matricular la motocicleta. También se utilizan para ayudar a su concesionario cuando se pidan piezas o para referirse a una información de servicio especial.

El número del bastidor ① está estampado en el tubo del cabezal de dirección. El número del motor ② está estampado en el cárter.