

FUEL TAP

“ON” - Normal position while using the motorcycle

“NICE TO STAY” If the fuel level of the tank is low, put the lever on the position “RESERVE” to use combustion reserve. SUPPLY: FUEL: FROM -RESERVE: 2.0L

“OFF” Set the lever to the “OFF” whenever the engine stops for more than a few minutes.