

## EQUIPMENT AND ADJUSTMENTS

**FUEL DEPOSIT COVER** To open the lid of the combustibl tank Remove the end of the ventilation tube from the open and turn the lid to the left. Paro cerr

the fuel tank cap, turn the ta  
to the right and squeeze it tightly. Conect  
then the ventilation tube.