



# Digital Toy Camera User Manual

The camera has four buttons for controlling and taking pictures

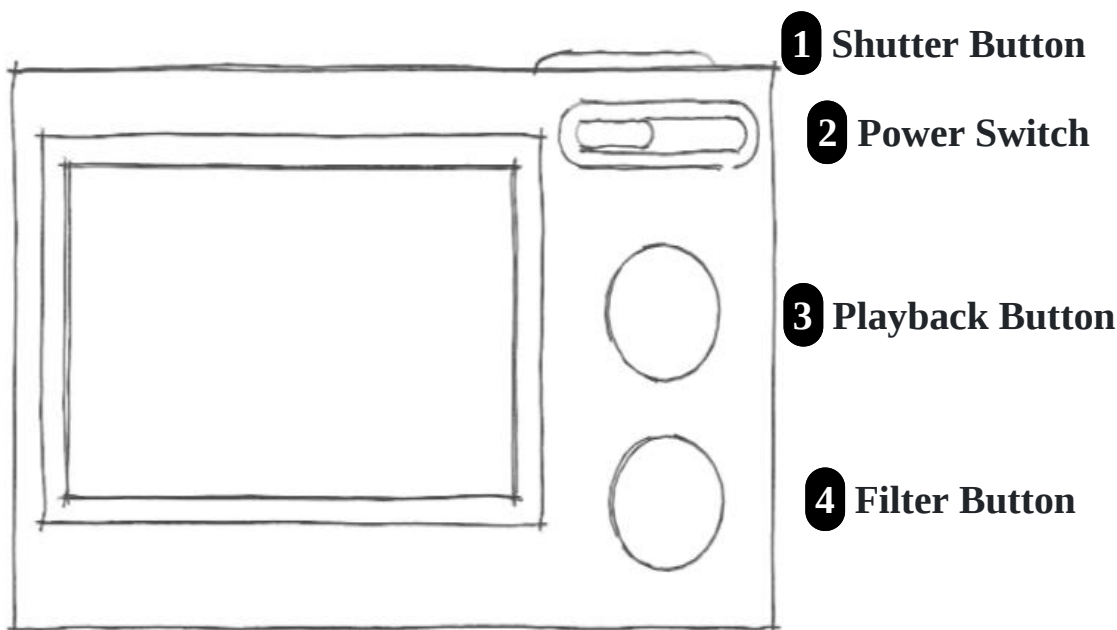

It has two main modes: **Shooting mode**, **Playback mode**

## In any mode:

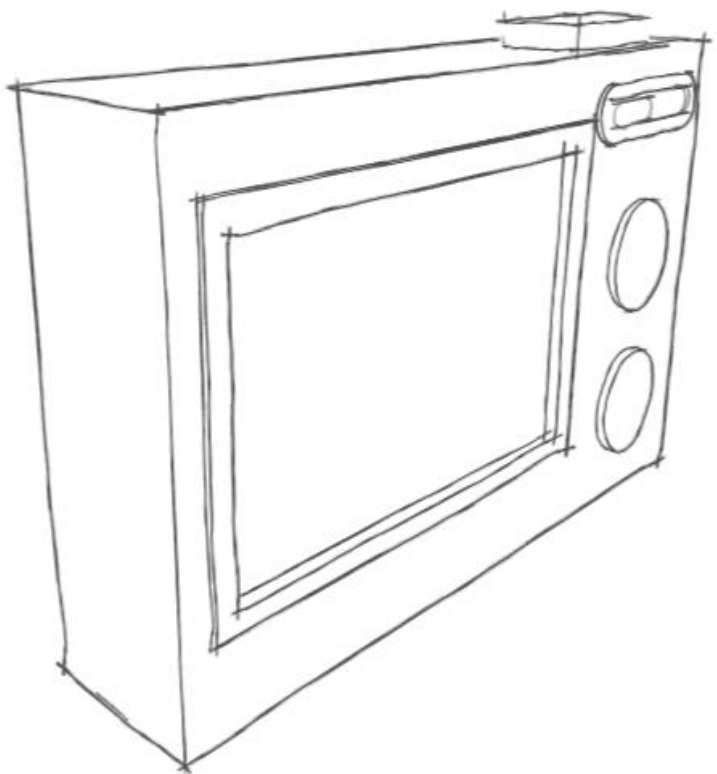


**2 Power Switch**

- I. Slide the switch to “**OFF**” position will turn the camera off.
- II. When the camera is off, slide the switch to “**ON**” position will turn the camera on and enter shooting mode.

## In Shooting mode:

- I. Press the shutter button will **take a picture** and store in the camera

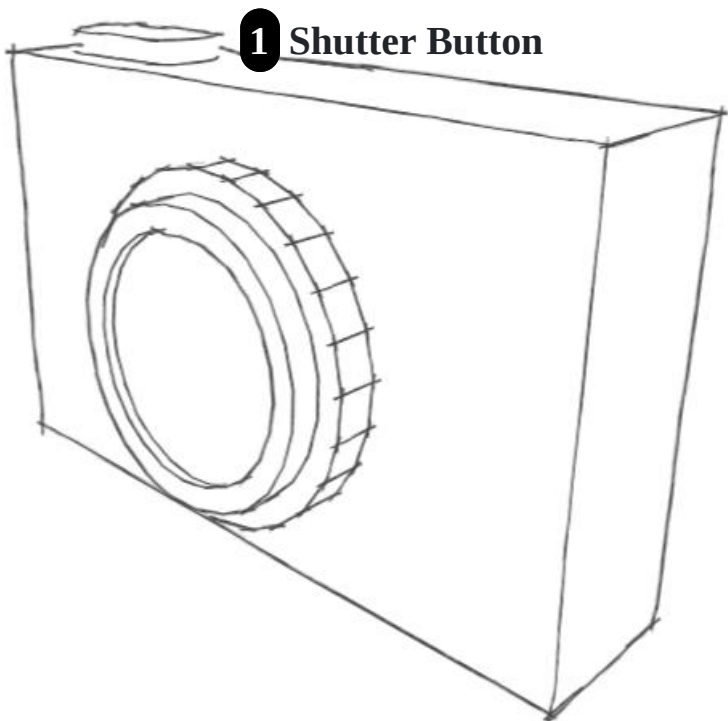

**1 Shutter Button**



**3 Playback Button**


- I. press the playback button to **enter playback mode**

( Try to press the playback button )

- I. press the filter button will **cycle through four filter modes**:


- No filter
- Monochromatic
- Vintage
- Starry

( Try to press the filter button )

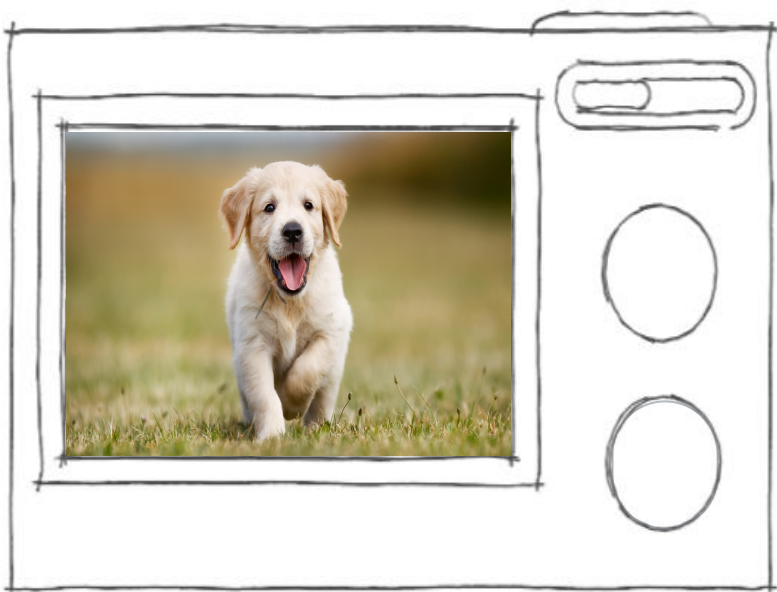

**4 Filter Button**

## In Playback mode:

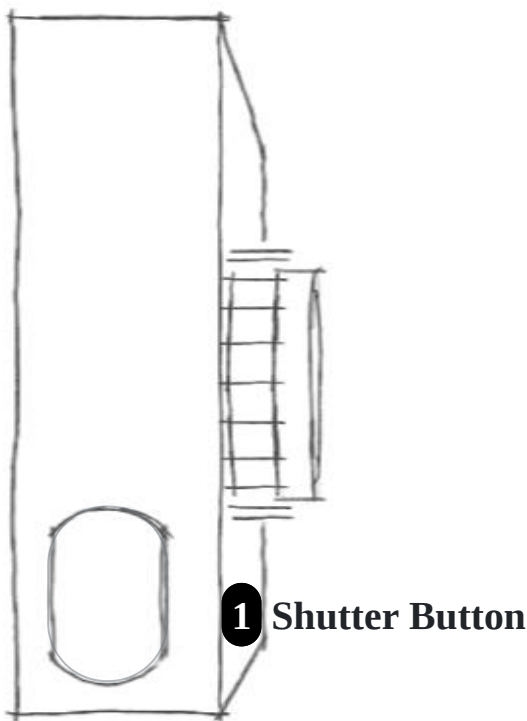


**1 Shutter Button**

- I. press the shutter button will **change the mode to shooting mode**.

( Try to press the shutter button )

- I. press the playback button will **cycle through all pictures** that have been taken and stored in the camera

( Try to press the playback button )

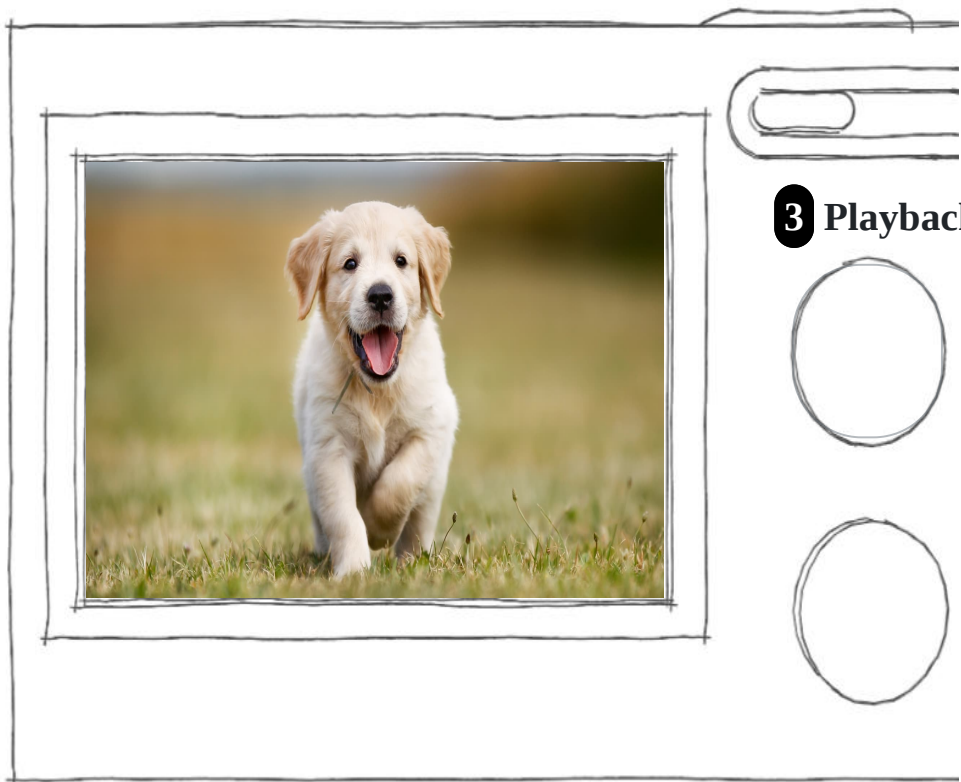

**3 Playback Button**