






# PARTS LIST

## EFM MODEL S20 STOKER

**ELECTRIC FURNACE MAN**  
EMMAUS, PA 18049

 ITEM NO.	NO. REQ.	PART NO.	DESCRIPTION	ITEM NO.	NO. REQ.	PART NO.	DESCRIPTION
1	1	37867	REDUCING UNIT	35	1	94-33762-000	FEED CONTROL COLLAR ASSEMBLY
2	1	33766	MOTOR COUPLING	36	1	85002	THUMB SCREW 5/16" - 18 - 2"
3	1	94-33743-000	AIR PIPE	37	1	94-33740-000	CLUTCH SHAFT
4	1	32791	AIR INDICATOR PLATE	38	1	94-33767-000	SHEAR COLLAR
5	1	94-33761-000	DAMPER SHAFT AND POINTER ASSEMBLY	39	1	35656	SHEAR PIN
6	1	94-31728-000	DAMPER DISC	40	1	94-33753-000	CLUTCH SHAFT COUPLING
7	1	85001	THUMB SCREW 1/4" - 20 x 1"	41	1	94-33944-000	RATCHET DRUM
8	1	94-41329-000	OIL RESERVOIR	42	1	94-33922-000	CLUTCH SHAFT SPACER
9	1	94-33786-001	CRANK ASSEMBLY	43	1	31-50998-000	BURNER PLATE HOLDER
10	1	94-43087-000	CONNECTING ROD	44	6	94-50840-000	SECTIONAL BURNER PLATE
11	1	94-33732-000	CRANK PIN	45	1	94-60654-000	GOOSENECK ASSEMBLY
12	1	94-34370-000	CLEANOUT ROD	46	1	94-33746-000	GOOSENECK BUSHING
13	1	94-34407-000	CLEANOUT LEVER	47	1	94-60430-000	AIR CHAMBER
14	1	94-33723-000	CLEANOUT ROD EYE	48	1	94-33739-000	SHOULDER SCREW
15	1	32037	CLEANOUT SPRING	49	1	94-51280-000	CLEANOUT COVER
16	1	94-33748-000	WORM COUPLING	50	2	94-31875-000	CLEANOUT COVER WEDGE
17	1	94-41326-000	BURNER WORM AND SHAFT ASSEMBLY	51	1	94-35683-000	BURNER PLATE PACKING
18	1	94-33986-000	BURNER WORM SHAFT BUSHING	52	1	94-35770-000	AIR CHAMBER PACKING
19	1	94-41327-000	BIN FEED WORM AND SHAFT ASSEMBLY	53	1	94-35999-000	GOOSENECK PACKING
20	1	94-51015-000	COAL PIPE COUPLING ASSEMBLY	54	1	43093	SHAKER CRANK (NOT ILLUSTRATED)
21	1	94-31878-000	SHOULDER SCREW	55	1	35659	HAIR PIN COTTER
22	1	94-33752-000	COAL PIPE - BIN FEED END	56	1	35426	RETAINING RING
23	1	94-34748-000	COAL PIPE - BURNER END	57	2	82711	COTTER PIN 3/16" x 1-1/2"
24				58	1	32069	HAIR PIN COTTER
25	1	94-60431-000	FAN HOUSING				
26	1	94-51003-000	FAN COVER PLATE				
27	1	94-51007-000	FAN ASSEMBLY				
28	1	04016	MOTOR				
29	1	94-33763-000	BEARING BRACKET ASSEMBLY				
30	1	94-36271-000	FEED LEVER ASSEMBLY				
31	1	94-33733-000	DRIVE PAWL STUD				
32	1	94-32911-000	DRIVE PAWL				
33	1	94-33730-000	CHECK PAWL STUD				
34	1	94-33731-000	CHECK PAWL				

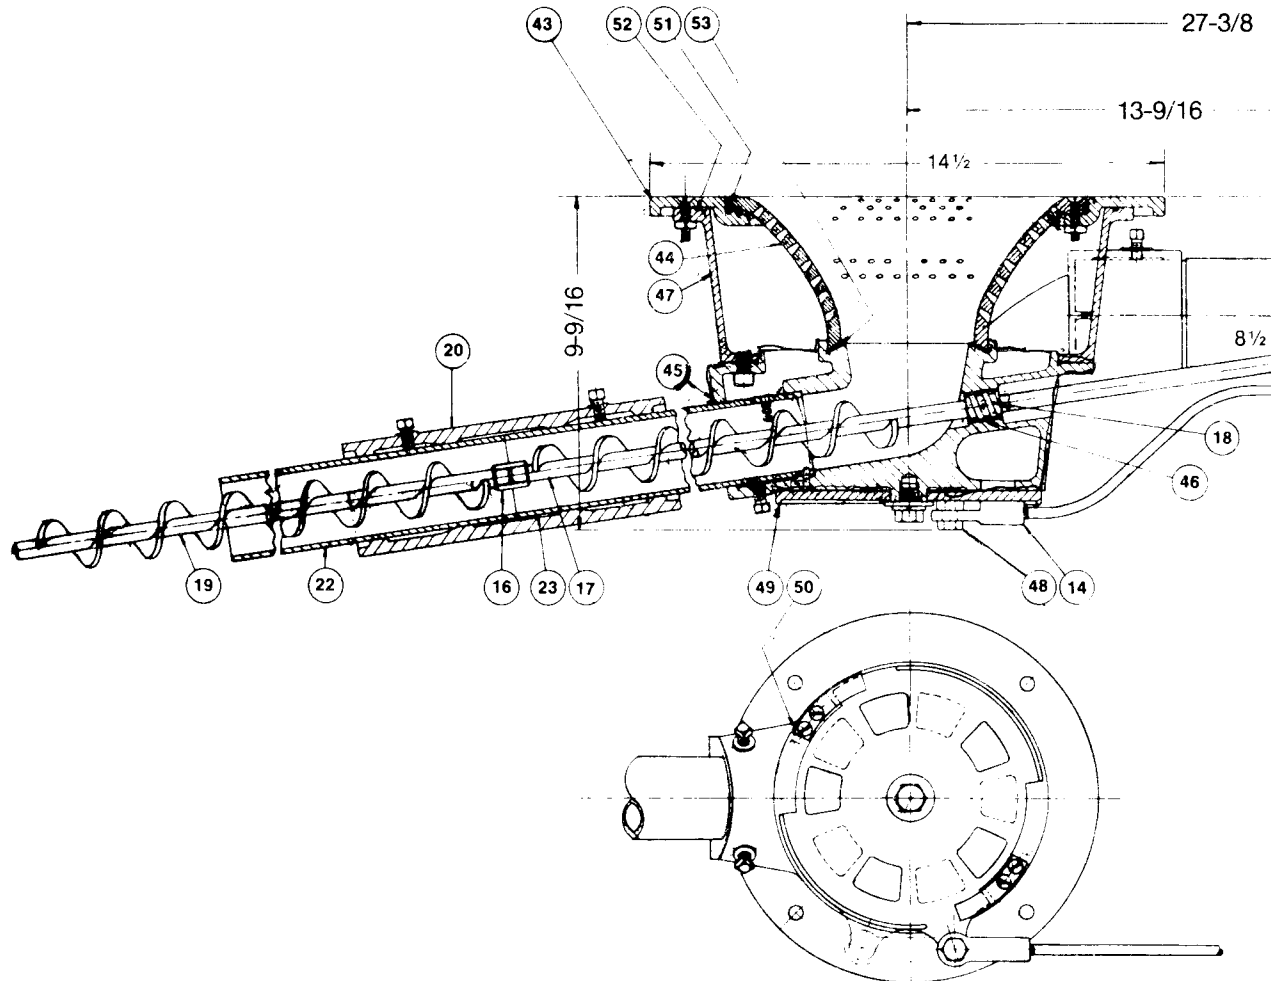

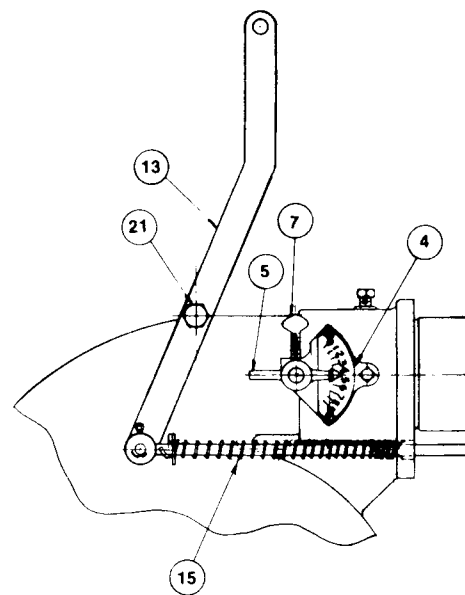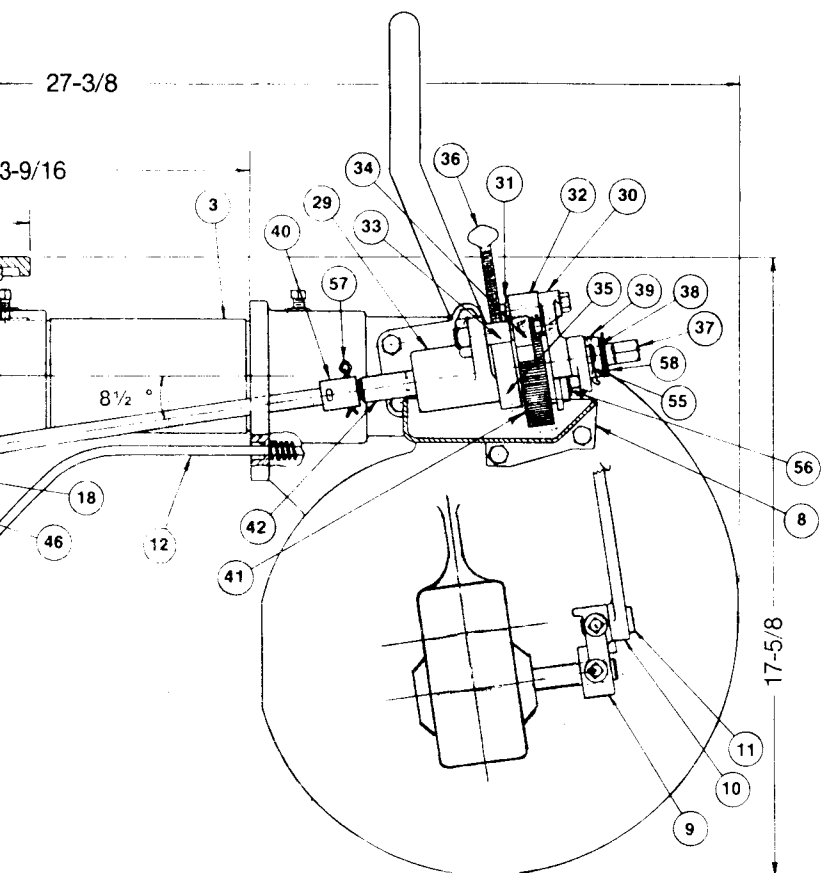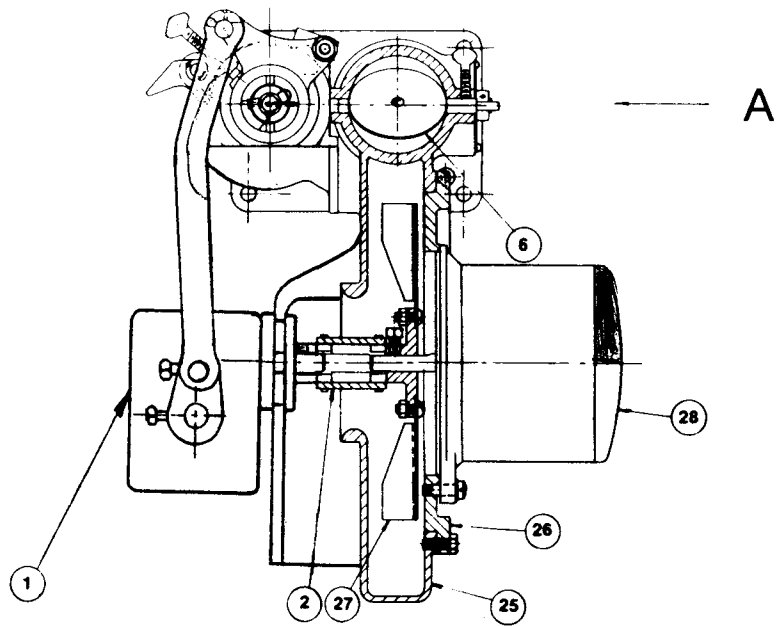

PARTIAL VIEW A