

ZIGEN

SW-41Plus MKIII (2020) 4 x 1 HDMI 2.0 Switch



Model: SW-41Plus MKIII
Device Type: AV Switching
Control System: Crestron® 3-Series



GENERAL INFORMATION	
SUMMARY:	Controls video routing and audio tone control for the Zigen SW-41Plus MKIII.
GENERAL NOTES:	<p>All inputs/outputs with names surrounded by square braces are optional, and do not need to have signals defined on them.</p> <p>A SIMPL module is provided that interface with Zigen. Under the hood this SIMPL module uses SIMPL# and the Zigen API over HTTP.</p> <p>Version 3.0.0</p>
CRESTRON® HARDWARE REQUIRED:	3-Series Processor.

Copyright © 2020–2020 Zigen Co., Ltd. All rights reserved. Version 3.0.0 No part of this document may be reproduced in any form or by any means without written permission from the product manufacturer. Changes are periodically made to the information in this document. They will be incorporated in subsequent editions. The product manufacturer may make improvements and /or changes in the product described in this document at any time. All the registered trademarks referred in this manual belong to their respective owners.

CONTROL		
[Video_Out]	A	Selects the video source to route to the output. <i>Valid values are 1d to 4d.</i>
[Poll]	D	Refreshes all outputs on this module with current values in the SW-41Plus (<i>this is done once automatically at startup</i>). Generally not needed if Crestron is the only system interfacing with the SW-41Plus.
[Local Audio]	D	Routes audio from the selected HDMI input to the RCA and SPDIF outputs on the SW-41Plus.
[Arc_Audio]	D	Routes audio back from the display connected to the HDMI output using HDMI ARC (Audio Return Channel). <i>High/1 (rising edge) = Select Local/Arc</i> <i>Low/0 = No effect</i>
[Volume]	A	Sets the volume of the RCA outputs (only). <i>Valid values are 0 to 65535d.</i>
[Volume_Up]	D	High/1 momentary = increment/decrement volume.
[Volume_Down]	D	High/1 held = continuously raise/lower volume.
[Mute]	D	Mutes the RCA outputs (only). <i>High/1 = Mute On; Low/0 = Mute Off</i>
[Mute_Toggle]	D	<i>High/1 (rising edge) = Mute Toggle/On/Off</i>
[Mute_On], [Mute_Off]	D	<i>Low/0 = No effect</i>
[Tune_Mode_*]	D	Selects EQ/Tone mode for RCA outputs (only). <i>High/1 (rising edge) = Select Tune_Mode</i> <i>Low/0 = No effect</i>
[Preset_*]	D	Tune_Mode_Presets must be selected for these inputs to have effect. <i>High/1 (rising edge) = Select Preset</i> <i>Low/0 = No effect</i>
[Band_*]	A	Tune_Mode_Equalizer must be selected for these inputs to have effect. Equalizer db is adjustable in .25db increments. <i>Valid values are -117d (-11.75db) to 120d (12db)</i>
[Bass]	A	Tune_Mode_Tone_Control must be selected for these inputs to have effect. Bass and treble db are adjustable in .25db increments. <i>Valid values are -117d (-11.75db) to 120d (12db)</i>
[Treble]		

CONTROL		
[Surround]	D	Enables the Surround Effect on the RCA outputs (only). <i>High/1 = Surround Fx On; Low/0 = Surround Fx Off</i>
[Surround_Toggle] [Surround_On], [Surround Off]	D D	<i>High/1 (rising edge) = Surround Toggle/On/Off</i> <i>Low/0 = No effect</i>
[Surround_Level]	A	Sets the Surround Effect level from narrow (0d) to wide (65535d)
[Bass_Enhancement]	D	Enables Bass Enhancement on the RCA outputs (only). <i>High/1 = Bass_Enhancement On</i> <i>Low/0 = Bass_Enhancement Off</i>
[Bass_Enhancement_Toggle] [Bass_Enhancement_On] [Bass_Enhancement Off]	D D D	<i>High/1 (rising edge) = Bass Toggle/On/Off</i> <i>Low/0 = No effect</i>
[Bass_Enhancement_Level]	A	Sets the Bass Enhancement <i>Valid values are 0 to 65535d</i>
[High_Pass] [High_Pass_Toggle] [High_Pass_On], [High_Pass_Off]	D D D	Enables High Pass filter. 1 = On / 0 = Off <i>High/1 (rising edge) = High_Pass Toggle/On/Off</i> <i>Low/0 = No effect</i>
[Bass_Cut_Freq*]	D	Sets the Low Pass/High Pass (if enabled) cutoff frequency: 80 Hz–225 Hz. <i>High/1 (rising edge) = Select frequency; Low/0 = No effect</i>

FEEDBACK		
[Video_Out_F]	A	Selected video source that is routed to the output. <i>Valid values are 1d to 4d.</i>
[Local Audio_F] [Arc_Audio_F]	D D	High/1 = Audio from the selected HDMI input has been routed to the RCA and SPDIF outputs. High/1 = Audio from the display connected to the HDMI output using HDMI ARC (Audio Return Channel) has been routed to the RCA and SPDIF outputs.
[Volume_F]	A	Volume level of the RCA outputs. <i>Values are 0 to 65535d.</i>
[Mute_F]	D	<i>High/1 = Mute On</i> <i>Low/0 = Mute Off</i>
[Tune_Mode_*_F]	D	<i>High/1 = Selected tune mode is active.</i>

FEEDBACK		
[Preset_*_F]	D	High/1 = Selected Preset is active.
[Band_*]	A	Current setting of the corresponding Eq Band. Values are -117d (-11.75db) to 120d (12db)
[Band*\$]		Current setting of the corresponding Eq Band (“-11.75” to “12”).
[Bass_F] [Treble_F]	A	Current setting of Bass or Treble. Valid values are -117d (-11.75db) to 120d (12db)
[Surround_F]	D	High/1 = Surround Fx On; Low/0 = Surround Fx Off
[Surround_Level_F]	A	Current Surround Effect level from narrow (0d) to wide (65535d)
[Bass_Enhancement_F]	D	High/1 = Bass Enhancement On Low/0 = Bass Enhancement Off
[Bass_Enhancement_Level]	A	Current Bass Enhancement level Valid values are 0 to 65535d
[High_Pass_F]	D	High/1 = High Pass filter on Low/0 = High Pass filter off
[Bass_Cut_Freq*_F]	D	Selected cutoff frequency: 80 Hz–225 Hz.

PARAMETER		
Host_Name		IP Address or DNS Host Name of the SW-41Plus. Format: http://hostname[:port]/