

#### General Usage:

- ▶ Start / Cycle Options
  - ◀ Stop / Cycle Options
- 

#### Hold/Heat Mode:

- ▶ Settings
  - ▲ & ▶ Start Ramp
  - ▲ & ▬ Tune PID Params  
(within 1°C of Setpoint:  
▲ & + Start Auto-Tune)
- 

#### While Ramping:

- ◀ Stop & Hold
  - + / ▬ Show Info Screens
- 


#### In Settings Screens:

- + Increase
- ▲ & + Increase fast
- ▬ Decrease
- ▲ & ▬ Decrease fast


Firmware  $T_{\min}$ :

$T_{\max}$ :


# Linear

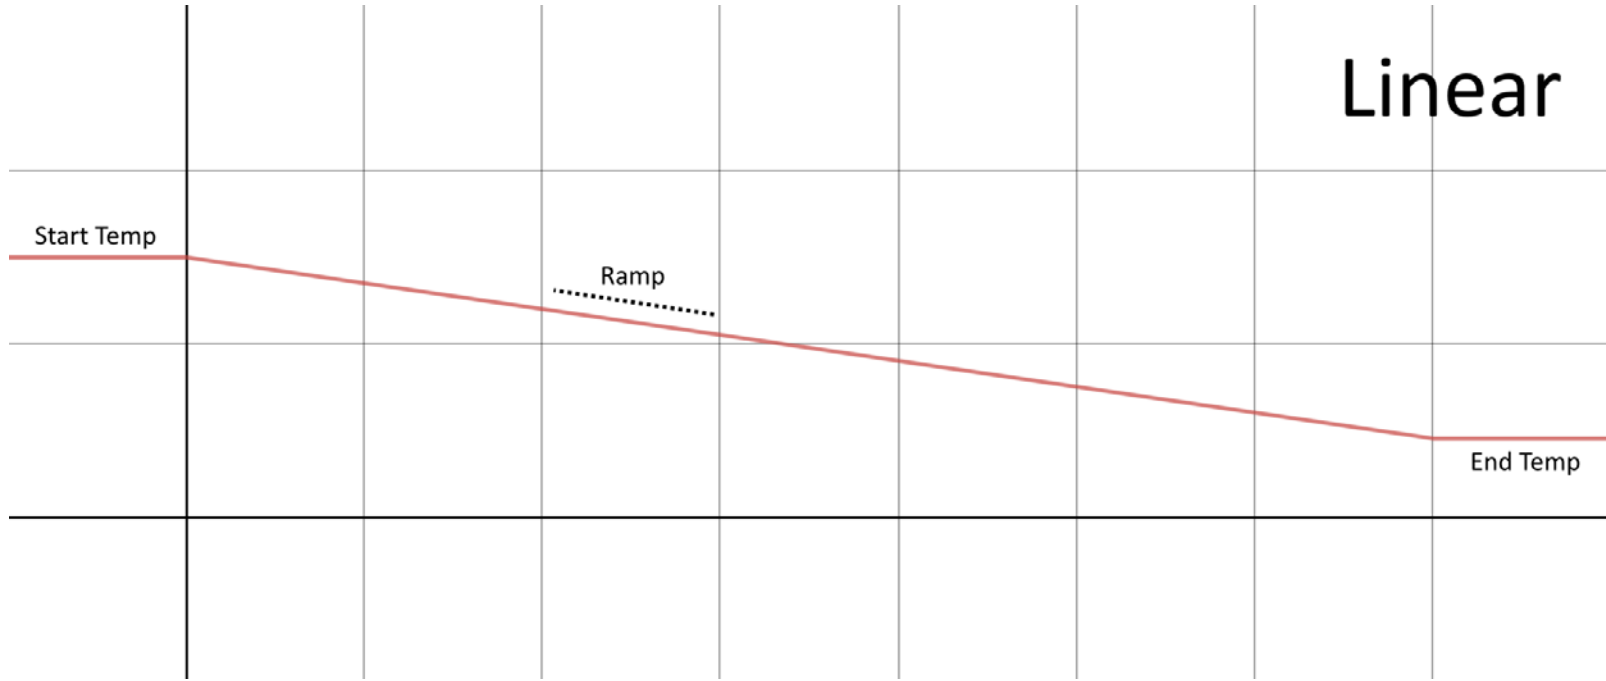

# Steps

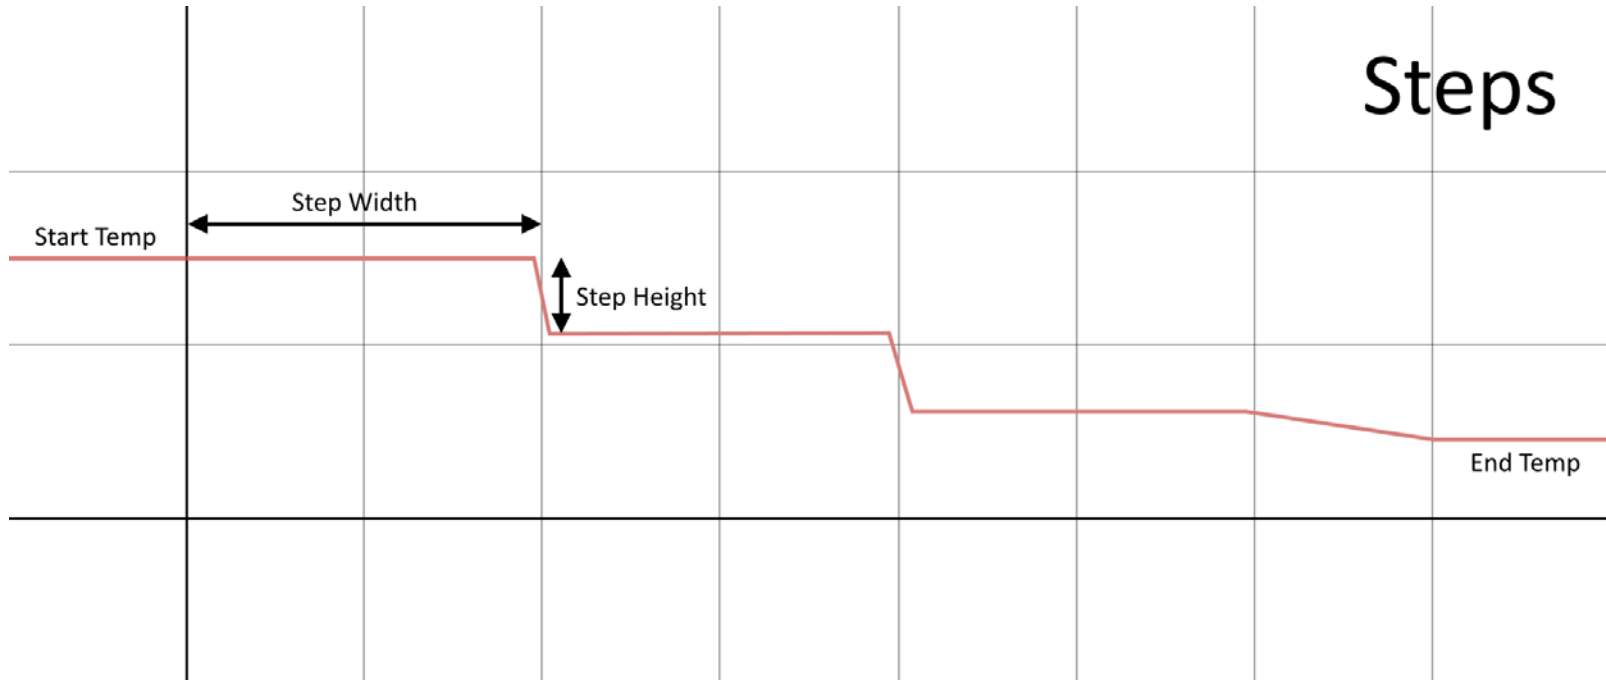

# Oscillate

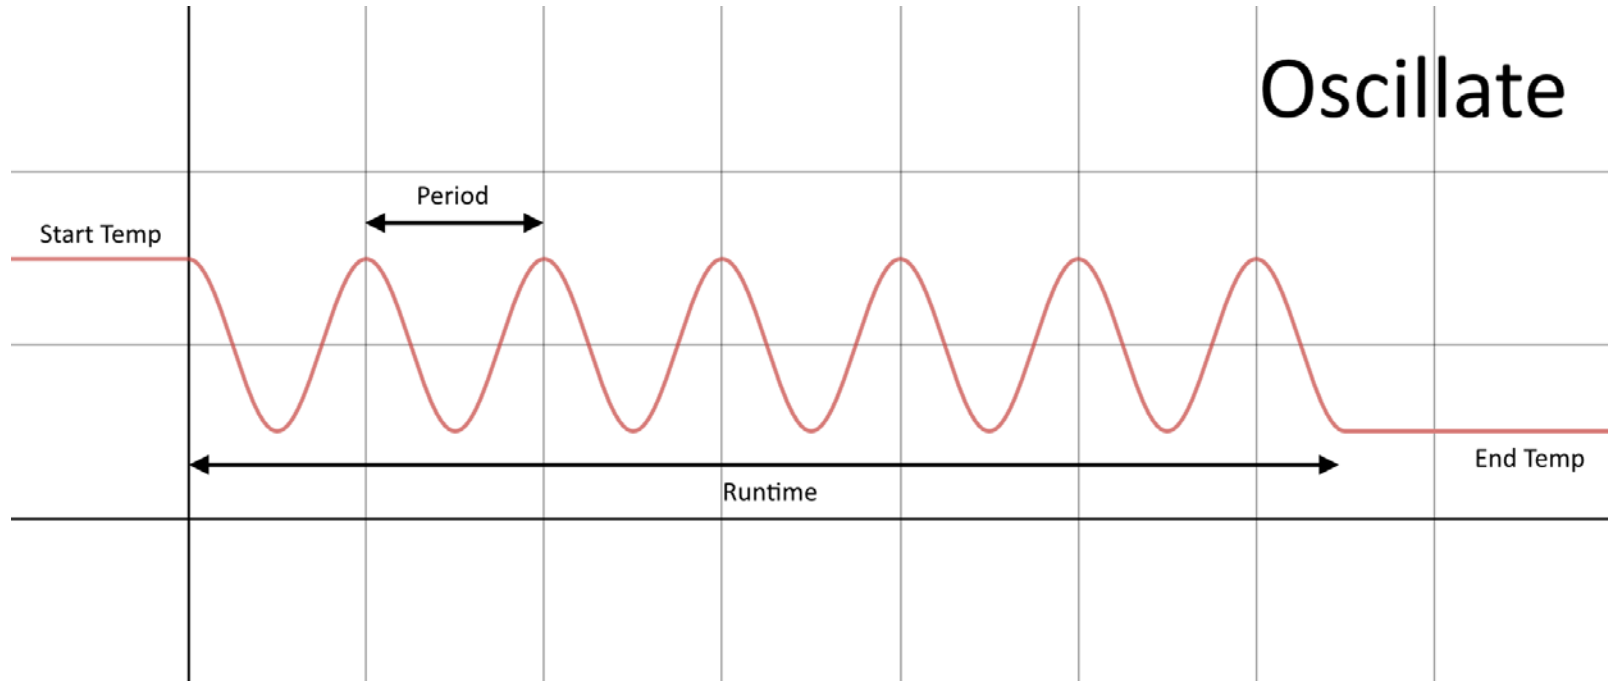

# Sawtooth

