

# Gateway Tutorial V1

**Step 1:** Connect gateway to power outlet, the **red LED** will constantly shine if the gateway has power.

- **IMPORTANT:** The gateway is sending an activation command to the tags when powered, which will turn the tags on. **Only power the gateway if you want to start the tags.**
  - Tags will be activated within 15 minutes after plugging in the gateway. Make sure the tags are relatively close to the gateway.

**Step 2:** If the **red LED** inside the gateway starts **blinking red** after some seconds an error happened, the gateway is not running correctly (e.g., no SDHC memory card inside the gateway or memory is full or hardware is broken)

- Check if the **red LED** is **not blinking (double check from time to time)**

**Step 3:** The gateway has a strong **white LED** that blinks if data is received from the tags or data is uploaded from the SDHC memory card to the Internet (via WiFi).

- **IMPORTANT:** Never disconnect the gateway if the white LED is blinking, otherwise data will be lost
- **IMPORTANT:** After data transmission the gateway needs 10 seconds to finally store the data (**white LED** is not blinking during that time). Before disconnecting the gateway: please wait at least 15 seconds after the **white LED** stopped blinking, otherwise data will be lost.

**Check if gateway is alive:**

- The **white LED** should blink from time to time when receiving data or uploading data
- The **red LED** should be constantly on
- The **red LED** should never blink