


Advance it to the next one
scale with a cotton swab

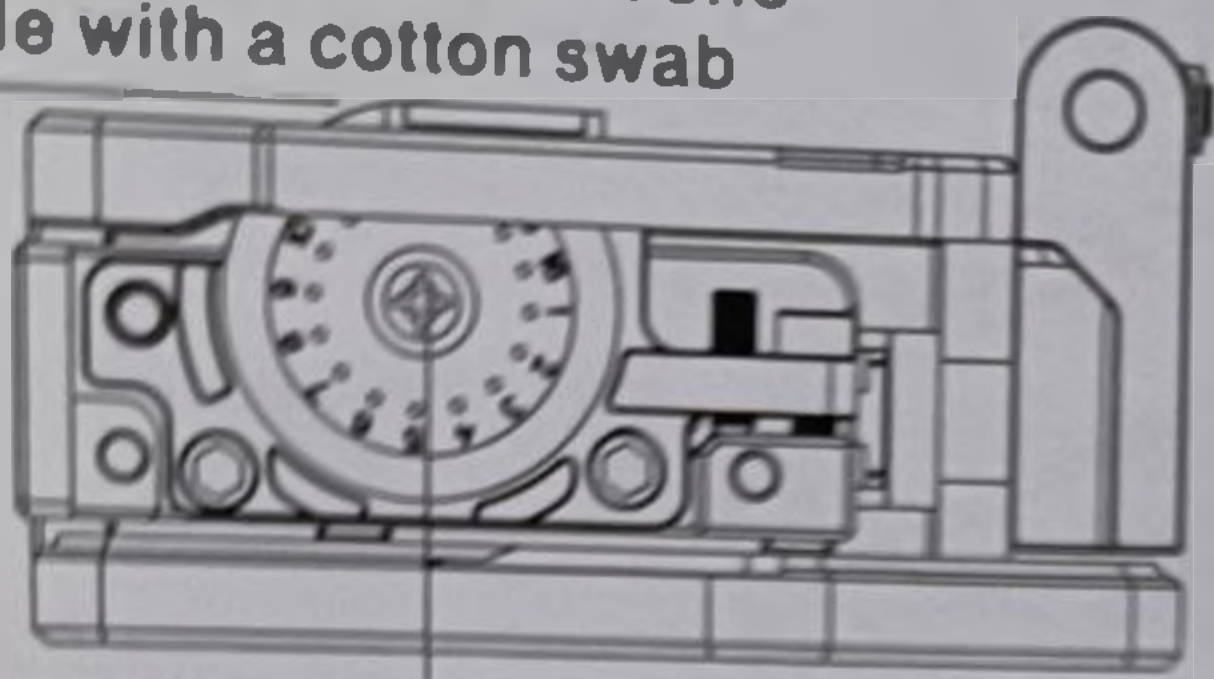


With a slotted screwdriver



Waste fiber
box(Matching)

4. Height regulation of blade cutting edge and method to replace a blade

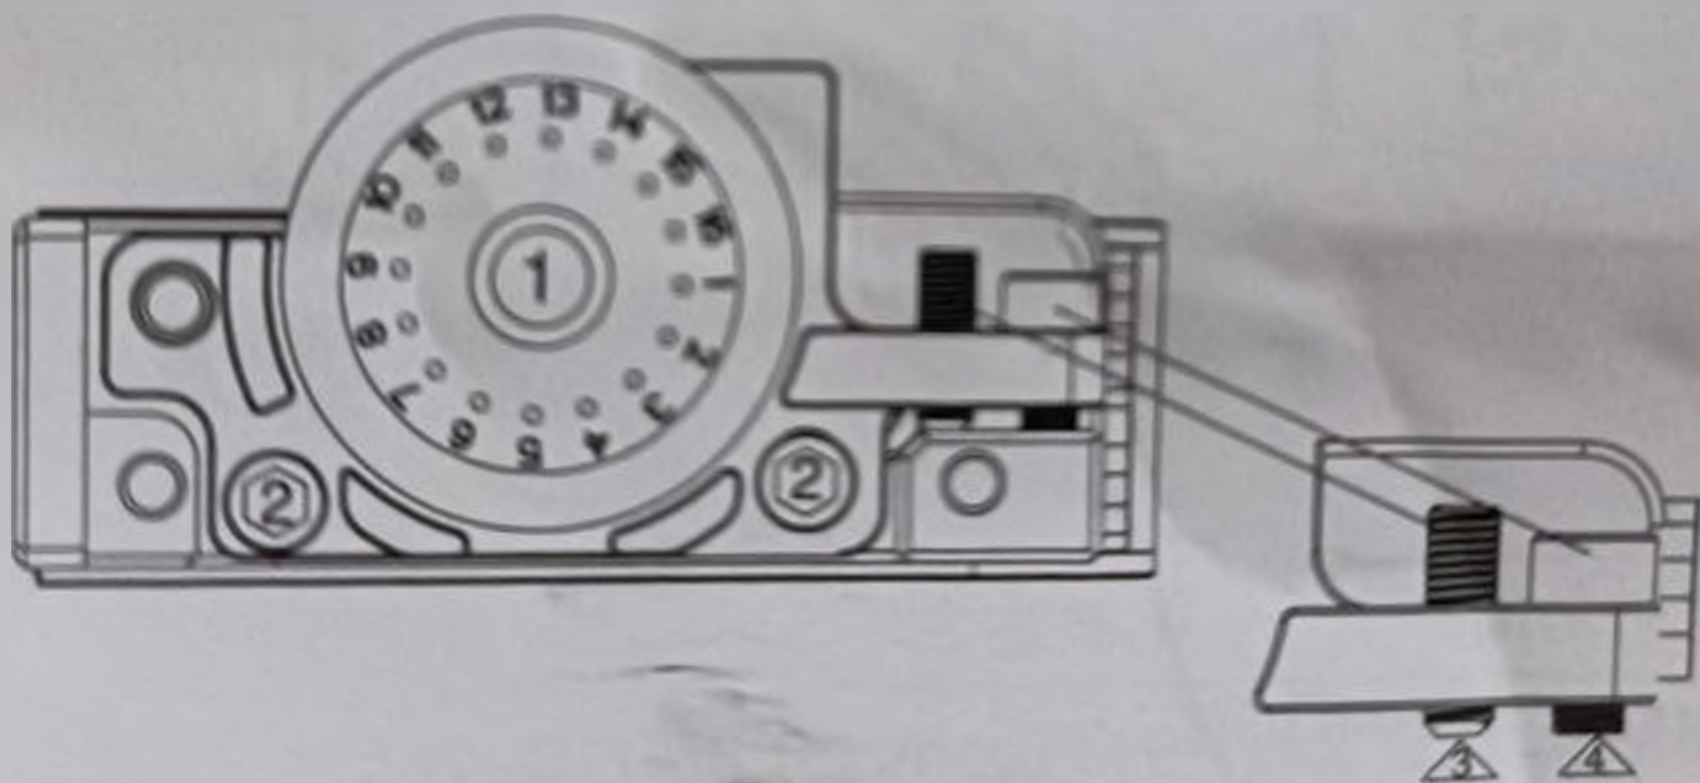

- Adjust the blade height, first loosen 2 and 3 anticlockwise, Turn a scale of 4 clockwise and tighten 2 and 3 after adjustment.
- Adjust the bottom of the blade and loosen a scale of 2 and 4 counterclockwise, Tighten 3 clockwise.
- Directly remove the waste fiber box and loosen 1 to replace the blade or blade.

In case of any mechanical failure or abnormal condition, please stop operating the optical fiber cleaver. Neither disassembly nor modification is allowed, please contact after-sales and manufacturer for repair in time.