

Masstran Analysis Interface Module (AIM) Manual

Marshall Galbraith
MIT ACDL

September 17, 2021

0.1 Introduction	1
0.1.1 Masstran AIM Overview	1
0.1.2 Examples	2
0.2 Masstran AIM attributes	2
0.3 AIM Units	2
0.3.1 JSON String Dictionary	2
0.4 AIM Inputs	3
0.5 AIM Outputs	3
0.6 FEA Material	4
0.6.1 JSON String Dictionary	4
0.6.2 Single Value String	5
0.7 FEA Property	5
0.7.1 JSON String Dictionary	5
0.7.2 Single Value String	7
0.8 FEA Constraint	8
0.8.1 JSON String Dictionary	8
0.8.2 Single Value String	8
0.9 FEA Support	8
0.9.1 JSON String Dictionary	8
0.9.2 Single Value String	9
0.10 FEA Connection	9
0.10.1 JSON String Dictionary	9
0.10.2 Single Value String	10
0.11 FEA Load	10
0.11.1 JSON String Dictionary	10
0.11.2 Single Value String	11
0.12 FEA Analysis	11
0.12.1 JSON String Dictionary	12
0.12.2 Single Value String	13
0.13 FEA DesignVariable	13
0.13.1 JSON String Dictionary	13
0.14 FEA DesignVariableRelation	13
0.14.1 JSON String Dictionary	13
0.15 FEA DesignConstraint	13
0.15.1 JSON String Dictionary	13
0.16 FEA DesignEquation	13
0.16.1 List of equation strings	14
0.17 FEA TableConstant	14
0.18 FEA DesignResponse	14
0.18.1 JSON String Dictionary	14
0.19 FEA DesignEquationResponse	14
0.19.1 JSON String Dictionary	14

0.20 FEA DesignOptParam	14
0.21 Masstran AIM Basic Example	14
0.21.1 Prerequisites	15
0.21.1.1 Script files	15
0.21.2 Creating Geometry using ESP	15
0.21.3 Performing analysis using pyCAPS	17
0.21.4 Executing pyCAPS script	18

0.1 Introduction

0.1.1 Masstran AIM Overview

A module in the Computational Aircraft Prototype Syntheses (CAPS) has been developed to compute mass properties using attributions for finite element structural solvers.

An outline of the AIM's inputs, outputs and attributes are provided in [AIM Inputs](#) and [AIM Outputs](#) and [Masstran AIM attributes](#), respectively.

Details on the use of units are outlined in [AIM Units](#).

The mass properties are computed via the formulas:

$$\begin{aligned}
 m &= \sum_i m_i \\
 x_{cg} &= \frac{1}{m} \sum_i m_i x_i \\
 y_{cg} &= \frac{1}{m} \sum_i m_i y_i \\
 z_{cg} &= \frac{1}{m} \sum_i m_i z_i \\
 (I_{xx})_{cg} &= \sum_i m_i (y_i^2 + z_i^2) - m(y_{cg}^2 + z_{cg}^2) \\
 (I_{yy})_{cg} &= \sum_i m_i (x_i^2 + z_i^2) - m(x_{cg}^2 + z_{cg}^2) \\
 (I_{zz})_{cg} &= \sum_i m_i (x_i^2 + y_i^2) - m(x_{cg}^2 + y_{cg}^2) \\
 (I_{xy})_{cg} &= \sum_i m_i (x_i y_i) - m(x_{cg} y_{cg}) \\
 (I_{xz})_{cg} &= \sum_i m_i (x_i z_i) - m(x_{cg} z_{cg}) \\
 (I_{yz})_{cg} &= \sum_i m_i (y_i z_i) - m(y_{cg} z_{cg}),
 \end{aligned}$$

where i represents an element index in the mesh, and the mass m_i is computed from the density, thickness, and area of the element.

The moment of inertias are accessible individually, in vector form as

$$\vec{I} = [I_{xx} \quad I_{yy} \quad I_{zz} \quad I_{xy} \quad I_{xz} \quad I_{yz}],$$

as lower/upper triangular form

$$\vec{I}_{lower} = [I_{xx} \quad -I_{xy} \quad I_{yy} \quad -I_{xz} \quad -I_{yz} \quad I_{zz}],$$

$$\vec{I}_{upper} = [I_{xx} \quad -I_{xy} \quad -I_{xz} \quad I_{yy} \quad -I_{yz} \quad I_{zz}],$$

or in full tensor form as

$$\bar{\bar{I}} = \begin{bmatrix} I_{xx} & -I_{xy} & -I_{xz} \\ -I_{xy} & I_{yy} & -I_{yz} \\ -I_{xz} & -I_{yz} & I_{zz} \end{bmatrix}.$$

0.1.2 Examples

An example problem using the Masstran AIM may be found at [Masstran AIM Basic Example](#).

0.2 Masstran AIM attributes

The following list of attributes are required for the MYSTRAN AIM inside the geometry input.

- **capsAIM** This attribute is a CAPS requirement to indicate the analysis the geometry representation supports.
- **capsGroup** This is a name assigned to any geometric body. This body could be a solid, surface, face, wire, edge or node. Recall that a string in ESP starts with a \$. For example, attribute `capsGroup $Wing`.
- **capsIgnore** It is possible that there is a geometric body (or entity) that you do not want the Masstran AIM to pay attention to when creating a finite element model. The `capsIgnore` attribute allows a body (or entity) to be in the geometry and ignored by the AIM. For example, because of limitations in OpenCASCADE a situation where two edges are overlapping may occur; `capsIgnore` allows the user to only pay attention to one of the overlapping edges.

0.3 AIM Units

A unit system may be optionally specified during AIM instance initiation. If a unit system is provided, all AIM input values which have associated units must be specified as well. If no unit system is used, AIM inputs, which otherwise would require units, will be assumed unit consistent. A unit system may be specified via a JSON string dictionary for example: `unitSys = {"mass": "kg", "length": "m"}`

0.3.1 JSON String Dictionary

The key arguments of the dictionary are described in the following:

- **mass = "None"**
Mass units - e.g. "kilogram", "k", "slug", ...
- **length = "None"**
Length units - e.g. "meter", "m", "inch", "in", "mile", ...

0.4 AIM Inputs

The following list outlines the Masstran inputs along with their default value available through the AIM interface.

- **Tess_Params = [0.025, 0.001, 15.0]**
Body tessellation parameters used when creating a boundary element model. Tess_Params[0] and Tess_Params[1] get scaled by the bounding box of the body. (From the EGADS manual) A set of 3 parameters that drive the EDGE discretization and the FACE triangulation. The first is the maximum length of an EDGE segment or triangle side (in physical space). A zero is flag that allows for any length. The second is a curvature-based value that looks locally at the deviation between the centroid of the discrete object and the underlying geometry. Any deviation larger than the input value will cause the tessellation to be enhanced in those regions. The third is the maximum interior dihedral angle (in degrees) between triangle facets (or Edge segment tangents for a WIREBODY tessellation), note that a zero ignores this phase
- **Edge_Point_Min = 2**
Minimum number of points on an edge including end points to use when creating a surface mesh (min 2).
- **Edge_Point_Max = 50**
Maximum number of points on an edge including end points to use when creating a surface mesh (min 2).
- **Quad_Mesh = False**
Create a quadratic mesh on four edge faces when creating the boundary element model.
- **Property = NULL**
Property tuple used to input property information for the model, see [FEA Property](#) for additional details.
- **Material = NULL**
Material tuple used to input material information for the model, see [FEA Material](#) for additional details.
- **Surface_Mesh = NULL**
A Surface_Mesh link.

0.5 AIM Outputs

The following list outlines the Masstran outputs available through the AIM interface.

- **Area** = Total area of the mesh.
- **Mass** = Total mass of the model.
- **Centroid** = Centroid of the model.
- **CG** = Center of gravity of the model.
- **Ixx** = Moment of inertia
- **Iyy** = Moment of inertia
- **Izz** = Moment of inertia
- **Ixy** = Moment of inertia
- **Izy** = Moment of inertia
- **Iyz** = Moment of inertia
- **I_Vector** = Moment of inertia vector

$$\vec{I} = \begin{bmatrix} I_{xx} & I_{yy} & I_{zz} & I_{xy} & I_{xz} & I_{yz} \end{bmatrix}$$

- **I_Lower** = Moment of inertia lower triangular tensor

$$\vec{I}_{lower} = \begin{bmatrix} I_{xx} & -I_{xy} & I_{yy} & -I_{xz} & -I_{yz} & I_{zz} \end{bmatrix},$$

- **I_Upper** = Moment of inertia upper triangular tensor

$$\vec{I}_{upper} = \begin{bmatrix} I_{xx} & -I_{xy} & -I_{xz} & I_{yy} & -I_{yz} & I_{zz} \end{bmatrix},$$

- **I_Tensor** = Moment of inertia tensor

$$\vec{I} = \begin{bmatrix} I_{xx} & -I_{xy} & -I_{xz} \\ -I_{xy} & I_{yy} & -I_{yz} \\ -I_{xz} & -I_{yz} & I_{zz} \end{bmatrix}$$

0.6 FEA Material

Structure for the material tuple = ("Material Name", "Value"). "Material Name" defines the reference name for the material being specified. The "Value" can either be a JSON String dictionary (see Section [JSON String Dictionary](#)) or a single string keyword (see Section [Single Value String](#)).

0.6.1 JSON String Dictionary

If "Value" is JSON string dictionary (e.g. "Value" = {"density": 7850, "youngModulus": 120000.0, "poissonRatio": 0.5, "materialType": "isotropic"}) the following keywords (= default values) may be used:

- **materialType = "Isotropic"**
Material property type. Options: Isotropic, Anisothotropic, Orthotropic, or Anisotropic.
- **youngModulus = 0.0**
Also known as the elastic modulus, defines the relationship between stress and strain. Default if 'shearModulus' and 'poissonRatio' != 0, youngModulus = 2*(1+poissonRatio)*shearModulus
- **shearModulus = 0.0**
Also known as the modulus of rigidity, is defined as the ratio of shear stress to the shear strain. Default if 'youngModulus' and 'poissonRatio' != 0, shearModulus = youngModulus/(2*(1+poissonRatio))
- **poissonRatio = 0.0**
The fraction of expansion divided by the fraction of compression. Default if 'youngModulus' and 'shearModulus' != 0, poissonRatio = (2*youngModulus/shearModulus) - 1
- **density = 0.0**
Density of the material.
- **thermalExpCoeff = 0.0**
Thermal expansion coefficient of the material.
- **thermalExpCoeffLateral = 0.0**
Thermal expansion coefficient of the material.

- **temperatureRef = 0.0**
Reference temperature for material properties.
- **dampingCoeff = 0.0**
Damping coefficient for the material.
- **youngModulusLateral = 0.0**
Elastic modulus in lateral direction for an orthotropic material
- **shearModulusTrans1Z = 0.0**
Transverse shear modulus in the 1-Z plane for an orthotropic material
- **shearModulusTrans2Z = 0.0**
Transverse shear modulus in the 2-Z plane for an orthotropic material

0.6.2 Single Value String

If "Value" is a string, the string value may correspond to an entry in a predefined material lookup table. NOT YET IMPLEMENTED!!!!

0.7 FEA Property

Structure for the property tuple = ("Property Name", "Value"). "Property Name" defines the reference `capsGroup` for the property being specified. The "Value" can either be a JSON String dictionary (see Section [JSON String Dictionary](#)) or a single string keyword (see Section [Single Value String](#)).

0.7.1 JSON String Dictionary

If "Value" is JSON string dictionary (e.g. "Value" = {"shearMembraneRatio": 0.83, "bendingInertiaRatio": 1.0, "membraneThickness": 0.2, "propertyType": "Shell"}) the following keywords (= default values) may be used:

- **propertyType = No Default value**
Type of property to apply to a given `capsGroup Name`. Options: ConcentratedMass, Rod, Bar, Shear, Shell, Composite, and Solid
- **material = "Material Name" (FEA Material)**
"Material Name" from [FEA Material](#) to use for property. If no material is set the first material created will be used
- **crossSecArea = 0.0**
Cross sectional area.
- **torsionalConst = 0.0**
Torsional constant.

- **torsionalStressReCoeff = 0.0**
Torsional stress recovery coefficient.
- **massPerArea = 0.0**
Non-structural mass per unit length.
- **zAxisInertia = 0.0**
Section moment of inertia about the element z-axis.
- **yAxisInertia = 0.0**
Section moment of inertia about the element y-axis.
- **yCoords[4] = [0.0, 0.0, 0.0, 0.0]**
Element y-coordinates, in the bar cross-section, of four points at which to recover stresses
- **zCoords[4] = [0.0, 0.0, 0.0, 0.0]**
Element z-coordinates, in the bar cross-section, of four points at which to recover stresses
- **areaShearFactors[2] = [0.0, 0.0]**
Area factors for shear.
- **crossProductInertia = 0.0**
Section cross-product of inertia.
- **crossSecType = NULL**
Cross-section type. Must be one of following character variables: BAR, BOX, BOX1, CHAN, CHAN1, CHAN2, CROSS, H, HAT, HEXA, I, I1, ROD, T, T1, T2, TUBE, or Z.
- **crossSecDimension = [0,0,0,...]**
Cross-sectional dimensions (length of array is dependent on the "crossSecType"). Max supported length array is 10!
- **membraneThickness = 0.0**
Membrane thickness.
- **bendingInertiaRatio = 1.0**
Ratio of actual bending moment inertia to the bending inertia of a solid plate of thickness "membraneThickness"
- **shearMembraneRatio = 5.0/6.0**
Ratio shear thickness to membrane thickness.
- **materialBending = "Material Name" (FEA Material)**
"Material Name" from [FEA Material](#) to use for property bending. If no material is given and "bendingInertiaRatio" is greater than 0, the material name provided in "material" is used.

- **materialShear = "Material Name" (FEA Material)**
 "Material Name" from [FEA Material](#) to use for property shear. If no material is given and "shearMembraneRatio" is greater than 0, the material name provided in "material" is used.
- **massPerArea = 0.0**
 Non-structural mass per unit area.
- **zOffsetRel = 0.0**
 Relative offset from the surface of grid points to the element reference plane as a percentage of the thickness.
 $zOffset = thickness * zOffsetRel / 100$
- **compositeMaterial = "no default"**
 List of "Material Name"s, ["Material Name -1", "Material Name -2", ...], from [FEA Material](#) to use for composites.
- **shearBondAllowable = 0.0**
 Allowable interlaminar shear stress.
- **symmetricLaminate = False**
 Symmetric lamination option. True- SYM only half the plies are specified, for odd number plies 1/2 thickness of center ply is specified with the first ply being the bottom ply in the stack, default (False) all plies specified.
- **compositeFailureTheory = "(no default)"**
 Composite failure theory. Options: "HILL", "HOFF", "TSAI", and "STRN"
- **compositeThickness = (no default)**
 List of composite thickness for each layer (e.g. [1.2, 4.0, 3.0]). If the length of this list doesn't match the length of the "compositeMaterial" list, the list is either truncated [>length("compositeMaterial")] or expanded [<length("compositeMaterial")] in which case the last thickness provided is repeated.
- **compositeOrientation = (no default)**
 List of composite orientations (angle relative element material axis) for each layer (eg. [5.0, 10.0, 30.0]). If the length of this list doesn't match the length of the "compositeMaterial" list, the list is either truncated [>length("compositeMaterial")] or expanded [<length("compositeMaterial")] in which case the last orientation provided is repeated.
- **mass = 0.0**
 Mass value.
- **massOffset = [0.0, 0.0, 0.0]**
 Offset distance from the grid point to the center of gravity for a concentrated mass.
- **massInertia = [0.0, 0.0, 0.0, 0.0, 0.0, 0.0]**
 Mass moment of inertia measured at the mass center of gravity.

0.7.2 Single Value String

If "Value" is a string, the string value may correspond to an entry in a predefined property lookup table. NOT YET IMPLEMENTED!!!!

0.8 FEA Constraint

Structure for the constraint tuple = ("Constraint Name", "Value"). "Constraint Name" defines the reference name for the constraint being specified. The "Value" can either be a JSON String dictionary (see Section [JSON String Dictionary](#)) or a single string keyword (see Section [Single Value String](#)).

0.8.1 JSON String Dictionary

If "Value" is JSON string dictionary (eg. "Value" = {"groupName": "plateEdge", "dofConstraint": 123456}) the following keywords (= default values) may be used:

- **constraintType = "ZeroDisplacement"**
Type of constraint. Options: "Displacement", "ZeroDisplacement".

|| NASTRAN || ASTROS || HSM || ABAQUS)

- **groupName = "(no default)"**
Single or list of `capsConstraint` names on which to apply the constraint (e.g. "Name1" or ["Name1", "↔ Name2", ...]. If not provided, the constraint tuple name will be used.
- **dofConstraint = 0**
Component numbers / degrees of freedom that will be constrained (123 - zero translation in all three directions).
- **gridDisplacement = 0.0**
Value of displacement for components defined in "dofConstraint".

0.8.2 Single Value String

If "Value" is a string, the string value may correspond to an entry in a predefined constraint lookup table. NOT YET IMPLEMENTED!!!!

0.9 FEA Support

Structure for the support tuple = ("Support Name", "Value"). "Support Name" defines the reference name for the support being specified. The "Value" can either be a JSON String dictionary (see Section [JSON String Dictionary](#)) or a single string keyword (see Section [Single Value String](#)).

0.9.1 JSON String Dictionary

If "Value" is JSON string dictionary (eg. "Value" = {"groupName": "plateEdge", "dofSupport": 123456}) the following keywords (= default values) may be used:

- **groupName = "(no default)"**
Single or list of `capsConstraint` names on which to apply the support (e.g. "Name1" or ["Name1", "↔ Name2", ...]. If not provided, the constraint tuple name will be used.
- **dofSupport = 0**
Component numbers / degrees of freedom that will be supported (123 - zero translation in all three directions).

0.9.2 Single Value String

If "Value" is a string, the string value may correspond to an entry in a predefined support lookup table. NOT YET IMPLEMENTED!!!!

0.10 FEA Connection

Structure for the connection tuple = ("Connection Name", "Value"). "Connection Name" defines the reference name to the capsConnect being specified and denotes the "source" node for the connection. The "Value" can either be a JSON String dictionary (see Section [JSON String Dictionary](#)) or a single string keyword (see Section [Single Value String](#)).

0.10.1 JSON String Dictionary

If "Value" is JSON string dictionary (e.g. "Value" = {"dofDependent": 1, "propertyType": "RigidBody"}) the following keywords (= default values) may be used:

- **connectionType = RigidBody**
Type of connection to apply to a given capsConnect pair defined by "Connection Name" and the "groupName".
Options: Mass (scalar), Spring (scalar), Damper (scalar), RigidBody.
- **dofDependent = 0**
Component numbers / degrees of freedom of the dependent end of rigid body connections (ex. 123 - translation in all three directions).
- **componentNumberStart = 0**
Component numbers / degrees of freedom of the starting point of the connection for mass, spring, and damper elements (scalar) (0 <= Integer <= 6).
- **componentNumberEnd= 0**
Component numbers / degrees of freedom of the ending point of the connection for mass, spring, and damper elements (scalar), rigid body interpolative connection (0 <= Integer <= 6).
- **stiffnessConst = 0.0**
Stiffness constant of a spring element (scalar).
- **dampingConst = 0.0**
Damping coefficient/constant of a spring or damping element (scalar).
- **stressCoeff = 0.0**
Stress coefficient of a spring element (scalar).
- **mass = 0.0**
Mass of a mass element (scalar).
- **glue = False**
Turn on gluing for the connection.

- **glueNumMaster = 5**
Maximum number of the masters for a glue connections.
- **glueSearchRadius = 0**
Search radius when looking for masters for a glue connections.
- **weighting = 1**
Weighting factor for a rigid body interpolative connections.
- **groupName = "(no default)"**
Single or list of `capsConnect` names on which to connect the nodes found with the tuple name (" \leftrightarrow Connection Name") to. (e.g. "Name1" or ["Name1","Name2",...]).

0.10.2 Single Value String

If "Value" is a string, the string value may correspond to an entry in a predefined connection lookup table. NOT YET IMPLEMENTED!!!!

0.11 FEA Load

Structure for the load tuple = ("Load Name", "Value"). "Load Name" defines the reference name for the load being specified. The "Value" can either be a JSON String dictionary (see Section [JSON String Dictionary](#)) or a single string keyword (see Section [Single Value String](#)).

0.11.1 JSON String Dictionary

If "Value" is JSON string dictionary (e.g. "Value" = {"groupName": "plate", "loadType": "Pressure", "pressureForce": 2000000.0}) the following keywords (= default values) may be used:

- **loadType = "(no default)"**
Type of load. Options: "GridForce", "GridMoment", "Rotational", "Thermal", "Pressure", "PressureDistribute", "PressureExternal", "Gravity".
- **groupName = "(no default)"**
Single or list of `capsLoad` names on which to apply the load (e.g. "Name1" or ["Name1","Name2",...]). If not provided, the load tuple name will be used.
- **loadScaleFactor = 1.0**
Scale factor to use when combining loads.
- **forceScaleFactor = 0.0**
Overall scale factor for the force for a "GridForce" load.
- **directionVector = [0.0, 0.0, 0.0]**
X-, y-, and z- components of the force vector for a "GridForce", "GridMoment", or "Gravity" load.

- **momentScaleFactor = 0.0**
Overall scale factor for the moment for a "GridMoment" load.
- **gravityAcceleration = 0.0**
Acceleration value for a "Gravity" load.
- **pressureForce = 0.0**
Uniform pressure force for a "Pressure" load (only applicable to 2D elements).
- **pressureDistributeForce = [0.0, 0.0, 0.0, 0.0]**
Distributed pressure force for a "PressureDistribute" load (only applicable to 2D elements). The four values correspond to the 4 (quadrilateral elements) or 3 (triangle elements) node locations.
- **angularVelScaleFactor = 0.0**
An overall scale factor for the angular velocity in revolutions per unit time for a "Rotational" load.
- **angularAccScaleFactor = 0.0**
An overall scale factor for the angular acceleration in revolutions per unit time squared for a "Rotational" load.
- **coordinateSystem = "(no default)"**
Name of coordinate system in which defined force components are in reference to. If no value is provided the global system is assumed.
- **temperature = 0.0**
Temperature at a given node for a "Temperature" load.
- **temperatureDefault = 0.0**
Default temperature at a node not explicitly being used for a "Temperature" load.

0.11.2 Single Value String

If "Value" is a string, the string value may correspond to an entry in a predefined load lookup table. NOT YET IMPLEMENTED!!!!

0.12 FEA Analysis

Structure for the analysis tuple = ('Analysis Name', 'Value'). 'Analysis Name' defines the reference name for the analysis being specified. The "Value" can either be a JSON String dictionary (see Section [JSON String Dictionary](#)) or a single string keyword (see Section [Single Value String](#)).

0.12.1 JSON String Dictionary

If "Value" is JSON string dictionary (e.g. "Value" = {"numDesiredEigenvalue": 10, "eigenNormalization": "MASS", "numEstEigenvalue": 1, "extractionMethod": "GIV", "frequencyRange": [0, 10000]}) the following keywords (= default values) may be used:

- **analysisType = "Modal"**
Type of load. Options: "Modal", "Static".
- **analysisLoad = "(no default)"**
Single or list of "Load Name"s defined in [FEA Load](#) in which to use for the analysis (e.g. "Name1" or ["↔ Name1", "Name2", ...]).
- **analysisConstraint = "(no default)"**
Single or list of "Constraint Name"s defined in [FEA Constraint](#) in which to use for the analysis (e.g. "Name1" or ["Name1", "Name2", ...]).
- **analysisSupport = "(no default)"**
Single or list of "Support Name"s defined in [FEA Support](#) in which to use for the analysis (e.g. "Name1" or ["Name1", "Name2", ...]).
- **extractionMethod = "(no default)"**
Extraction method for modal analysis.
- **frequencyRange = [0.0, 0.0]**
Frequency range of interest for modal analysis.
- **numEstEigenvalue = 0**
Number of estimated eigenvalues for modal analysis.
- **numDesiredEigenvalue = 0**
Number of desired eigenvalues for modal analysis.
- **eigenNormalization = "(no default)"**
Method of eigenvector renormalization. Options: "POINT", "MAX", "MASS"
- **gridNormalization = 0**
Grid point to be used in normalizing eigenvector to 1.0 when using eigenNormalization = "POINT"
- **componentNormalization = 0**
Degree of freedom about "gridNormalization" to be used in normalizing eigenvector to 1.0 when using eigen↔ Normalization = "POINT"
- **lanczosMode = 2**
Mode refers to the Lanczos mode type to be used in the solution. In mode 3 the mass matrix, Maa, must be nonsingular whereas in mode 2 the matrix $K_{aa} - \sigma * M_{aa}$ must be nonsingular
- **lanczosType = "(no default)"**
Lanczos matrix type. Options: DPB, DGB.
- **aeroSymmetryXY = "(no default)"**
Aerodynamic symmetry about the XY Plane. Options: SYM, ANTISYM, ASYM. SYMMETRIC Indicates that a half span aerodynamic model is moving in a symmetric manner with respect to the XY plane. ANTISYMMETRIC Indicates that a half span aerodynamic model is moving in an antisymmetric manner with respect to the XY plane. ASYMMETRIC Indicates that a full aerodynamic model is provided.
- **aeroSymmetryXZ = "(no default)"**
Aerodynamic symmetry about the XZ Plane. Options: SYM, ANTISYM, ASYM. SYMMETRIC Indicates that a half span aerodynamic model is moving in a symmetric manner with respect to the XZ plane. ANTISYMMETRIC Indicates that a half span aerodynamic model is moving in an antisymmetric manner with respect to the XZ plane. ASYMMETRIC Indicates that a full aerodynamic model is provided.

0.12.2 Single Value String

If "Value" is a string, the string value may correspond to an entry in a predefined analysis lookup table. NOT YET IMPLEMENTED!!!!

0.13 FEA DesignVariable

Structure for the design variable tuple = ("DesignVariable Name", "Value"). "DesignVariable Name" defines the reference name for the design variable being specified. This string will be used in the FEA input directly. The "Value" must be a JSON String dictionary (see Section [JSON String Dictionary](#)).

0.13.1 JSON String Dictionary

If "Value" is JSON string dictionary the following keywords (= default values) may be used:

0.14 FEA DesignVariableRelation

Structure for the design variable tuple = ("DesignVariableRelation Name", "Value"). "DesignVariableRelation Name" defines the reference name for the design variable being specified. This string will be used in the FEA input directly. The "Value" must be a JSON String dictionary (see Section [JSON String Dictionary](#)).

0.14.1 JSON String Dictionary

If "Value" is JSON string dictionary the following keywords (= default values) may be used:

0.15 FEA DesignConstraint

Structure for the design constraint tuple = ("DesignConstraint Name", "Value"). "DesignConstraint Name" defines the reference name for the design constraint being specified. The "Value" must be a JSON String dictionary (see Section [JSON String Dictionary](#)).

0.15.1 JSON String Dictionary

If "Value" is JSON string dictionary the following keywords (= default values) may be used:

0.16 FEA DesignEquation

Structure for the design equation tuple = ("DesignEquation Name", ["Value1", ... , "ValueN"]). "DesignEquation Name" defines the reference name for the design equation being specified. This string will be used in the FEA input directly. The values "Value1", ... , "ValueN" are a list of strings containing the equation definitions. (see Section [List of equation strings](#)).

0.16.1 List of equation strings

Each design equation tuple value is a list of strings containing the equation definitions

0.17 FEA TableConstant

Structure for the table constant tuple = ("TableConstant Name", "Value"). "TableConstant Name" defines the reference name for the table constant being specified. This string will be used in the FEA input directly. The "Value" is the value of the table constant.

0.18 FEA DesignResponse

Structure for the design response tuple = ("DesignResponse Name", "Value"). "DesignResponse Name" defines the reference name for the design response being specified. This string will be used in the FEA input directly. The "Value" must be a JSON String dictionary (see Section [JSON String Dictionary](#)).

0.18.1 JSON String Dictionary

If "Value" is JSON string dictionary the following keywords (= default values) may be used:

0.19 FEA DesignEquationResponse

Structure for the design equation response tuple = ("DesignEquationResponse Name", "Value"). "DesignEquationResponse Name" defines the reference name for the design equation response being specified. This string will be used in the FEA input directly. The "Value" must be a JSON String dictionary (see Section [JSON String Dictionary](#)).

0.19.1 JSON String Dictionary

If "Value" is JSON string dictionary the following keywords (= default values) may be used:

0.20 FEA DesignOptParam

Structure for the design optimization parameter tuple = ("DesignOptParam Name", "Value"). "DesignOptParam Name" defines the reference name for the design optimization parameter being specified. This string will be used in the FEA input directly. The "Value" is the value of the design optimization parameter.

0.21 Masstran AIM Basic Example

This is a walkthrough for using Masstran AIM to analyze a three-dimensional wing with internal ribs and spars.

0.21.1 Prerequisites

It is presumed that ESP and CAPS have been already installed, as well as Masstran.

0.21.1.1 Script files

Two scripts are used for this illustration:

1. feaWingBEM.csm: Creates geometry, as described in the next section ([Creating Geometry using ESP](#)).
2. masstran_PyTest.py: pyCAPS script for performing analysis, as described in [Performing analysis using pyCAPS](#)

0.21.2 Creating Geometry using ESP

The CSM script generates Bodies which are designed to be used by specific AIMs. The AIMs that the Body is designed for is communicated to the CAPS framework via the "capsAIM" string attribute. This is a semicolon-separated string with the list of AIM names. Thus, the CSM author can give a clear indication to which AIMs should use the Body. In this example, the list contains the structural finite element analysis tools that can analyze the body:

```
attribute capsAIM $nastranAIM;astrosAIM;mystranAIM;masstranAIM;egadsTessAIM
```

A typical geometry model can be created and interactively modified using design parameters. These design parameters are either design- or geometry- based. In this example, a wing configuration is created using following design parameters.

```
# Design Parameters for OML
despmtr thick 0.12 frac of local chord
despmtr camber 0.04 frac of local chord
despmtr area 10.0
despmtr aspect 6.00
despmtr taper 0.60
despmtr sweep 20.0 deg (of c/4)
despmtr washout 5.00 deg (down at tip)
despmtr dihedral 4.00 deg
# Design Parameters for BEM
cfgpmtr nrrib 11 number of ribs
despmtr spar1 0.20 frac of local chord
despmtr spar2 0.75 frac of local chord
```

After our design parameters are defined they are used to setup other local variables (analytically) for the outer model line (OML).

```
# OML
set span sqrt(aspect*area)
set croot 2*area/span/(1+taper)
set ctip croot*taper
set dxtip (croot-ctip)/4+span/2*tand(sweep)
set dytip span/2*tand(dihedral)
```

In a similar manner, local variables are defined for the ribs and spars.

```
# wing ribs
set Nrib nint(nrrib)
# wing spars
set eps 0.01*span
```

Once all design and local variables are defined, a full span, solid model is created by "ruling" together NACA series airfoils (following a series of scales, rotations, and translations).

```
mark
# Right tip
udprim naca Thickness thick Camber camber
scale ctip
rotate washout ctip/4 0
translate dxtip dytip -span/2
# root
udprim naca Thickness thick Camber camber
scale croot
# left tip
udprim naca Thickness thick Camber camber
```

```

scale      ctip
rotatez    washout    ctip/4    0
translate  dxtip      dytip      +span/2
rule
attribute  OML 1

```

Once complete, the wing is stored for later use under the name OML.

```
store      OML
```

Next, the inner layout of the ribs and spars are created using the waffle udprim.

```

udprim      waffle      Depth      +6*thick*croot      Filename «
  patbeg    i Nrib
    point A  at (span/2)*(2*i-Nrib-1)/Nrib    -0.01*croot
    point B  at (span/2)*(2*i-Nrib-1)/Nrib    max(croot,dxtip+ctip)
    line AB  A B      tagComponent=rib tagIndex=!(val2str(i,0))
  patend
  point A   at -span/2-eps    spar1*ctip+dxtip
  point B   at 0              spar1*croot
  line AB   A B      tagComponent=spar tagIndex=1 tagPosition=left
  point A   at span/2+eps     spar1*ctip+dxtip
  point B   at 0              spar1*croot
  line AB   A B      tagComponent=spar tagIndex=1 tagPosition=right
  point A   at -span/2-eps     spar2*ctip+dxtip
  point B   at 0              spar2*croot
  line AB   A B      tagComponent=spar tagIndex=2 tagPosition=left
  point A   at span/2+eps     spar2*ctip+dxtip
  point B   at 0              spar2*croot
  line AB   A B      tagComponent=spar tagIndex=2 tagPosition=right
»

```

An attribute is then placed on ribs and spars so that the geometry components may be reference by the Masstran AIM.

```
attribute  capsGroup $Ribs_and_Spars
```

Following a series of rotations and translations the ribs and spars are stored for later use.

```

translate 0      0      -3*thick*croot
rotatez   90      0      0
rotatez  -90      0      0
store     layoutRibSpar

```

Next, the layout of the ribs and spars are intersected the outer mold line of wing, which results in only keeping the part of layout that is inside the OML.

```

restore    layoutRibSpar
restore    OML
intersect

```

Finally, select faces (airfoil sections at the root) are tagged, so that a constraint may be applied later.

```

udprim editAttr filename «
  edge adj2face tagComponent=spar tagPosition=right
  and  adj2face tagComponent=spar tagPosition=left
  set   capsConstraint=Rib_Constraint
  node adj2face tagComponent=spar tagPosition=right
  and  adj2face tagComponent=spar tagPosition=left
  set   capsConstraint=Rib_Constraint
»
ifthen nint(mod(Nrib,2)) ne 0
  set      midRib Nrib/2
  select    face      $tagComponent $rib $tagIndex val2str(midRib,0)
  attribute tagPosition $root

  udprim editAttr filename «
    face  has tagComponent=rib tagPosition=root
    set    capsConstraint=Rib_Constraint

    edge  adj2face tagComponent=rib tagPosition=root
    set    capsConstraint=Rib_Constraint

    node  adj2face tagComponent=rib tagPosition=root
    set    capsConstraint=Rib_Constraint
  »
endif

```

The above *.csm file results in the follow geometry model:

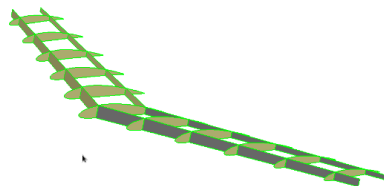


Figure 1 Wing built up element model

0.21.3 Performing analysis using pyCAPS

The first step in the pyCAPS script is to import the required modules. For this example the following modules are used,

```
import pyCAPS
import os
import argparse
```

Once the required modules have been loaded, a pyCAPS.Problem can be instantiated with the desired geometry file.

```
geometryScript = os.path.join("../", "csmData", "feaWingBEM.csm")
myProblem = pyCAPS.Problem(problemName=workDir,
                           capsFile=geometryScript,
                           outLevel=args.outLevel)
```

After the geometry is loaded, a structural mesh is generated using the egadsTessAIM.

```
# Load egadsTess aim
myProblem.analysis.create( aim = "egadsTessAIM",
                           name = "tess" )

# All triangles in the grid
myProblem.analysis["tess"].input.Mesh_Elements = "Quad"
# Set global tessellation parameters
myProblem.analysis["tess"].input.Tess_Params = [.05, .5, 15]
# The surfaces mesh is generated automatically just-in-time
```

Next, the Masstran AIM is instantiated.

```
masstranAIM = myProblem.analysis.create(aim = "masstranAIM",
                                         name = "masstran")
```

Once loaded analysis parameters specific to Masstran need to be set (see [AIM Inputs](#)). Here, the mesh from the surface egadsTessAIM is linked to the masstranAIM.

```
masstranAIM.input["Surface_Mesh"].link(myProblem.analysis["tess"].output["Surface_Mesh"])
```

Note the AIM instances are referenced in two different manners:

1. Using the returned object from Problem.analysis.create call.
2. Using the "name" key in the Problem.analysis Sequence. While syntactically different, these two forms are essentially identical.

Along the same lines of setting the input values above the "Material" (see [FEA Material](#)) and "Property" (see [FEA Property](#)) dictionaries are used to set more complex information. The user is encouraged to read the additional documentation on these inputs for further explanations.

```
# Set materials
unobtainium = {"youngModulus" : 2.2E11 ,
               "poissonRatio" : .33,
               "density" : 7850}
madeupium = {"materialType" : "isotropic",
             "youngModulus" : 1.2E9 ,
             "poissonRatio" : .5,
             "density" : 7850}
masstranAIM.input.Material = {"Unobtainium": unobtainium,
                              "Madeupium" : madeupium}

# Set property
shell = {"propertyType" : "Shell",
        "membraneThickness" : 0.2,
        "bendingInertiaRatio" : 1.0, # Default
        "shearMembraneRatio" : 5.0/6.0} # Default }
masstranAIM.input.Property = {"Ribs_and_Spars": shell}
```

The MasstranAIM will execute automatically and compute all mass properties in memory when an output is requested below.

Finally, available AIM outputs (see [AIM Outputs](#)) may be retrieved, for example:

```
# Get mass properties
print ("\nGetting results mass properties.....\n")
Area = masstranAIM.output.Area
Mass = masstranAIM.output.Mass
Centroid = masstranAIM.output.Centroid
CG = masstranAIM.output.CG
Ixx = masstranAIM.output.Ixx
```

```
Iyy      = masstranAIM.output.Iyy
Izz      = masstranAIM.output.Izz
Ixy      = masstranAIM.output.Ixy
Ixz      = masstranAIM.output.Ixz
Iyz      = masstranAIM.output.Iyz
I         = masstranAIM.output.I_Vector
II        = masstranAIM.output.I_Tensor
print("Area      ", Area)
print("Mass      ", Mass)
print("Centroid  ", Centroid)
print("CG        ", CG)
print("Ixx       ", Ixx)
print("Iyy       ", Iyy)
print("Izz       ", Izz)
print("Ixy       ", Ixy)
print("Ixz       ", Ixz)
print("Iyz       ", Iyz)
print("I         ", I)
print("II        ", II)
```

results in,

```
Area      3.28946557
Mass      5164.46094491
Centroid  [1.2409841844368583, 0.16359702451265337, 4.0874212239589455e-09]
CG        [1.2409841844368585, 0.16359702451265348, 4.087420991763218e-09]
Ixx       21325.300951
Iyy       22558.0731769
Izz       1292.98036179
Ixy       153.720903861
Ixz       2.06373216532e-06
Iyz       2.36311990987e-06
I         [21325.300951015903, 22558.07317691867, 1292.9803617927173, 153.72090386142395,
2.063732165317917e-06, 2.363119909871653e-06]
II        [[21325.300951015903, -153.72090386142395, -2.063732165317917e-06], [-153.72090386142395,
22558.07317691867, -2.363119909871653e-06], [-2.063732165317917e-06, -2.363119909871653e-06,
1292.9803617927173]]
```

0.21.4 Executing pyCAPS script

Issuing the following command executes the script:

```
python masstran_PyTest.py
```