

# Drum Machine Manual



1. Set Bpm (beats per minute) value.
2. Choose the drum (KD- kick drum, SD - snare drum, HC — hi-hat closed, PRC — percussion).
3. Start/Play buttons. Banana starts sequence playback, broccoli stops it.
4. Change the sequence. Check toggle button for a drum to be played at its step. Left upper toggle button is step 1, bottom right is step 16.