


GNSS receivers

File: gnss.kicad_sch

OCXO

File: ocxo.kicad_sch

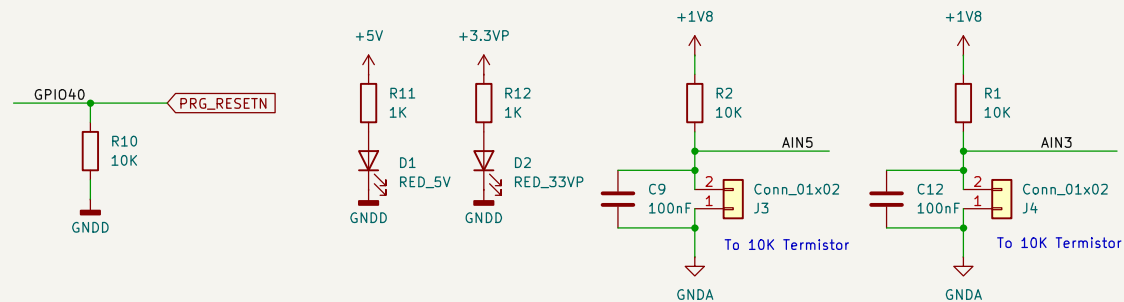

BeagleBone Black Pin Modes:
https://elinux.org/Beagleboard:Cape_Expansion_Headers

Cape requirements are documented in the BeagleBone Black SRM:
<https://github.com/beagleboard/beaglebone-black/wiki/System-Reference-Manual>

