



For the HannIO 24x16 display, only populate drivers U0-U6. Do not install U7. Install R0 instead. Do not populate R1-R6.

For additional channels, remove R0 and install U7. The spare channels are routed to header X4.