






# How to Configure Arduino 1.6.4 for BSides PR 2015 Badge

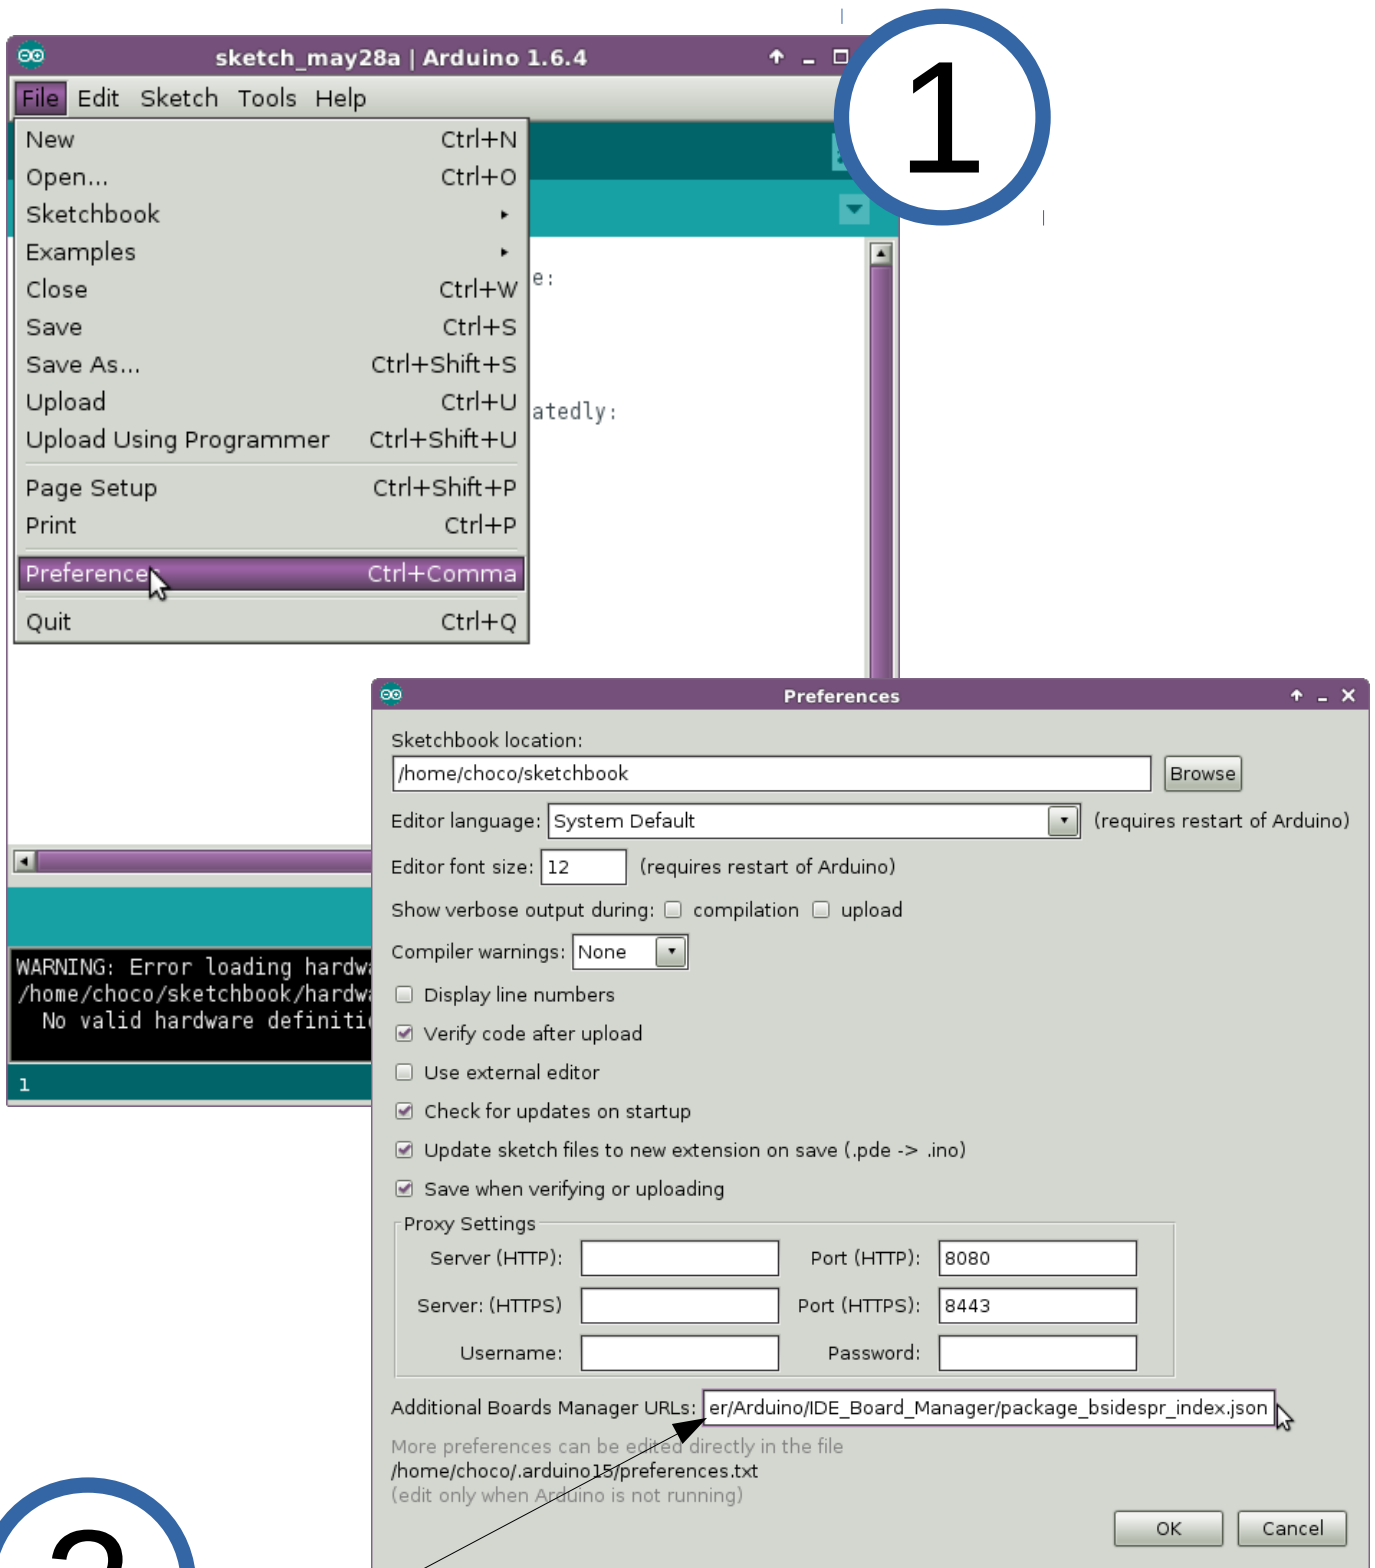



[https://github.com/soynerdito/PepitaBadgeShieldCompatible/raw/master/Arduino/IDE\\_Board\\_Manager/package\\_bsid spr\\_index.js on](https://github.com/soynerdito/PepitaBadgeShieldCompatible/raw/master/Arduino/IDE_Board_Manager/package_bsid spr_index.js on)

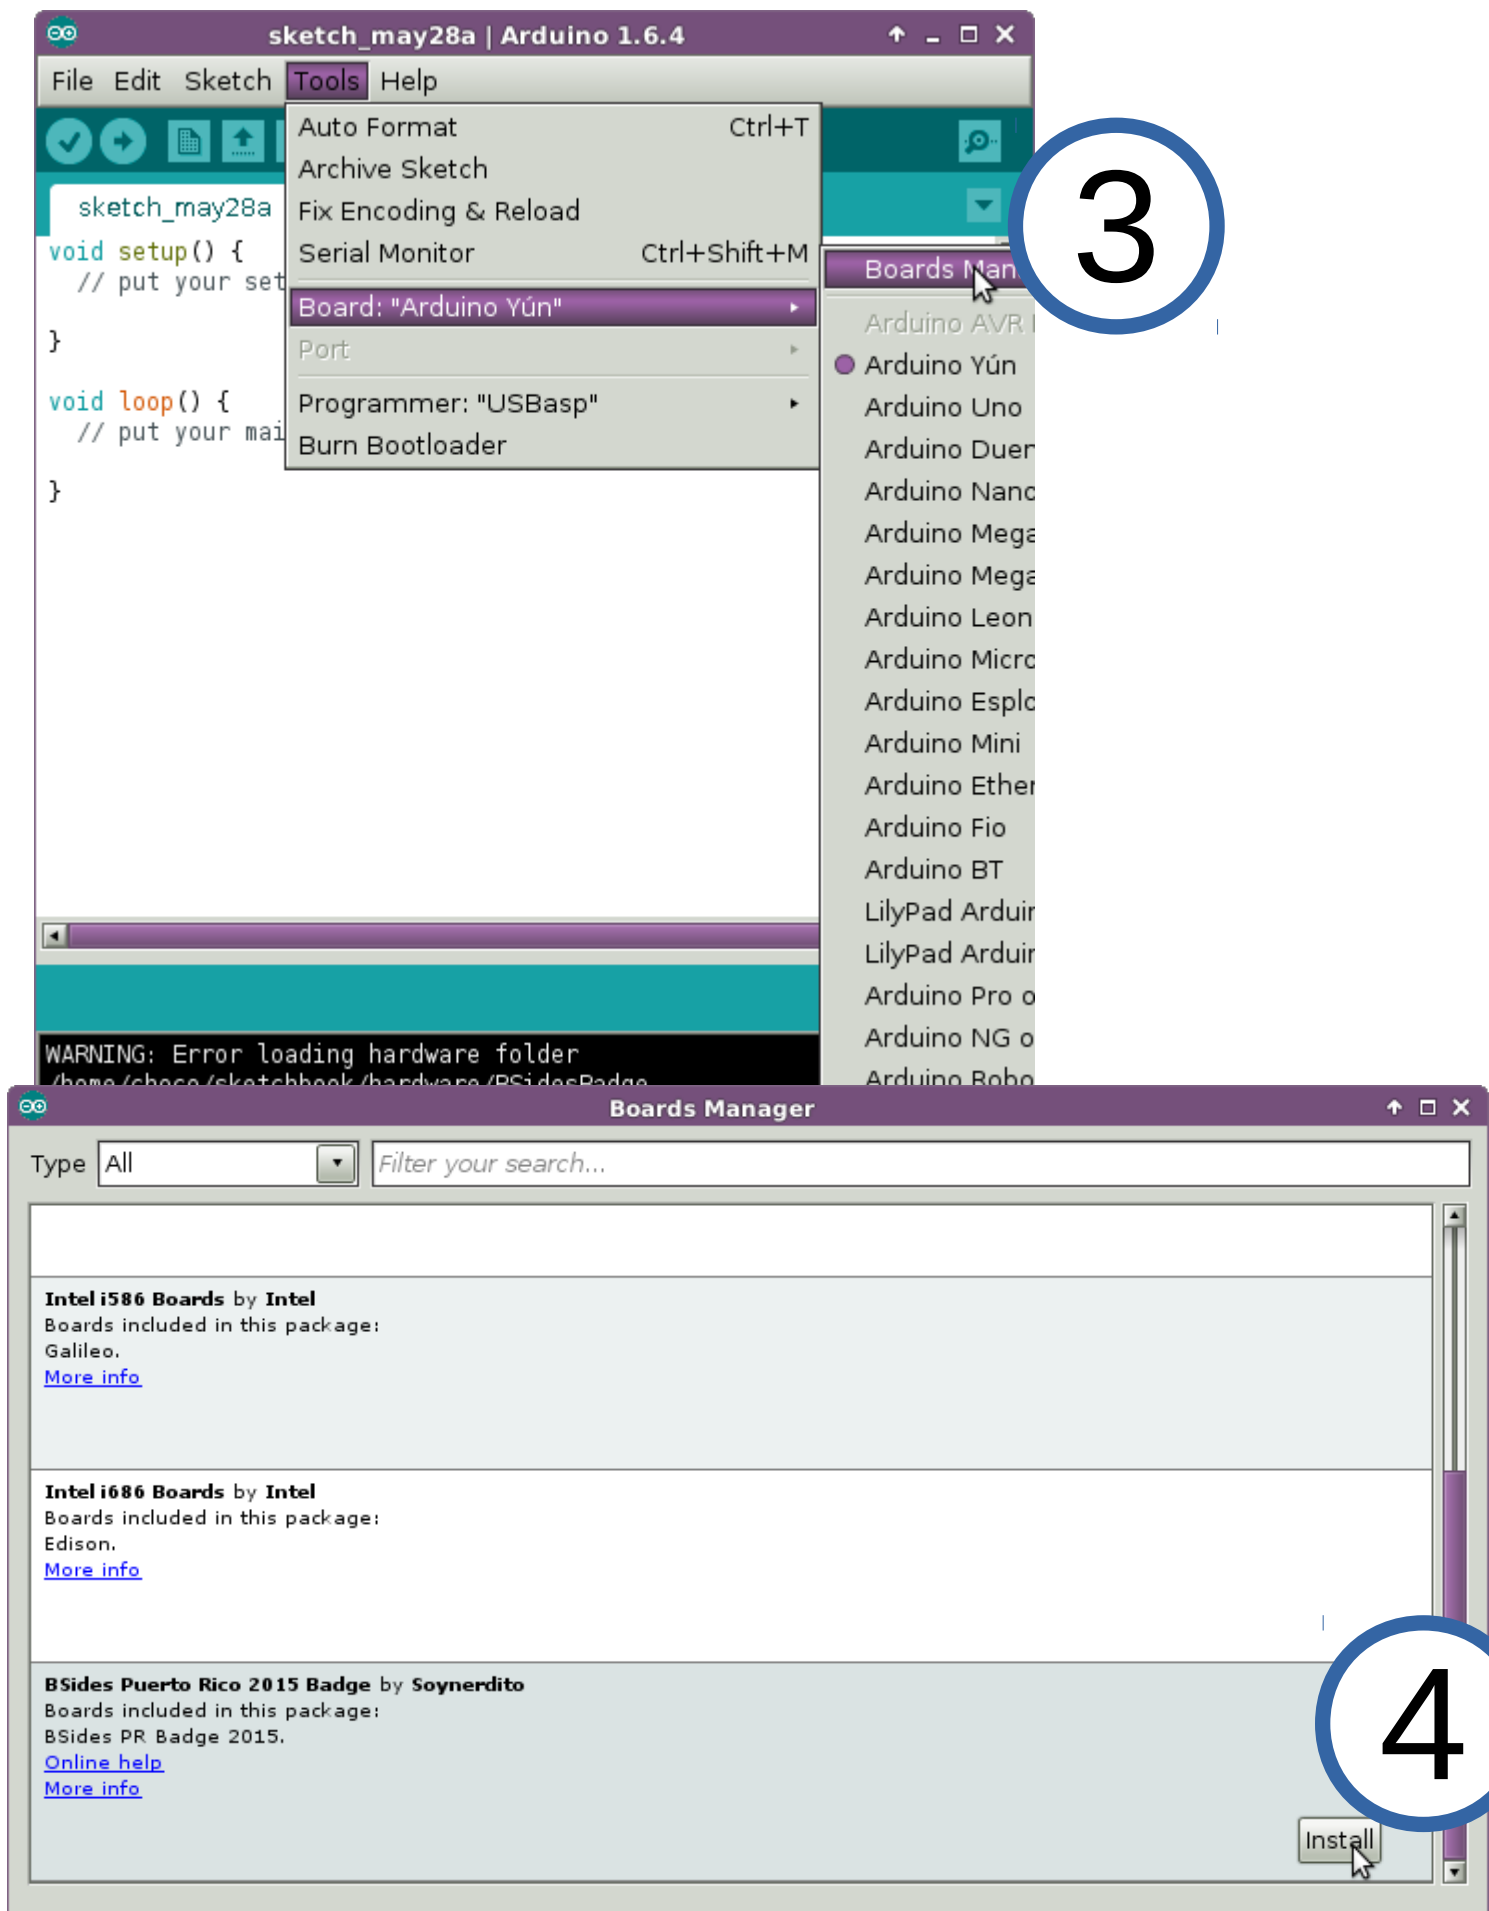

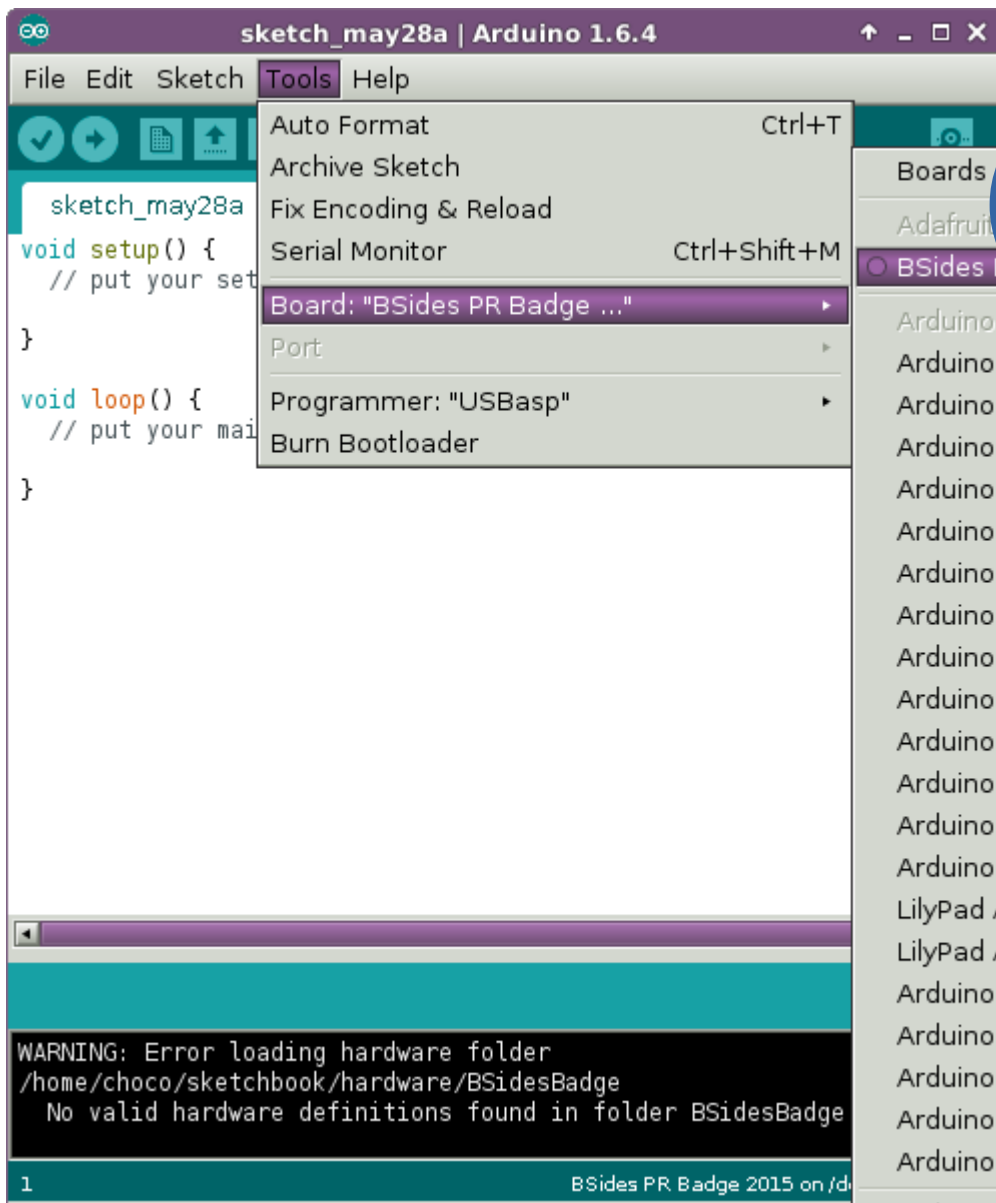

Your IDE is ready to compile and download projects to your badge.

Linux/MAC no drivers needed



## Windows

Driver: <http://www.fischl.de/usbasp/>



## Linux

create a file /etc/udev/rules.d/Usbasp.rules with this content  
SUBSYSTEMS=="usb", ATTRS{idVendor}=="16c0",  
ATTRS{idProduct}=="05dc", GROUP="users", MODE="0666"