

6750

 
LEGOLAND

... ..
LIGHT
&
SOUND
SYSTEM


LEGO




1

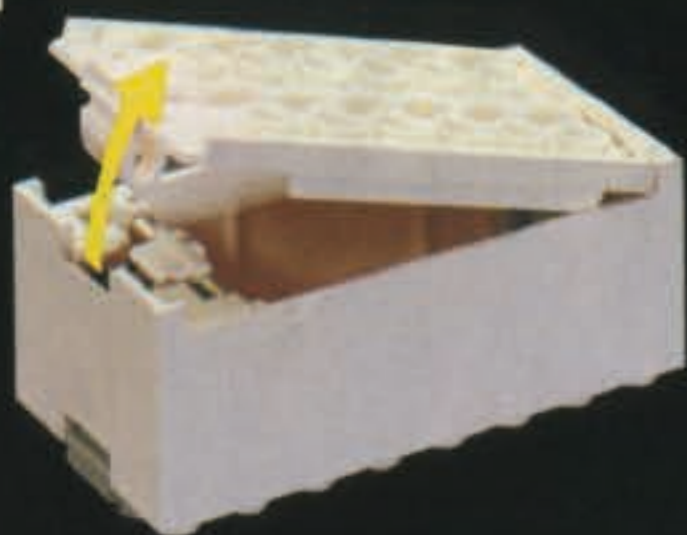

2

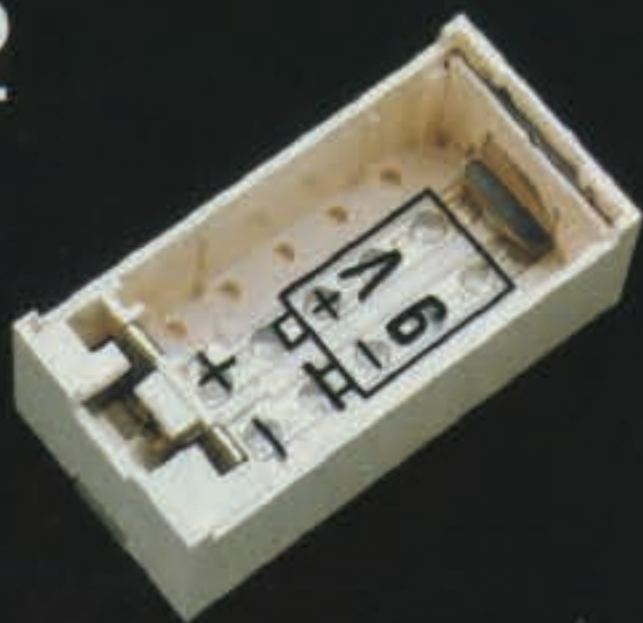 

3

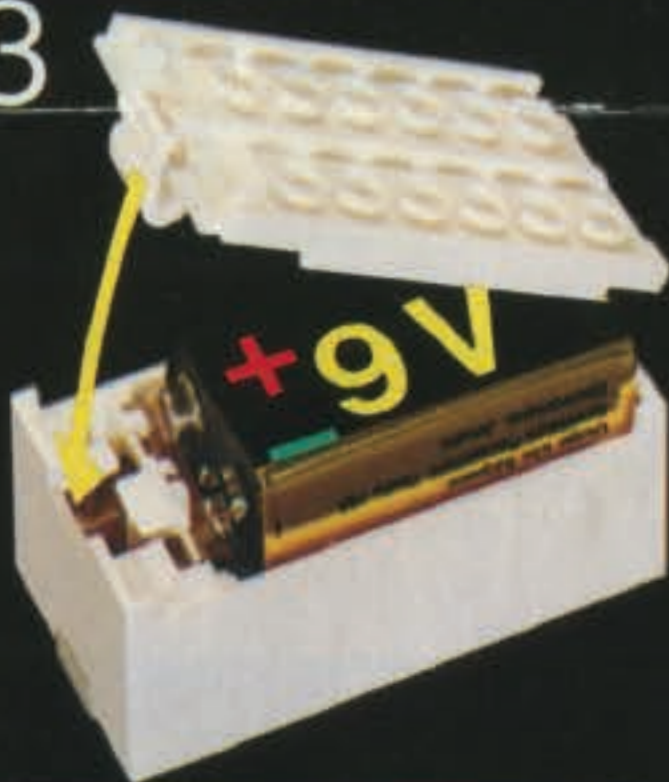 

USE OF BATTERY BOX – PLEASE NOTE

 
Please obey the following points concerning the proper use of the battery box:

DO:



- Use a 9 volt battery and follow instructions carefully.
- Check the battery regularly.
- Observe polarity signs in the bottom of the battery box.
- Remove the battery from the battery box if unused for a long period.
- Use only connector elements included in the box to connect other Light & Sound elements.
- Use an alkaline battery for longer life.

DON'T


- Recharge the battery while it is in the battery box.
- Connect the battery box to other sources of power (eg. transformers, outlets, or other battery boxes).
- Throw used batteries in the fire.

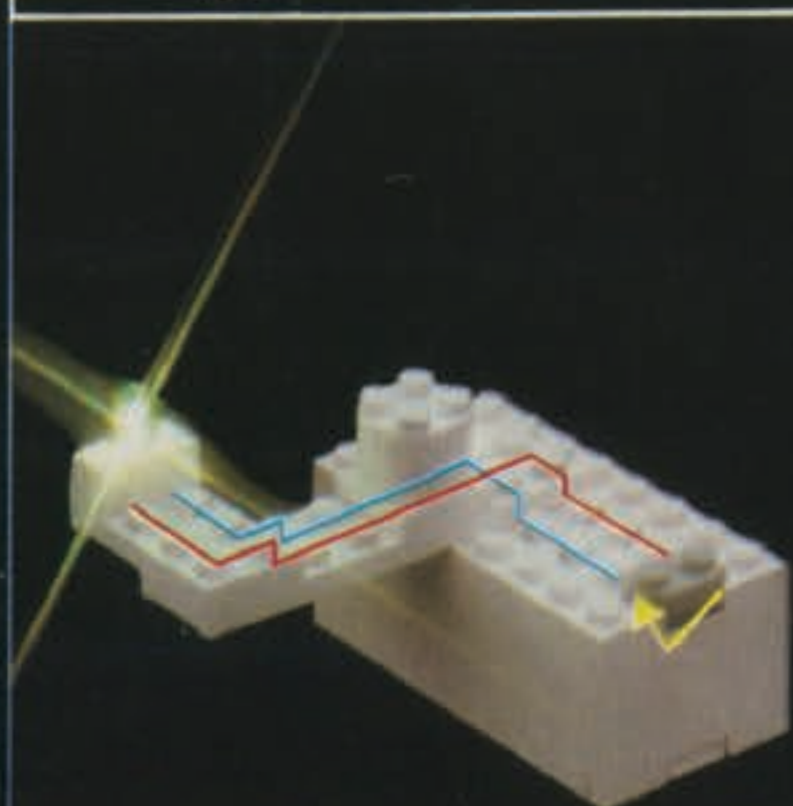



1

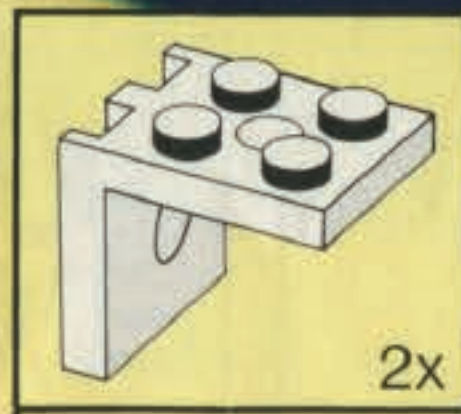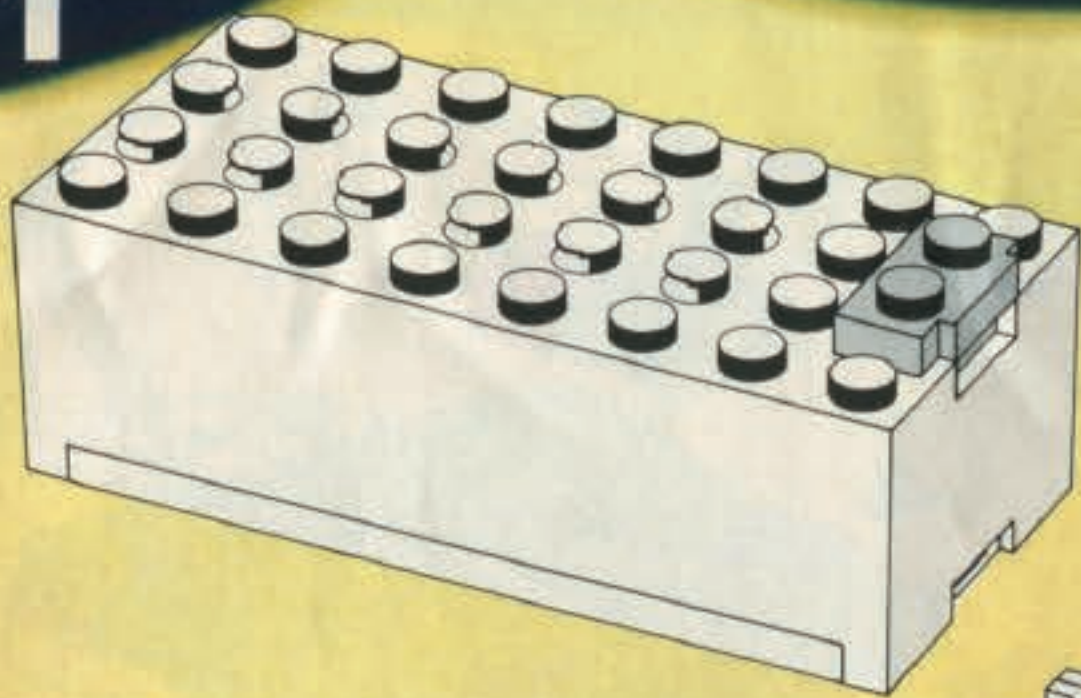  


2

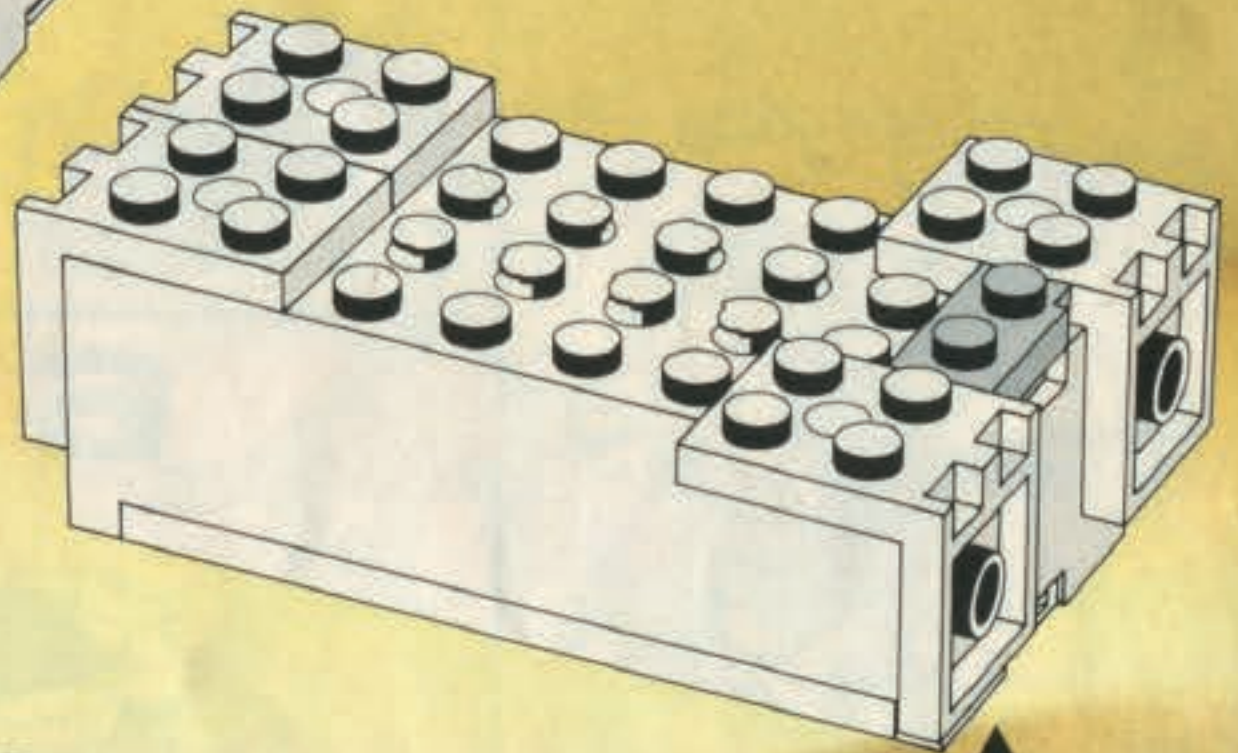 


3




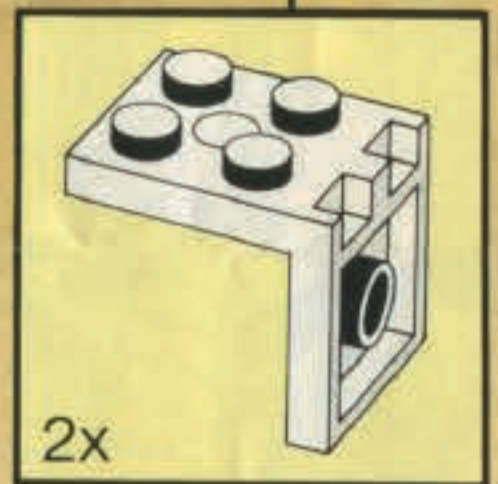 
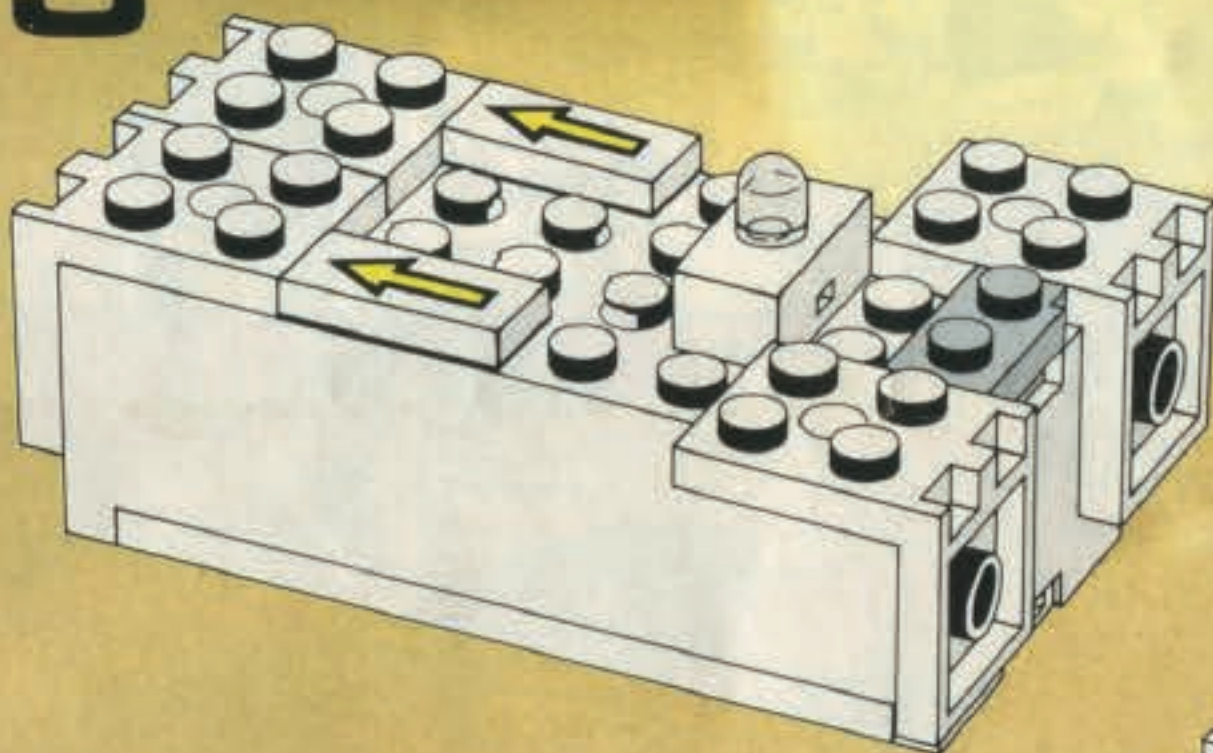 


4

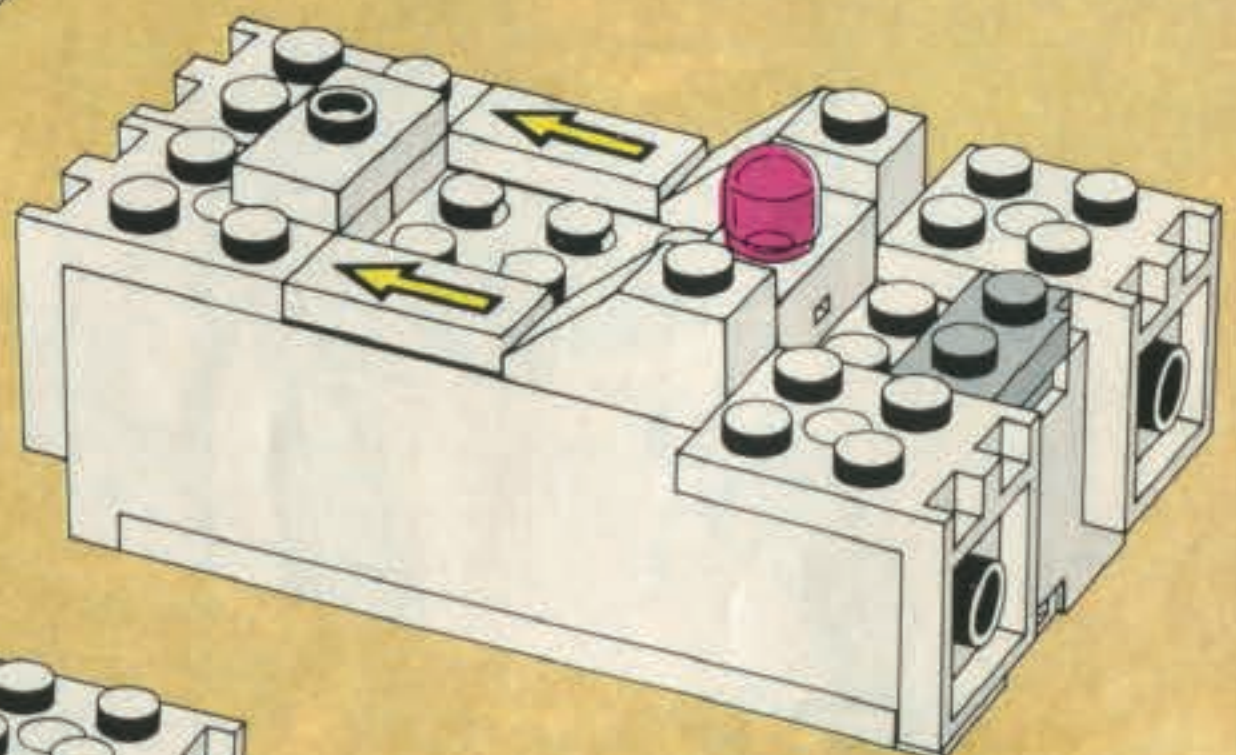 


5

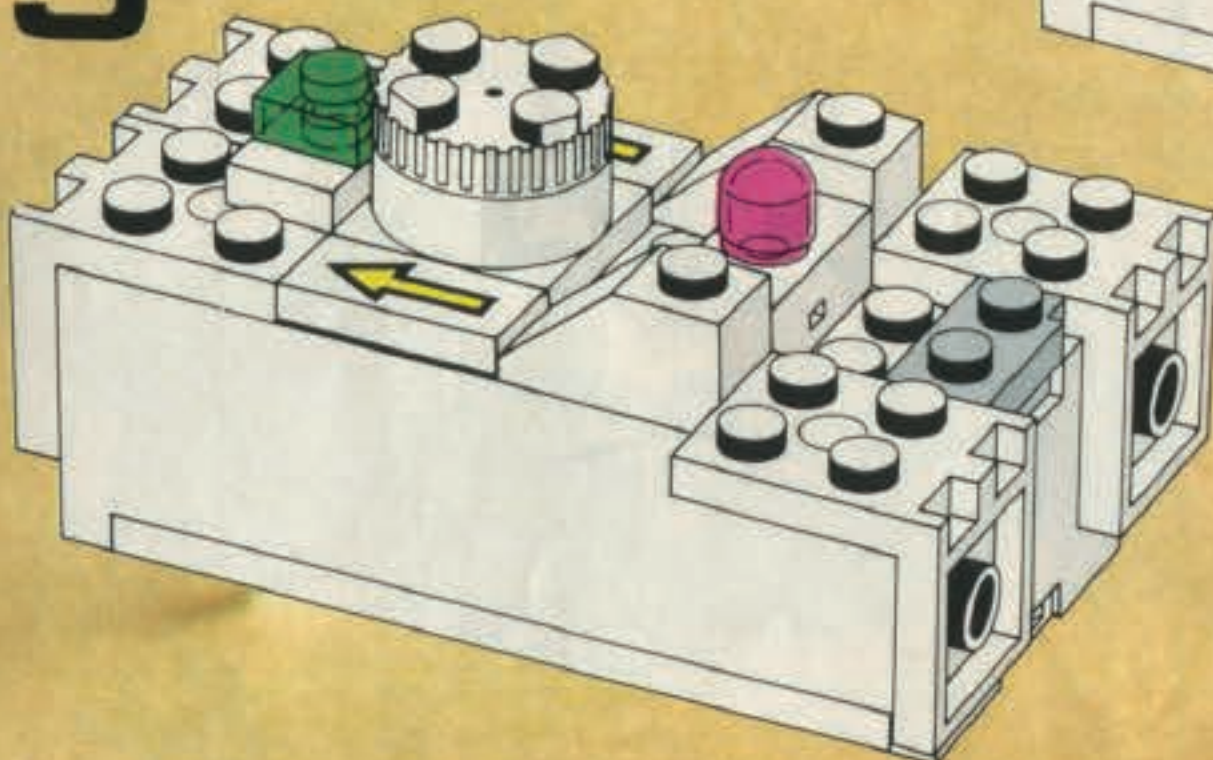 

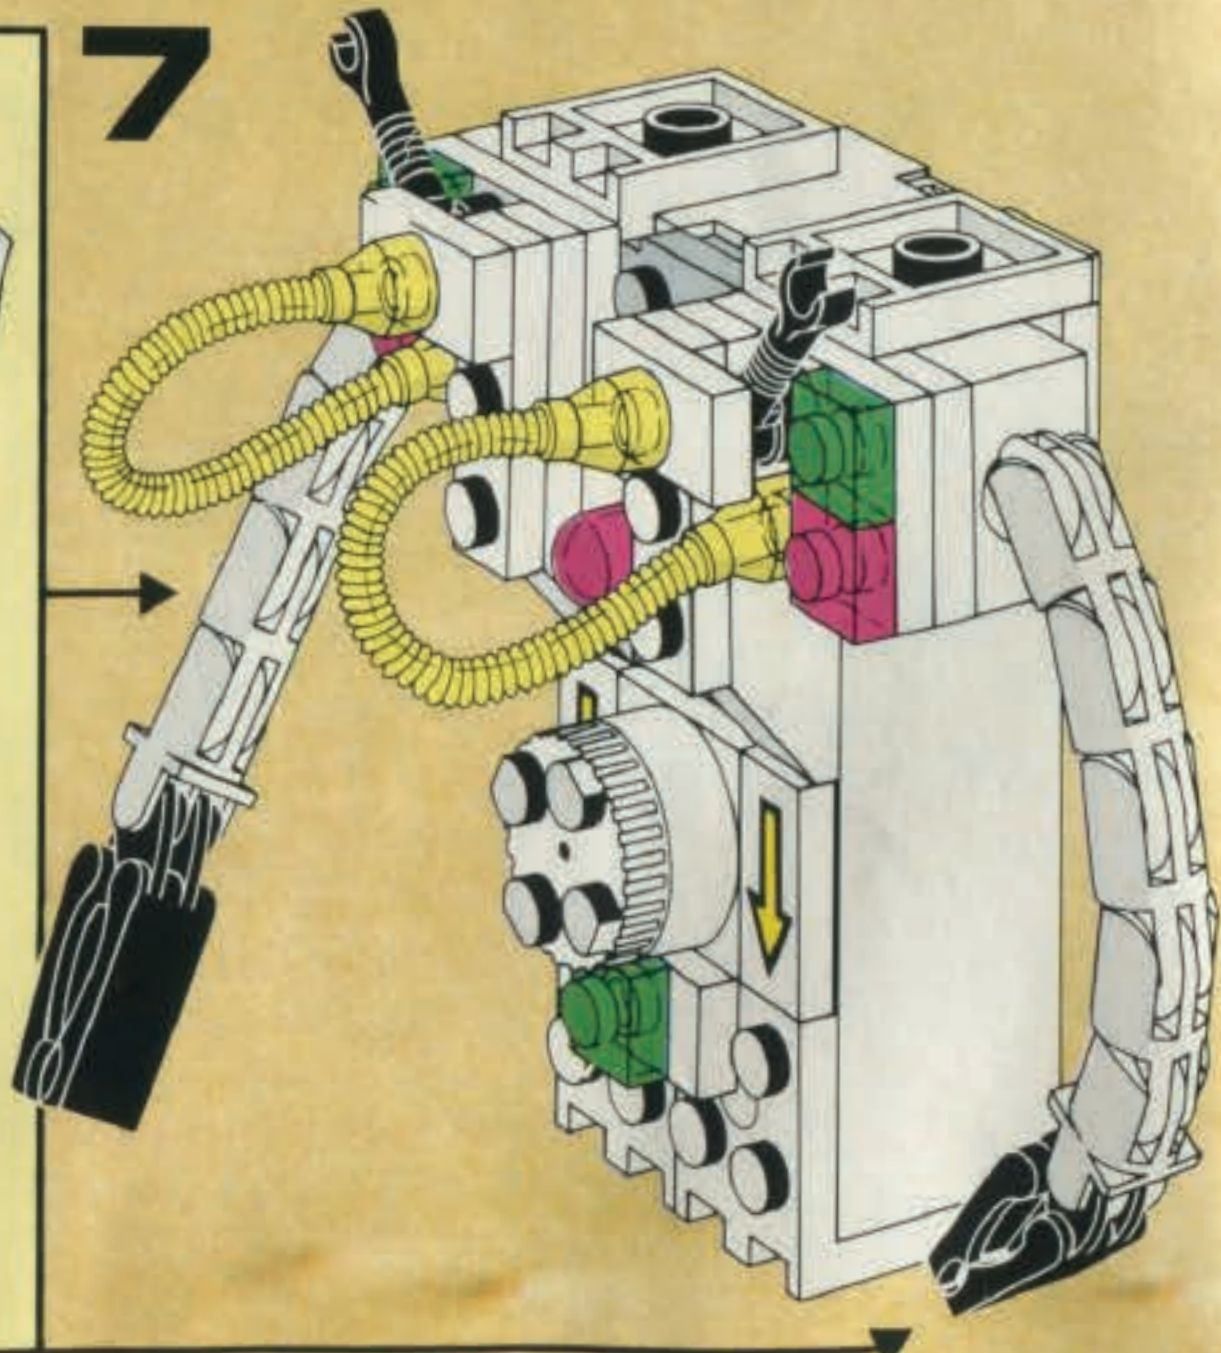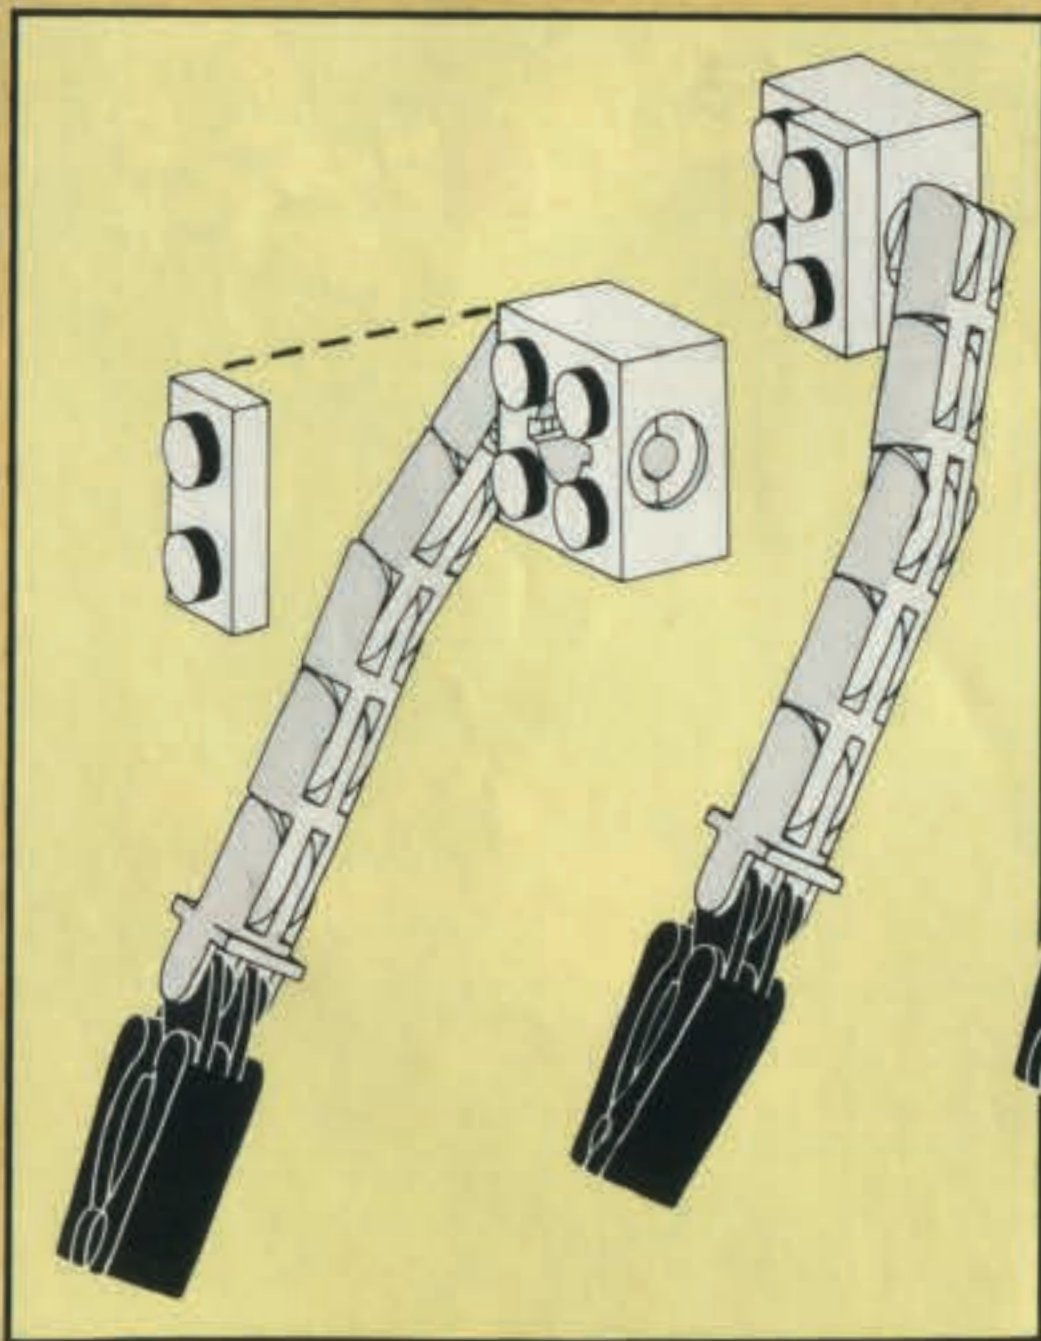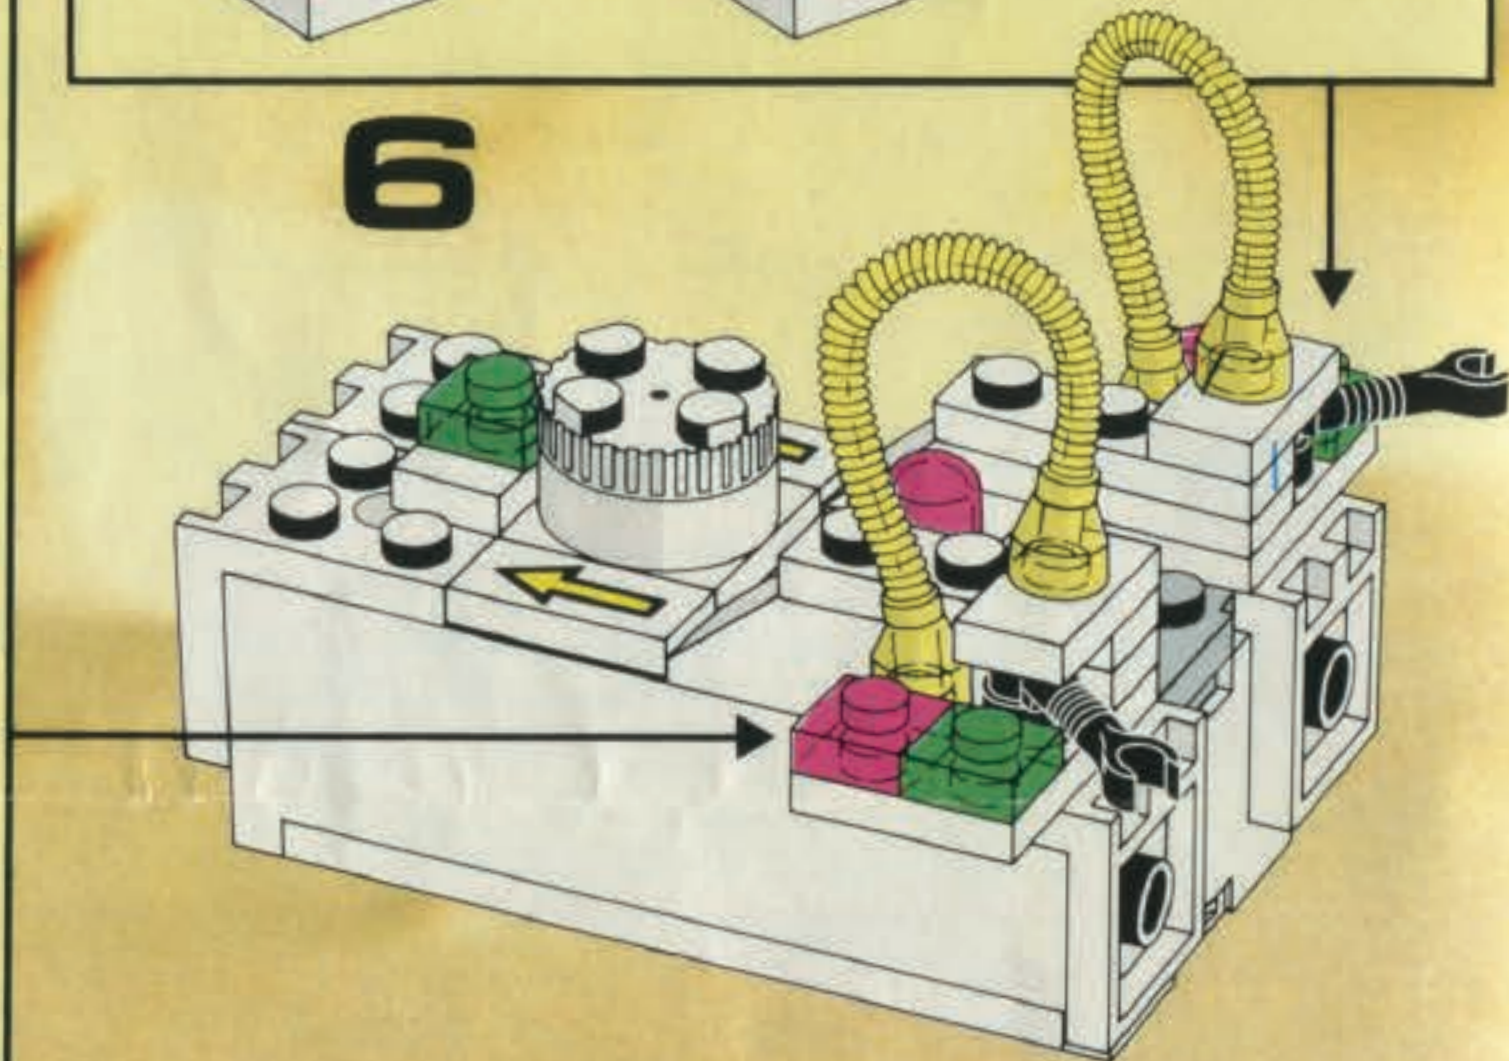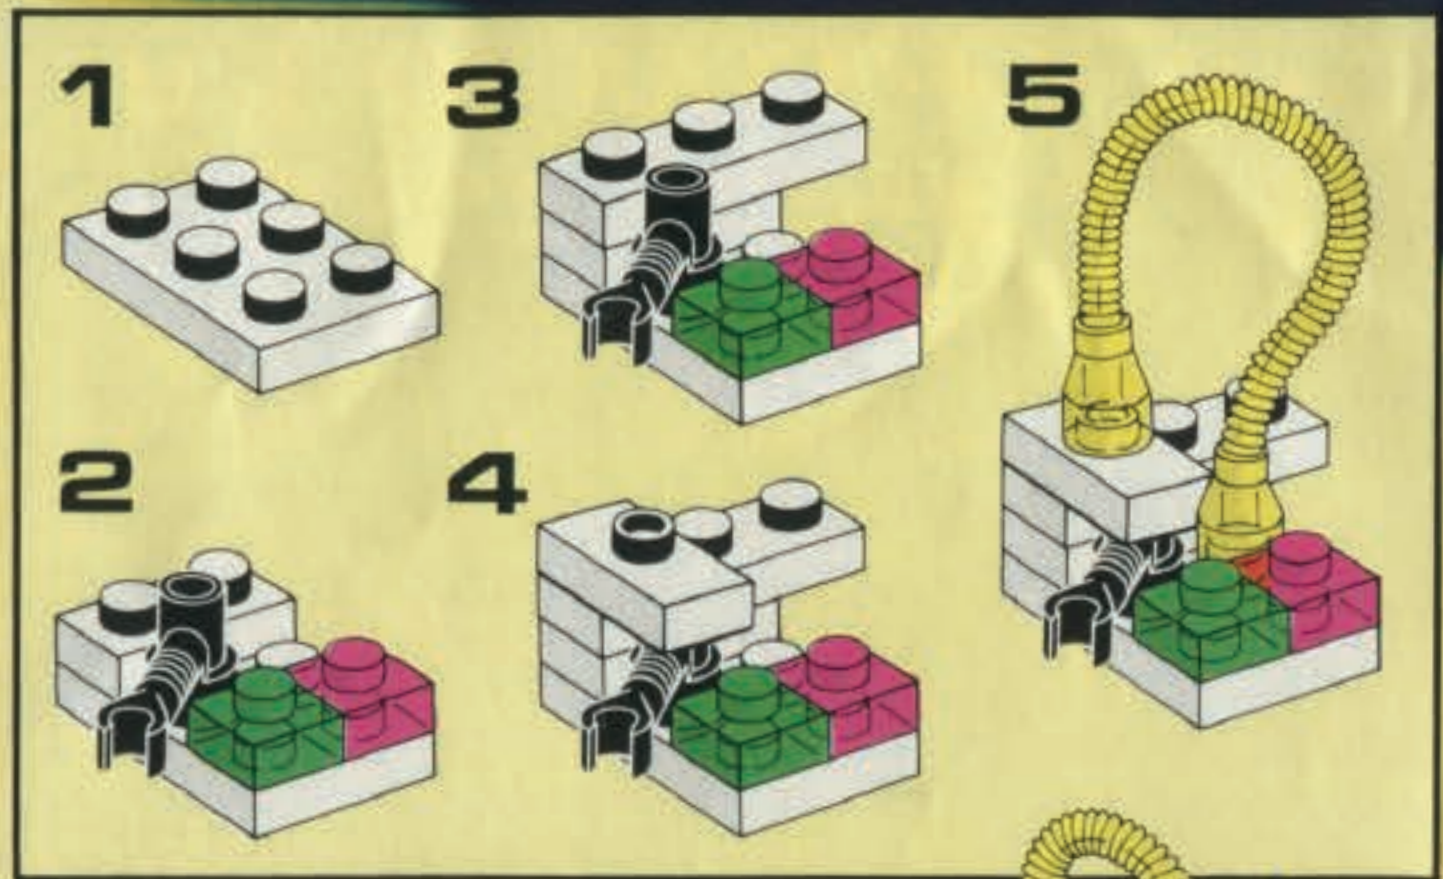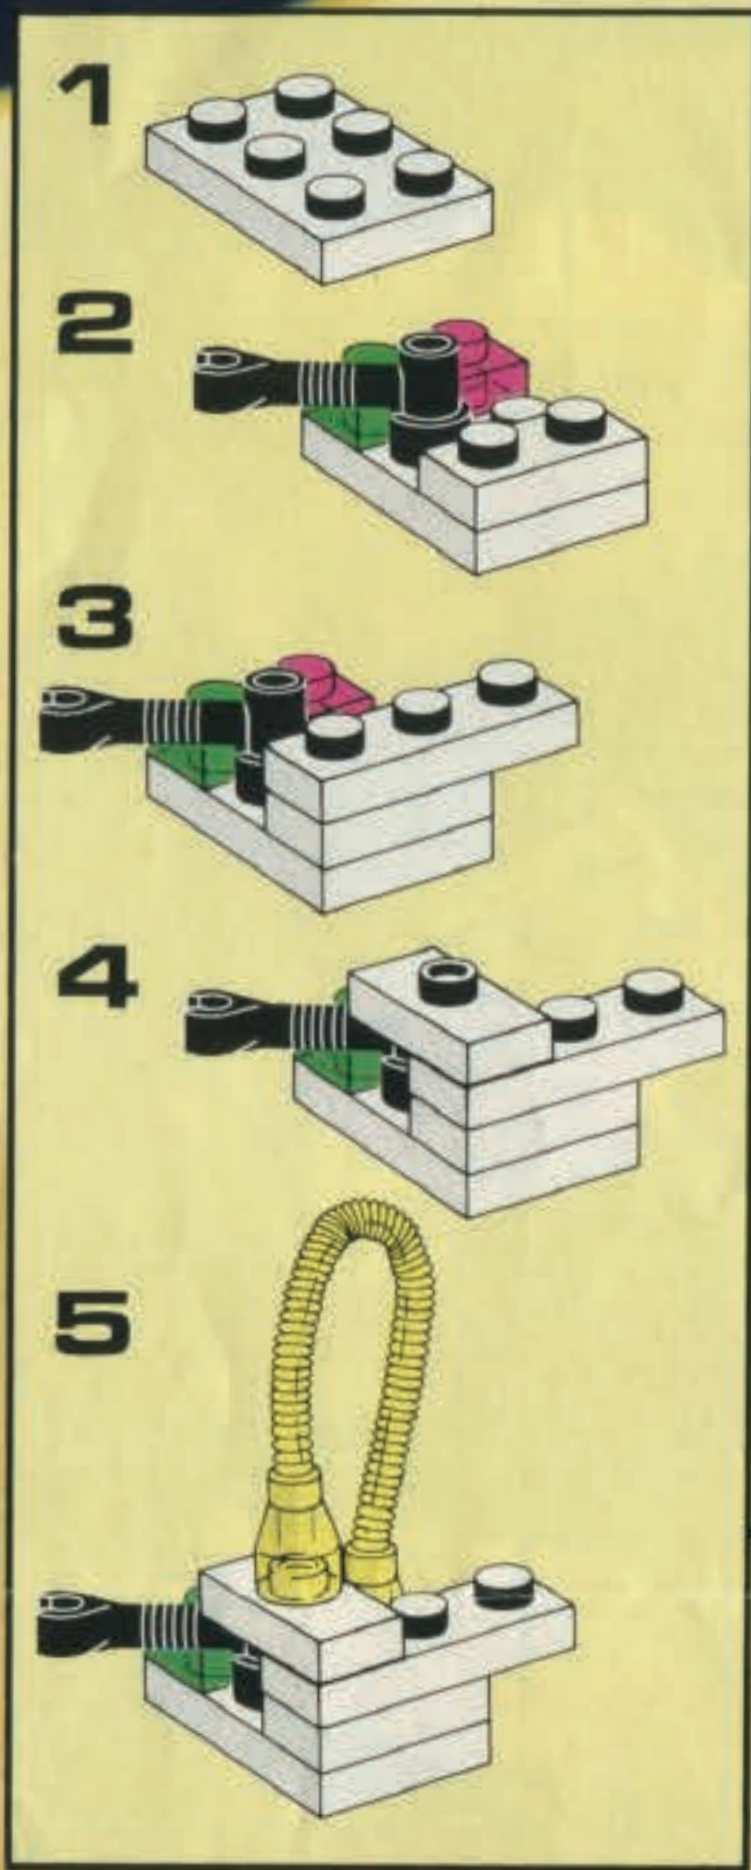     

1

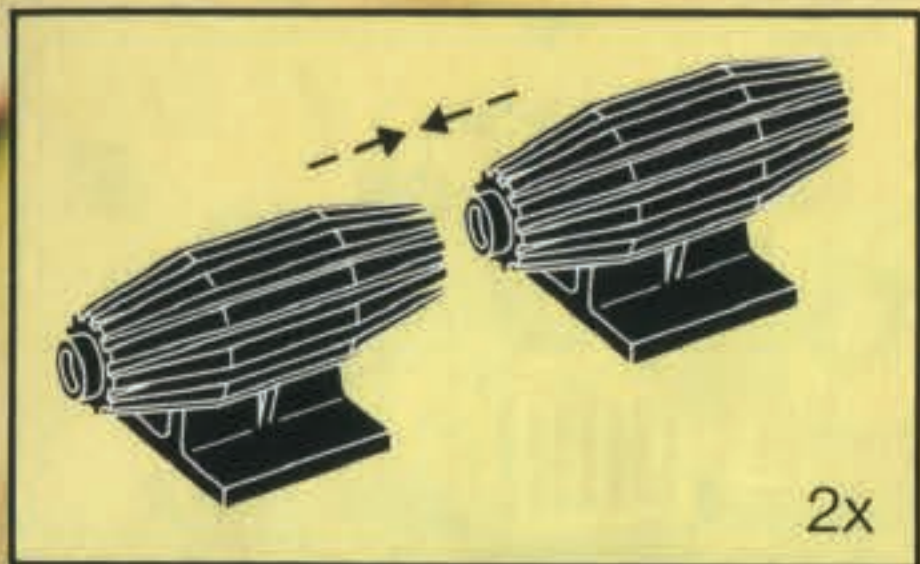 


2




3



 
8

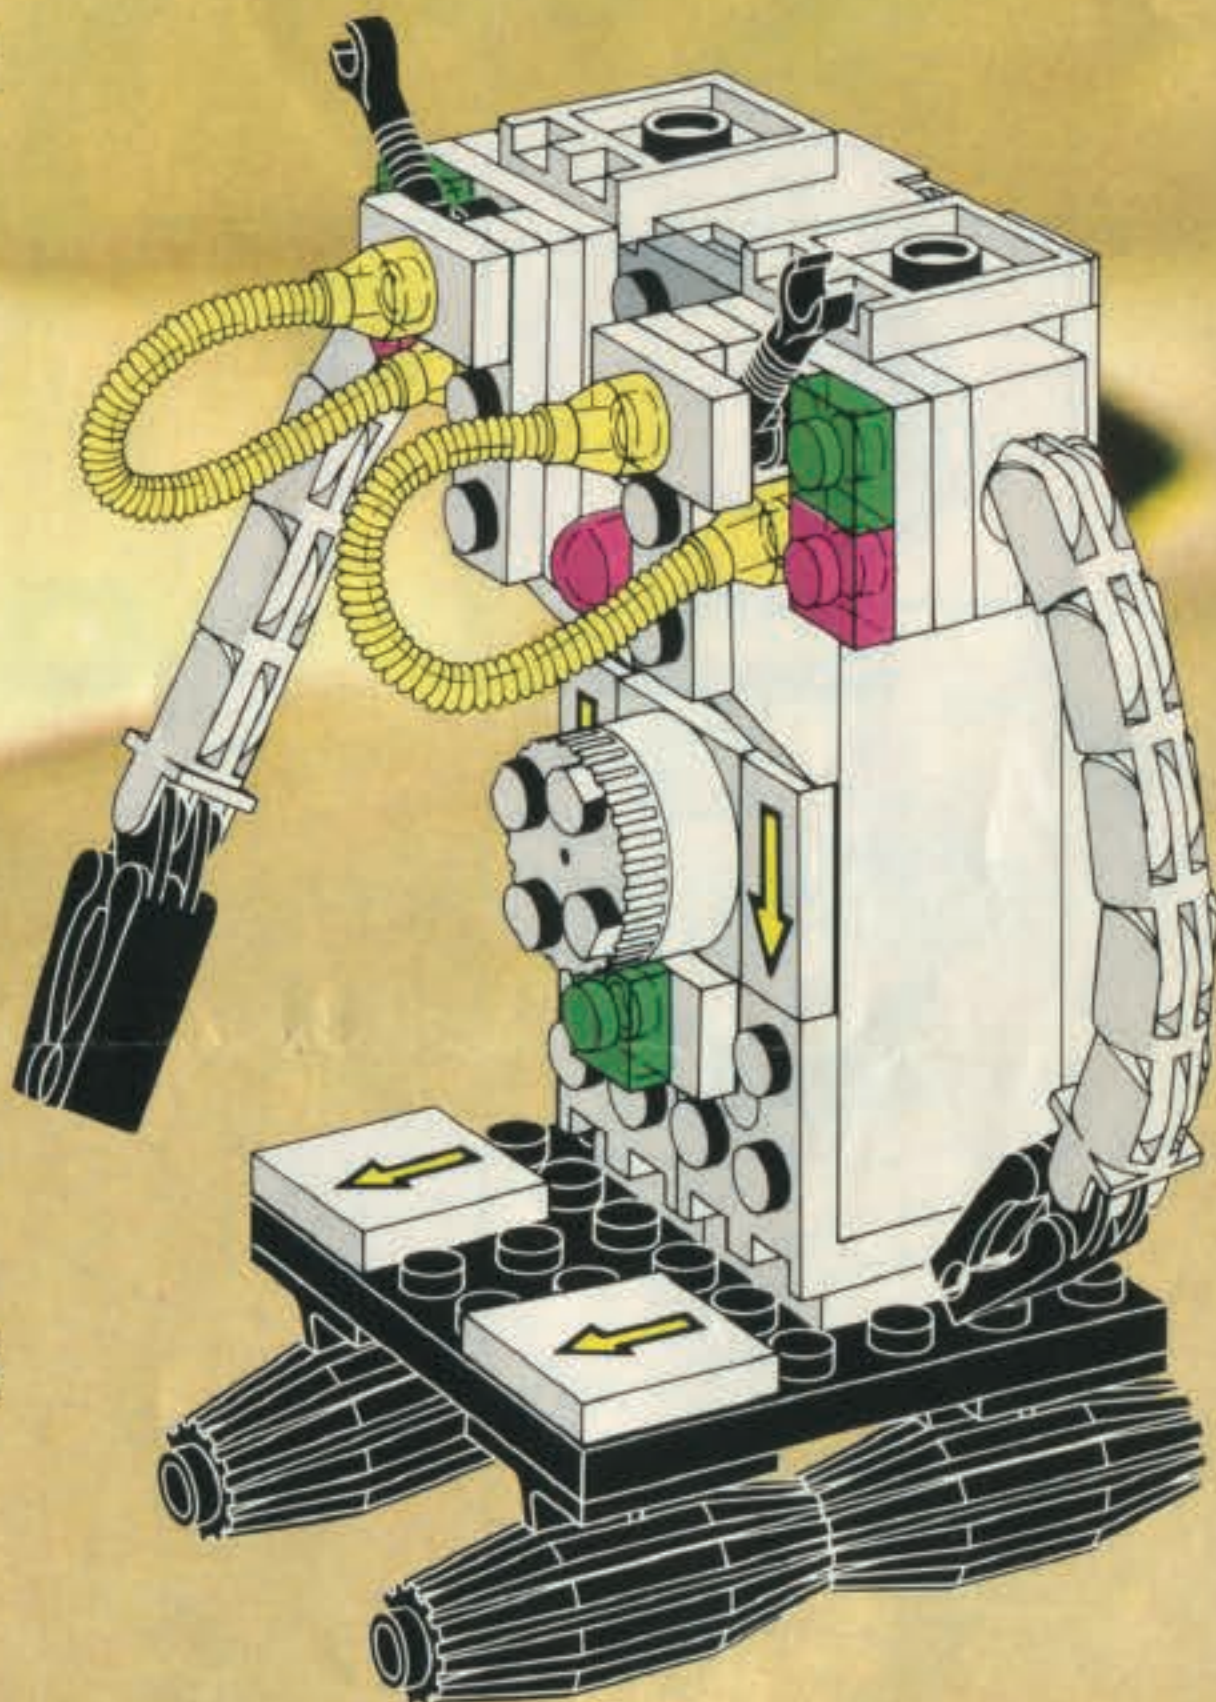


4

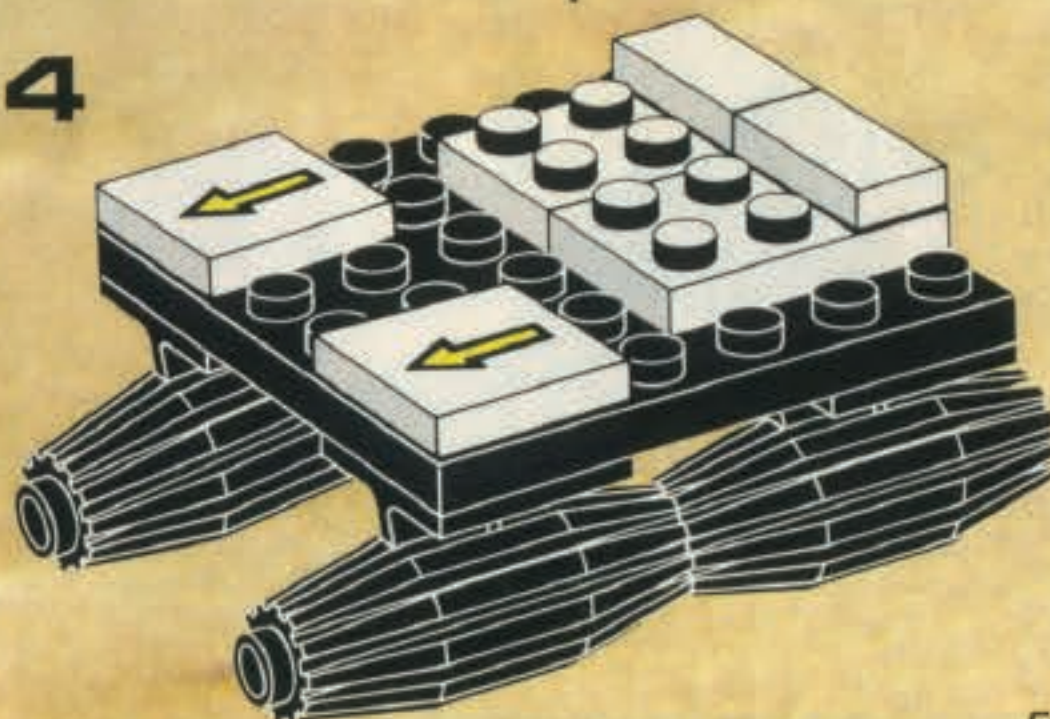 


1

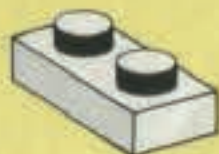 


2

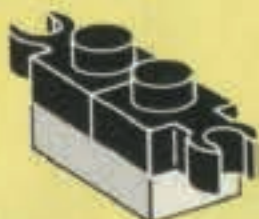 


3

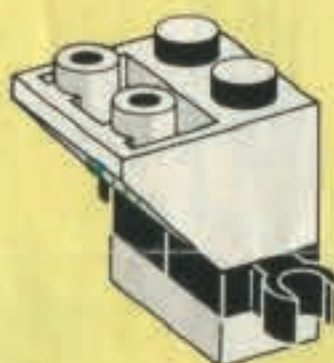 


4

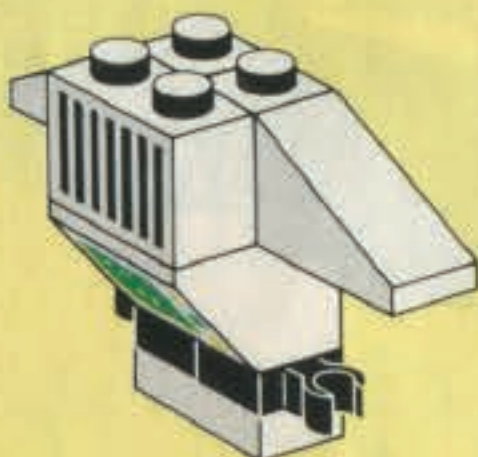 


5

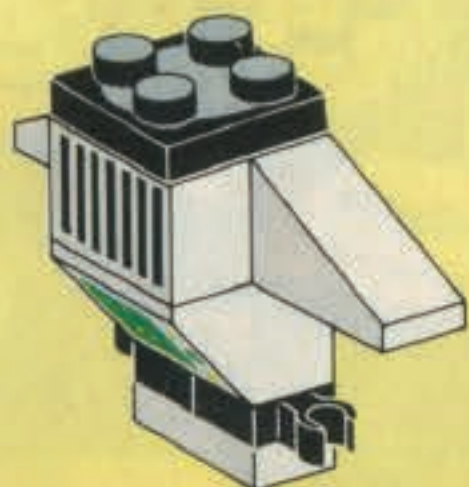 


6

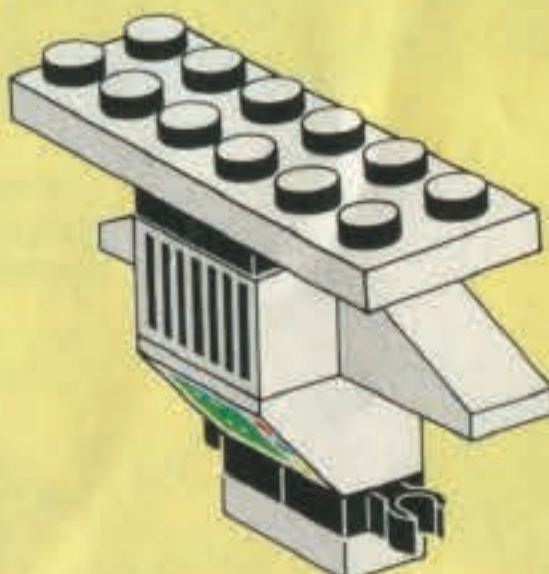 


7

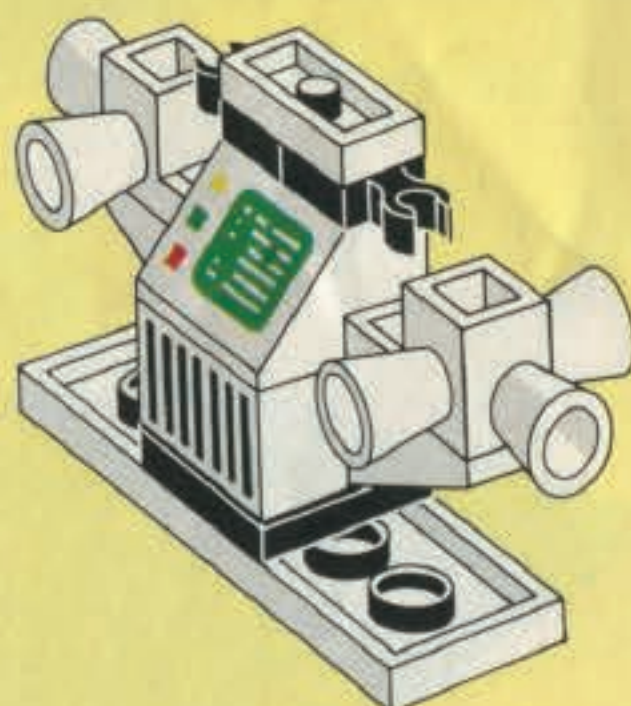 


9

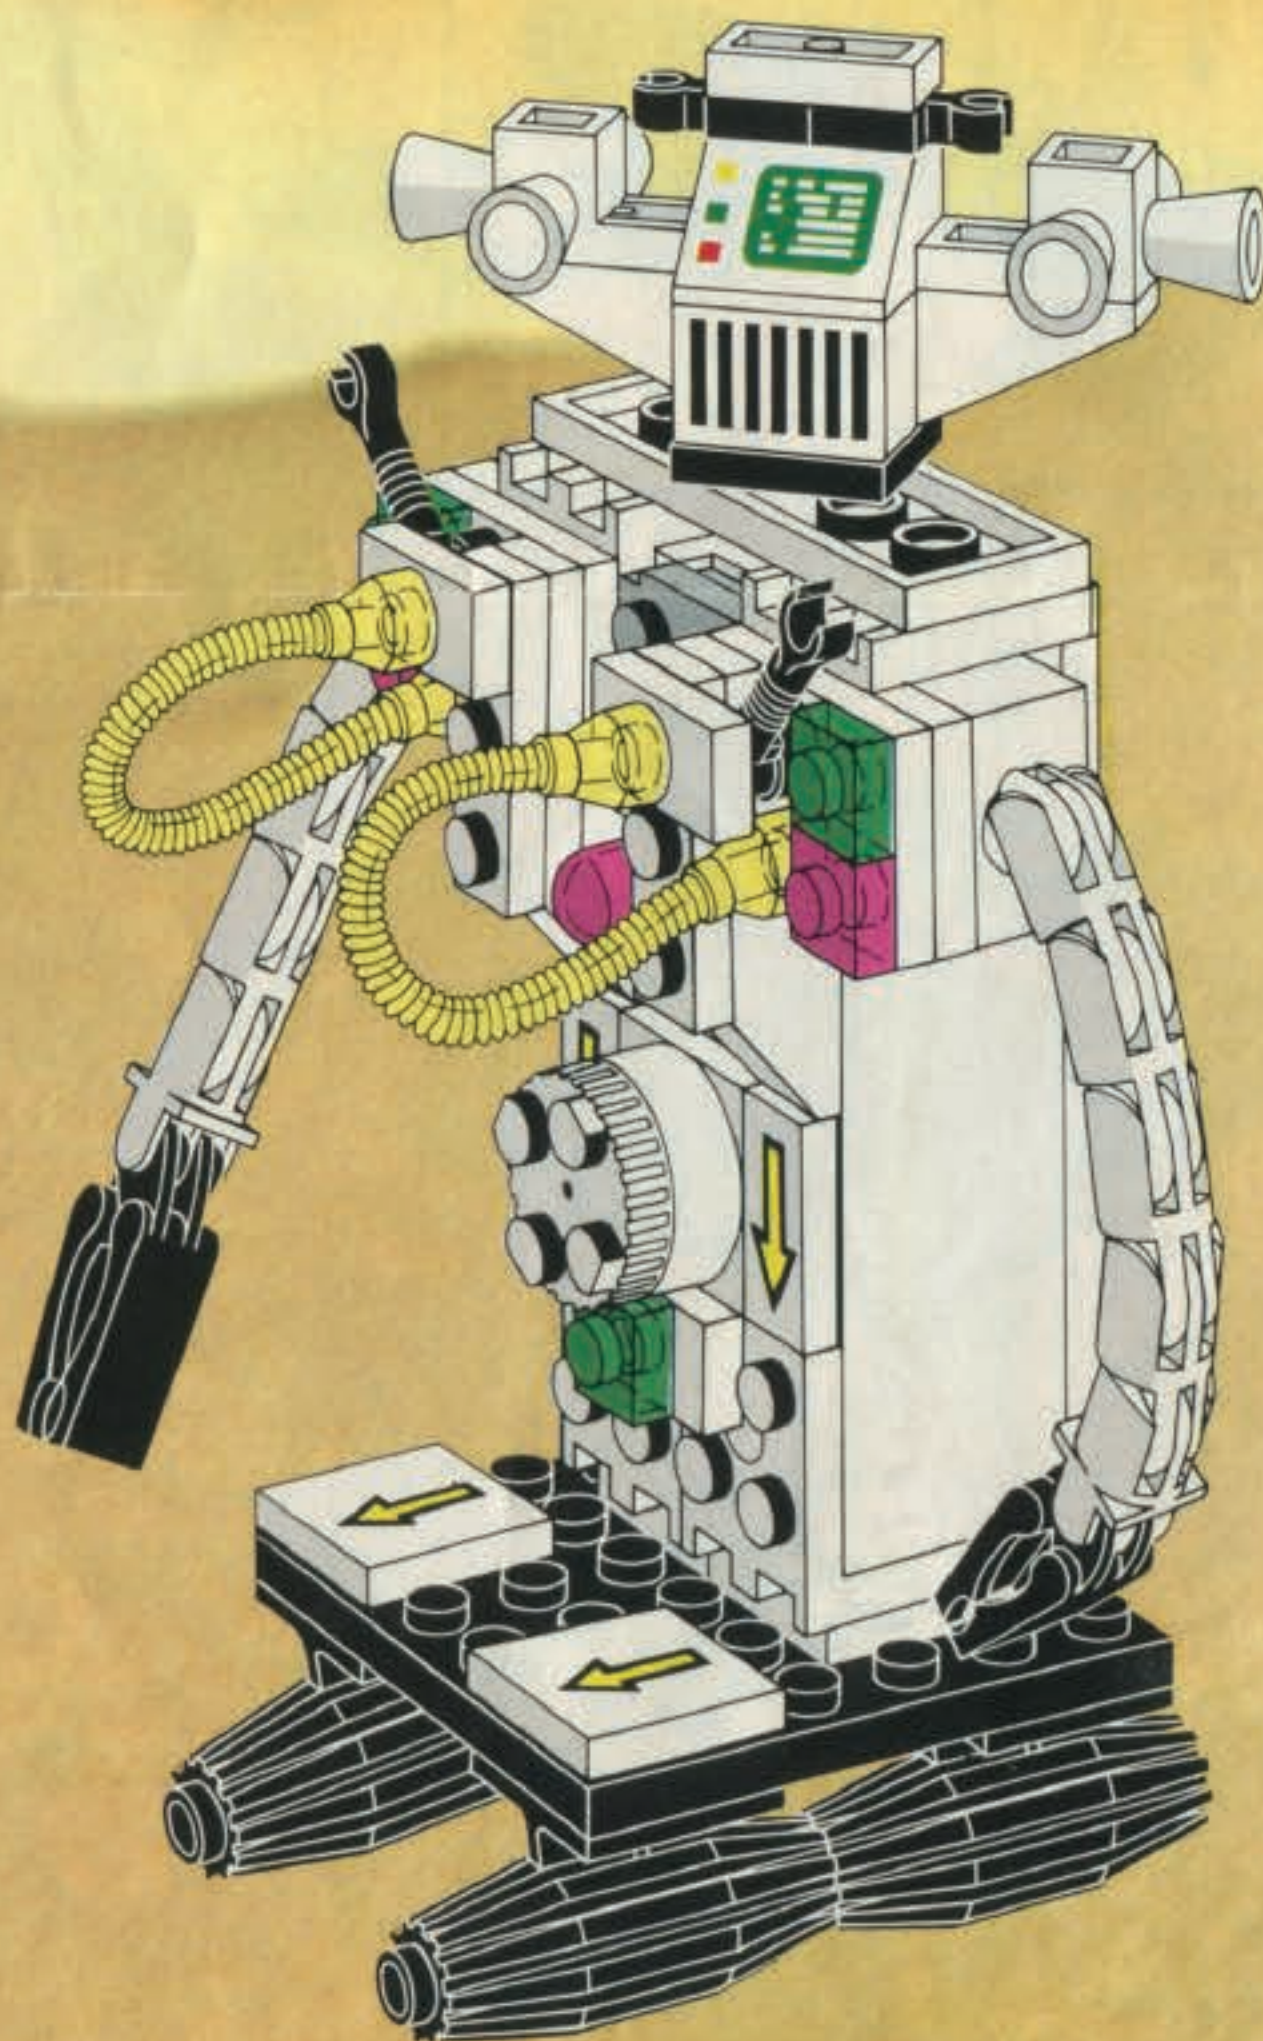 


1

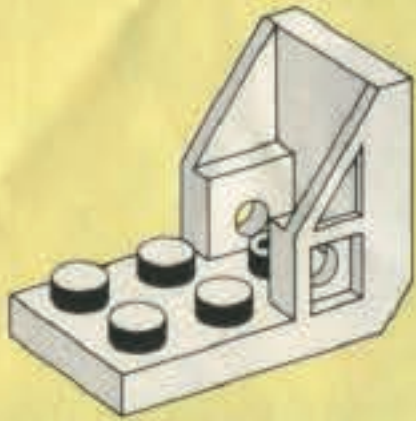 



2

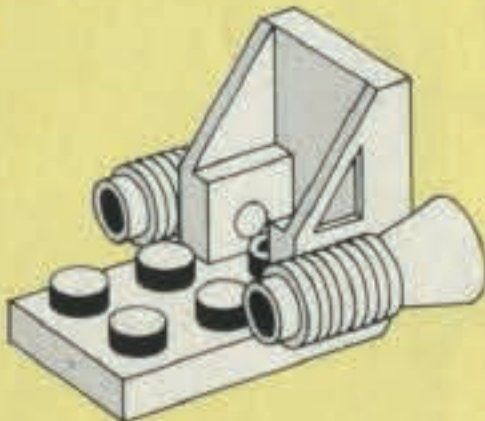 

3

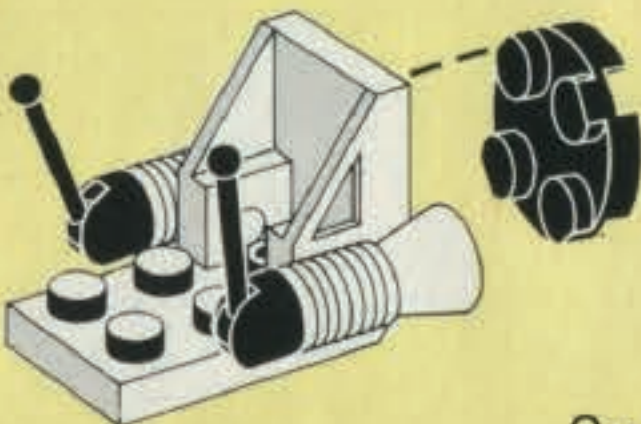 

2x

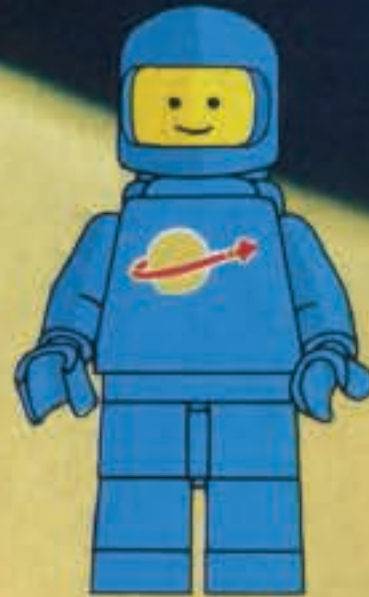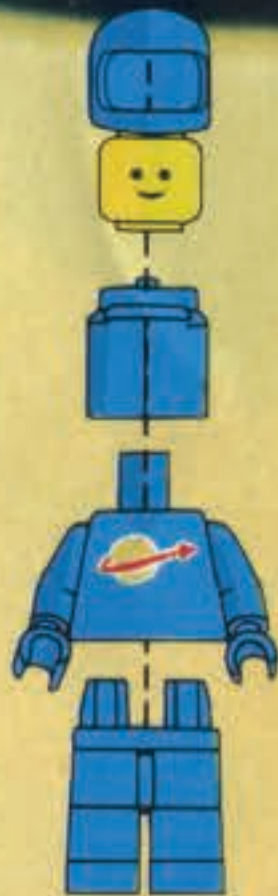  

10

