

Communication Settings

change the device socket settings

netp

+Add

Helper

change the device socket settings

Basic Settings

Name netp

Protocol Tcp Server

Socket Settings

Local Port 8899

Buffer Size 1024

Keep Alive(s) 60

Timeout(s) 300

Protocol Settings

Max Accept 3

More Settings

Security Disable

Route Uart

STATUS

SYSTEM SETTINGS

SERIAL PORT SETTINGS

COMMUNICATION SETTINGS

ADVANCED SETTINGS

OTHERS

Submit Delete Reset

build23092615012212889

Recommend using Google Chrome, Mozilla Firefox, Internet Explorer 11+