

NIST's Integrated Colony Enumerator (NICE)

Version 1.4 (Development Version B.2.c, April 2020)

Created and modified, 2008-2020,
Modified, April 2020 for Windows 10 64 bit compliance with MATLAB 2016b.

NICE was developed by:
Matthew Clarke and Jeeseong Hwang (jch@nist.gov)
Applied Physics Division
National Institute of Standards and Technology
Boulder, CO 80305

In collaboration with:
Robert Burton and Moon Nahm, University of Alabama – Birmingham

Citation:
Matthew L. Clarke, Robert L. Burton, A. Nayo Hill, Maritoni Litorja, Moon H. Nahm, Jeeseong Hwang, "Low-Cost, High-Throughput, Automated Counting of Bacterial Colonies" *Cytometry A*, **77A**, 790-797 (2010)

*Correspondence should be sent to jch@nist.gov.

NICE executable file download link:
<https://github.com/usnistgov/NICE-Public>

For NICE MATLAB codes, please contact jch@nist.gov

Support for this project was provided in part by PATH. The views expressed by the authors do not necessarily reflect the views of PATH.

Table of Contents

1	Overview.....	2
2	Installation.....	3
3	Using NICE.....	5
3.1	Getting started.....	5
3.2	Image Information	8
3.3	ROI: Defining, Moving, and Resizing.....	8
3.4	Toolbar.....	11
3.5	NICE Windows.....	13
3.5.1	Counting.....	13
3.5.2	Parameters.....	13
3.5.3	Navigation Options	15
3.5.4	Stored Data	15
3.5.5	Histogram	19
4	Counting Procedure	20
5	How NICE Counts	21
5.1	Finding Minima	21
5.2	Choosing a threshold.....	21
6	Image Acquisition.....	22
7	NICE Version History.....	23
8	Legal Disclaimers	24

1 Overview

Enumeration of bacterial colonies in an agar plate is simple in concept, but automated colony counting is difficult due to variations in colony color, size, shape, contrast, and density, as well as colony overlap. Furthermore, in applications where high throughput is essential, it is critical to employ a fast and user-friendly automated technique that doesn't compromise counting accuracy. While commercial products exist that can count bacterial colonies, they can be cost-prohibitive for small laboratories. We present here a colony counting program, NIST's Integrated Colony Enumerator (NICE), designed to count dark colonies from multiple regions of interests on an agar plate. Images can be cost effectively acquired by a digital camera or a desktop scanner and imported into NICE. High throughput standardized assay formats such as the multiplexed opsonophagocytic killing (MOPA4) assay can be readily counted by NICE.

2 Installation

Recommended Hardware (Currently Windows Only)

Windows 10 (64 bit).

CPU: 2 GHz or higher Processor; RAM: 2 GB or higher

Minimum Screen Resolution of 1024x768 set to 96 DPI.

100 GB hard drive space.

Required Software

There are two key software files required to run NICE. These files, as well as additional demonstration images etc., can be downloaded from

<https://doi.org/10.18434/M32073>.

Folder: NICE_1.4-Essential.zip

MCRInstaller.exe

MATLAB compiler engine 9.1 (2016b)*

NICE_GUI_B2c.exe

Launches NICE

demo-count-cam.jpg

A default colony image for practice

Folder: Demo Images.zip

A variety of image files of bacterial colonies

NICE source files written in MATLAB 2016b (.m and .fig files) are currently available by contacting jch@nist.gov. These source codes were created in MATLAB R2016b (www.mathworks.com) and may not function properly in earlier versions of MATLAB.

NOTE: Downloaded MCRInstaller.exe should be sufficient to run the NICE software. For your information, regarding the MATLAB Runtime installer for later MATLAB versions:

Windows 64-bit version of the MATLAB Runtime for later MATLAB versions is available from the MathWorks Web site by navigating to

<http://www.mathworks.com/products/compiler/mcr/index.html>

For more information about the MATLAB Runtime and the MATLAB Runtime installer, see 'Package and Distribute in the MATLAB Compiler documentation' in the MathWorks Documentation Center.

NOTE: You will need administrator rights to run MCRInstaller.

Installation

NICE uses a MATLAB compiler runtime engine which is installed by running MCRInstaller.exe. If MATLAB version R2016b or later version is already installed on the computer, you do not need to run the MCRInstaller.exe file. But it is strongly recommended to run the MCRInstaller.exe file.

- 1. Place the file <demo-count-cam.JPG> in the same folder where the <NICE_GUI_B2c.exe> is located. If you do not have the JPG file in the same folder, the software may crash!**
2. Run MCRInstaller.exe. This is done only once.
3. NICE can now be run by launching NICE_GUI_B2c.exe.
4. Follow the directions in this manual for initial tutorial practice.

Updates

Updates to NICE may be posted in <https://github.com/usnistgov/NICE-Public>. If you would like to receive software update alerts, please email jch@nist.gov with your name, institution and contact information.

3 Using NICE

3.1 *Getting started*

Acquire plate images using a digital camera or scanner. See the “Image Acquisition” section for more information.

Launch NICE_GUI_B2c.exe.

(Skip this section if you use windows 10 and move to the next page.)

Two windows will open. The first is a command prompt window which displays output text from the software (Figure 1). This window generally can be ignored, but error messages may be monitored here. If the program appears to have stalled, it is useful to check this window to see if error messages are present. Closing this window will close NICE.


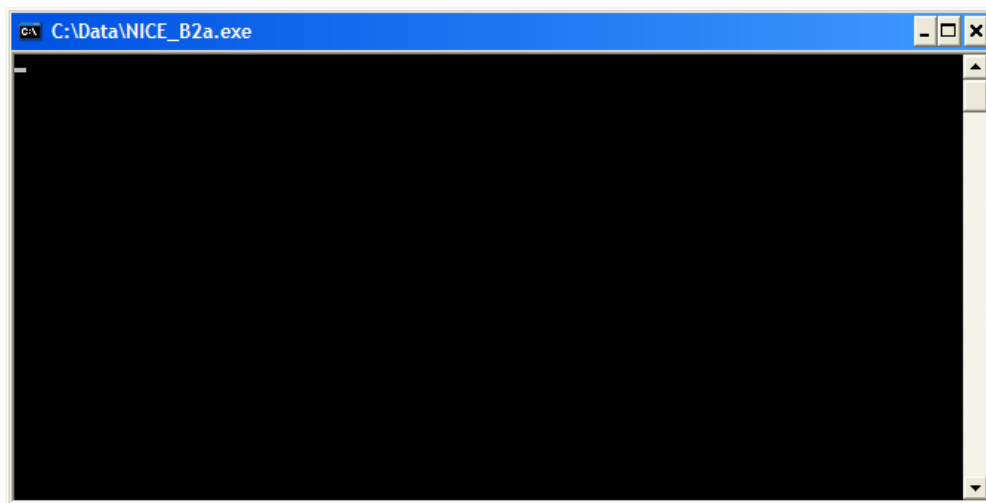


Figure 1. Command prompt window that opens after launching NICE.

The second window (Figure 2) may take some time to load depending on the computer configuration. This is the welcome screen which queries login information. Here, the user can enter information about the experiment: Date (automatically entered), Operator Name, Experiment, and Notes. A default value of 'none' is entered for each field (except date) if the user does not provide information.

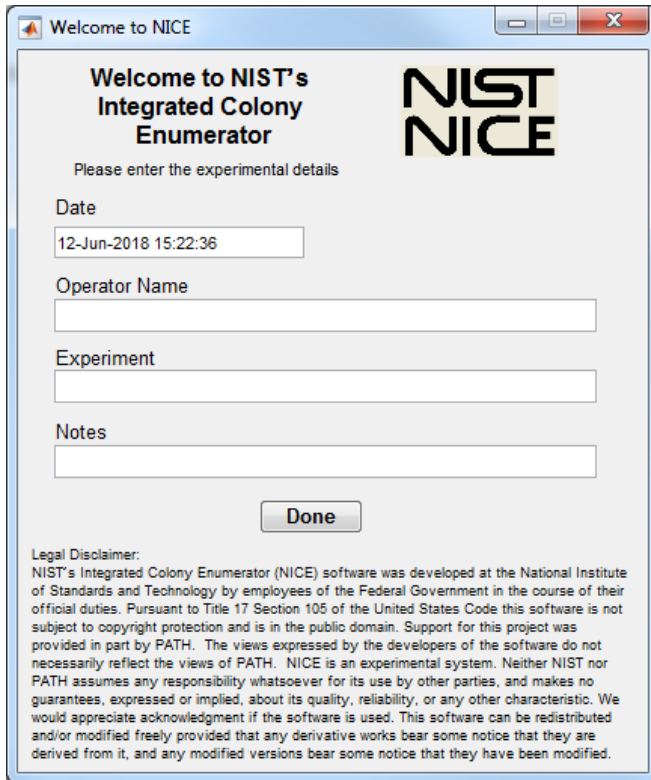

Welcome to NIST's Integrated Colony Enumerator

Please enter the experimental details

Date
12-Jun-2018 15:22:36

Operator Name

Experiment

Notes

Done

Legal Disclaimer:
NIST's Integrated Colony Enumerator (NICE) software was developed at the National Institute of Standards and Technology by employees of the Federal Government in the course of their official duties. Pursuant to Title 17 Section 105 of the United States Code this software is not subject to copyright protection and is in the public domain. Support for this project was provided in part by PATH. The views expressed by the developers of the software do not necessarily reflect the views of PATH. NICE is an experimental system. Neither NIST nor PATH assumes any responsibility whatsoever for its use by other parties, and makes no guarantees, expressed or implied, about its quality, reliability, or any other characteristic. We would appreciate acknowledgment if the software is used. This software can be redistributed and/or modified freely provided that any derivative works bear some notice that they are derived from it, and any modified versions bear some notice that they have been modified.

Figure 2. NICE welcome screen.

After entering the desired information and selecting “Done”, the main window will open (Figure 3).

A demonstration image is automatically loaded.

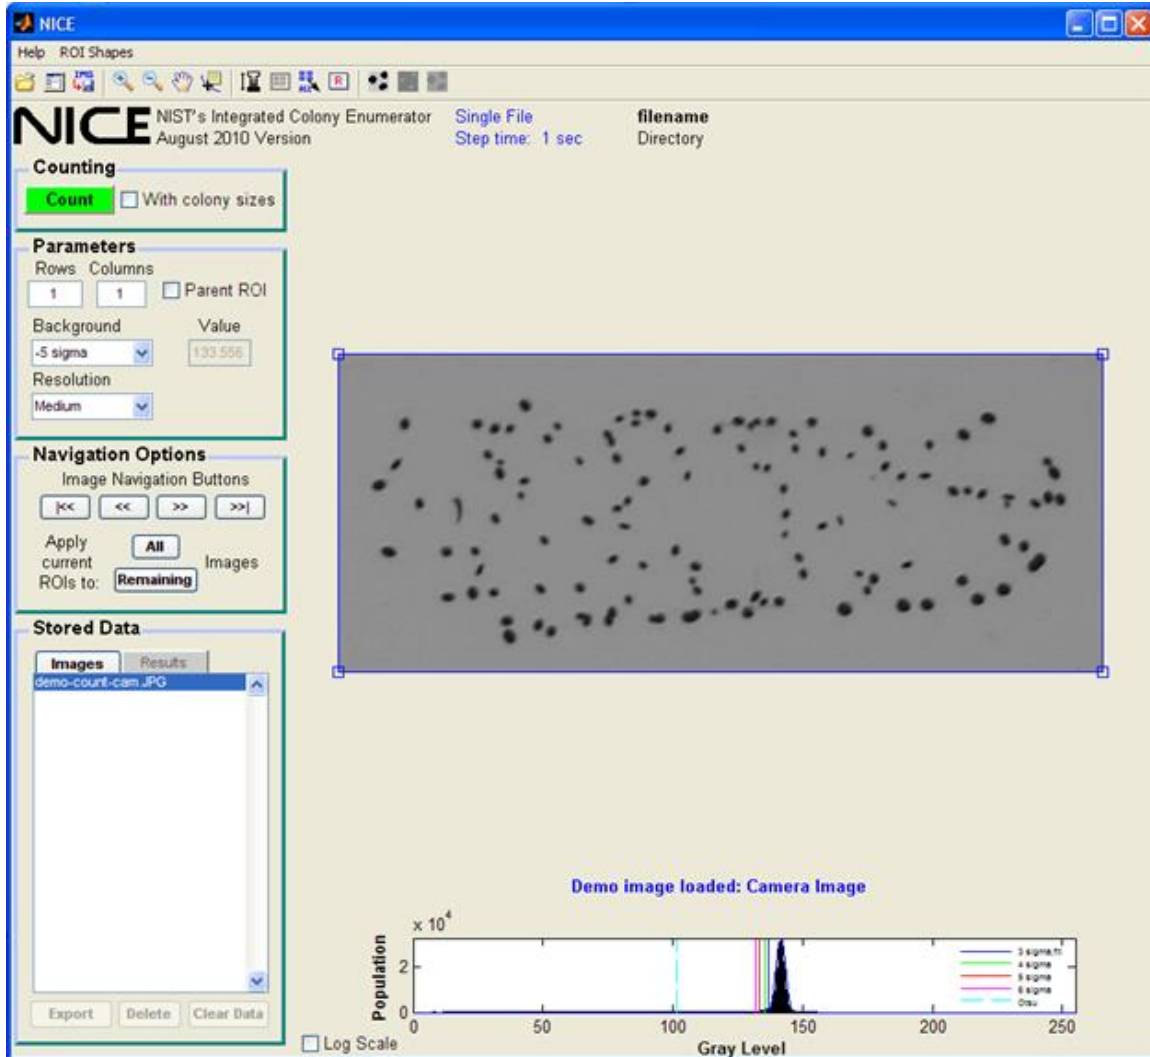


Figure 3. NICE main window.


Help menu:

“Tutorial” launches a window with images and text guiding the user through the basics of NICE. The tutorial is a set of slides that contains a condensed version of this manual. It details the toolbar buttons and the control panels of NICE.

“About” displays information about NICE, including the version number.

3.2 Image Information

The top center of the main window (red circle below) contains information about image files that have been opened and also indicates the elapsed time for various steps.

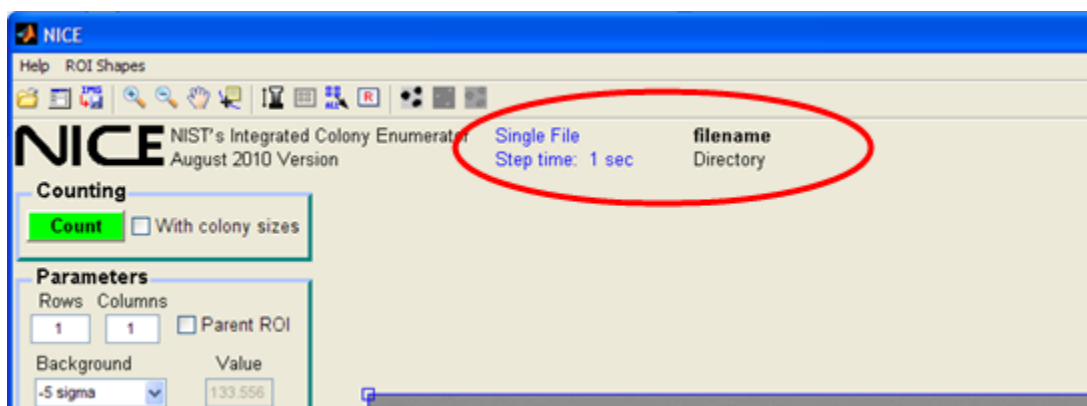

This area indicates the mode: Single File mode if only one image file was opened or Batch File mode if more than one image file was opened. In the Single File mode, the file name and directory will be displayed. In the Batch File mode, the name of the file currently being viewed and the total number of files loaded will be displayed as well as the directory.

This area also displays the Step time which is the time required to execute the last command (open image, count, etc). In the case of batch processing, the time is cumulative.

3.3 ROI: Defining, Moving, and Resizing

ROI Basics:

There are two types of ROIs (**R**egions **O**f **I**nterest) used by NICE: a single parent ROI and a single or multiple individual ROIs. The parent ROI is used to define the total area of an image to be counted. When using a digital camera, area outside of the agar plate will often be included in the image. This extraneous area has no colonies to count and will contain pixels that should not be included in the threshold determination. Defining the parent ROI excludes these areas and obviates the need to crop the images.

Within the parent ROI, the user can create a matrix of individual ROIs. See the description of the “Parameters” window below for more information on creating individual ROIs.

Individual ROIs can be moved by left-clicking and dragging to a new position whilst holding down the left mouse button. The most recently selected ROI will also possess resizing handles (blue squares, see Figure 4). Left-click (hold) and drag on a handle to resize the ROI.

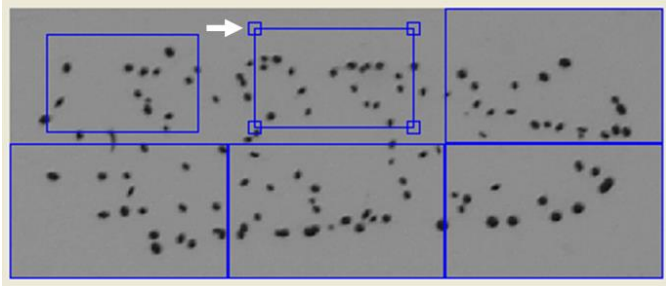


Figure 4. An image with six analysis ROIs. The analysis ROI in the top middle is the active ROI. It has resizing handles displayed at its corners (the white arrow point to one resizing handle).

To move many ROIs at once use the “Drag All ROIs” toolbar button. For more information see the toolbar description below.

ROI shape: Parent ROIs or all individual ROIs can be switched between rectangular and elliptical shapes using the menu “ROI Shapes.” Elliptical parent ROIs are beneficial for images on circular petri dishes. Elliptical individual ROIs can be advantageous for high density plates such as those in Figure 5, where the spotted areas are circular.


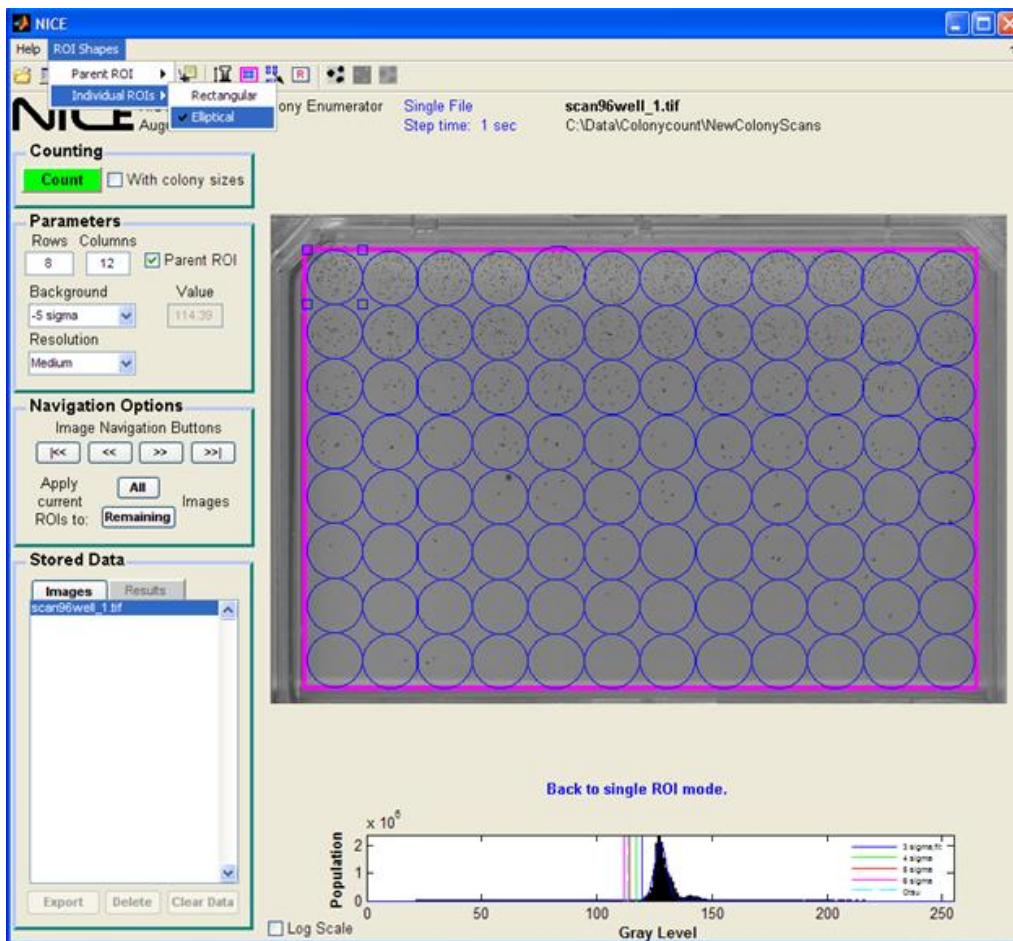


Figure 5. All individual ROIs have been changed to the elliptical shape to better fit this sample.

Resizing handles exist at the rectangle edges defining either ROI shape. Counting will only occur within the confines of the elliptical or rectangular individual ROIs.

ROI shapes should not be changed between the images in a batch run. All files will use the most recently selected ROI shape.

3.4 Toolbar

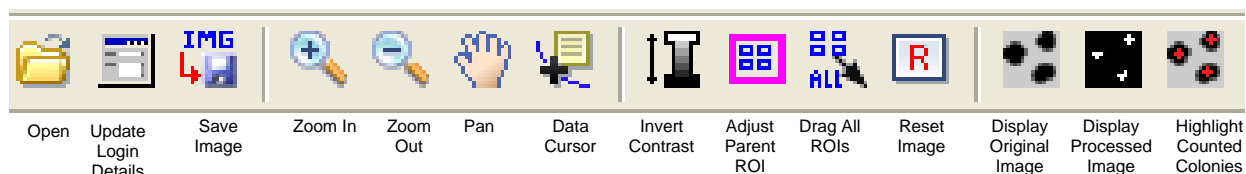


Open: Use to open one or multiple images. Images must be in TIF or JPEG formats. Images may be grayscale or color, though color images will be converted to grayscale when loaded. Images will be forced to 8-bit (0-255 values). After loading, the first image and histogram will be displayed.

Update Login Details: Reopens the login screen and allows user to change any login details. Images that were counted prior to updating the login information will contain the previously entered information, but images counted subsequently will contain the new information.

Save Image: Save an image of the counting area image with or without annotations (e.g., ROI boundaries, counting results), or save an image of the entire NICE window.

Zoom In / Zoom Out / Pan: Interact with the counting image

Data Cursor: Displays information from the pixels in the image. The index displayed is the grayscale value (from 0-255).

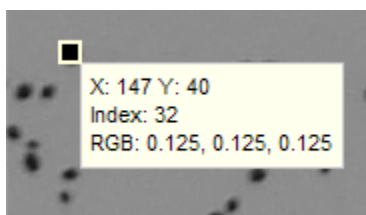

Invert Contrast: Colonies are counted by looking for dark points in the image. Use this function to reverse the contrast of the image.

Adjust Parent ROI: This button is enabled only when the Parent ROI box in the Parameters window is checked. Selecting this command allows the user to move and resize the parent ROI. To save the parent ROI settings, double-click on the image, or reselect this icon. Analysis ROIs will be redrawn once the parent ROI is saved.

Drag All ROIs: Move many individual ROIs at once. This button toggles on or off. Click on the button, then click over any of the individual ROIs to start dragging.

Left-click and drag to move all individual ROIs. Right- or Ctrl-Click to drag columns of individual ROIs. Middle- or Shift-Click to drag rows of individual ROIs. Reselect the button to turn off.

Reset Image: Reloads the image.

Display Original Image: Displays the loaded image, ROIs (parent and individual) and counts. The original view is always available.

Display Processed Image: Displays an image of the minima, with ROIs (parent and individual) and counts. Processed images are only available after counting a single file.

Highlight Counted Colonies: Displays the loaded image, ROIs (parent and individual), counts, and includes a marker indicating each counted colony. Highlighted images are available only after counting (single or multiple images).

Examples of the image after pressing each display icon are shown in Figure 6.


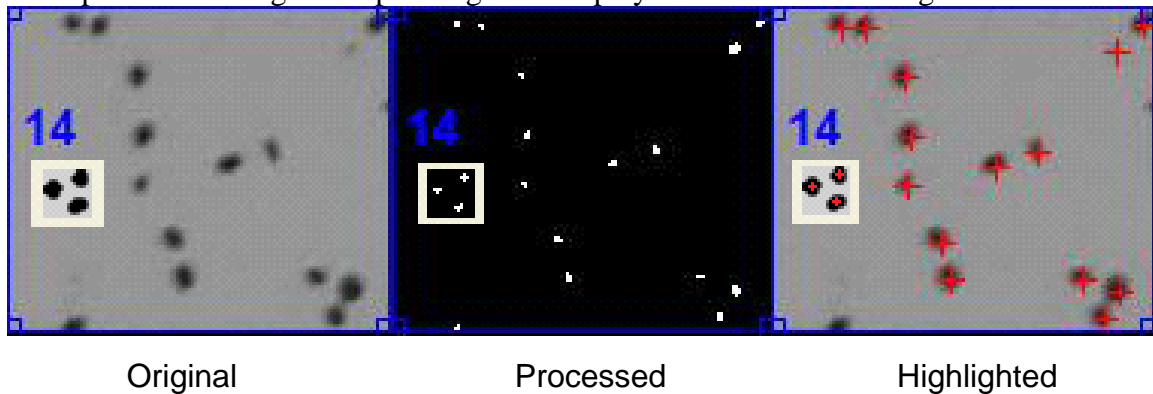


Figure 6. Using the toolbar icons (inset), the opened image can be displayed in different formats.

3.5 NICE Windows


3.5.1 Counting

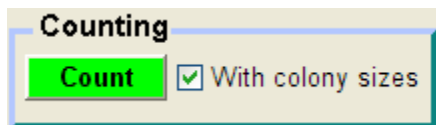

Count: Count the dark spots in the image (and all other loaded images) using the current parameters. Whilst counting, the “Count” button will be colored yellow. After counting, the image will be displayed with the counts displayed on the left side of each ROI.

With colony sizes: Will save the mean colony size for each area. Colony sizes are approximated by Otsu threshold method. Colony sizing is a rough estimation for comparison only. Colony areas are reported in pixels and are only available in the exported data.


3.5.2 Parameters

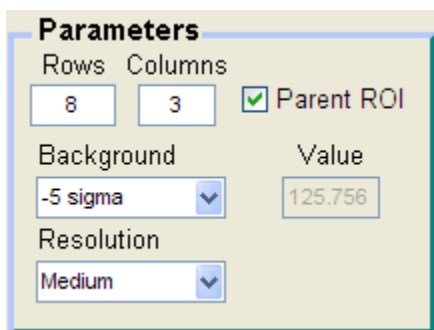

Rows and Columns: Enter the number of individual ROIs within the image that will be analyzed. If only one individual ROI is desired, the values should be set to 1 and 1. Once values are changed, new individual ROIs will be calculated. There is a limit of 25 rows and 25 columns.

Parent ROI: Activate parent ROI feature. See ROIs and Toolbar descriptions above for more information.

Figure 7 presents an example of an image with a parent ROI (magenta) and 24 (8 rows by 3 columns) individual ROIs (blue). The numbers displayed indicate the order in which the individual ROIs will be counted and exported.

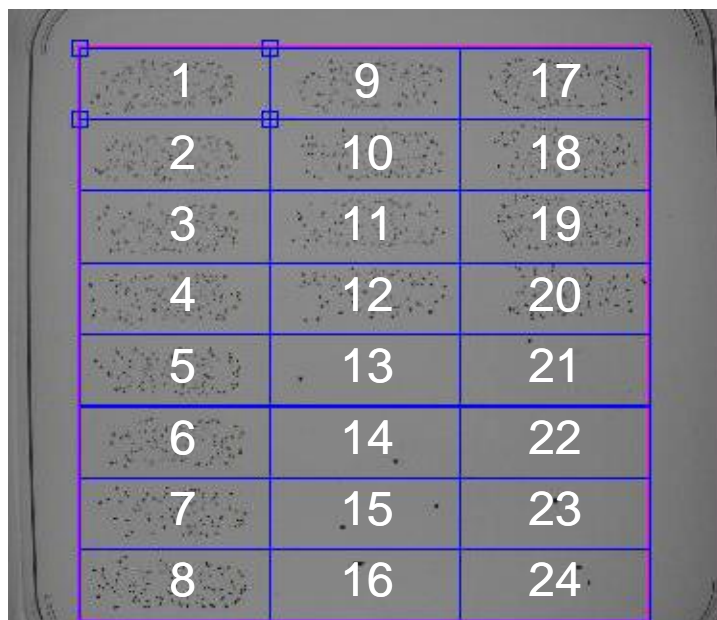

1	9	17
2	10	18
3	11	19
4	12	20
5	13	21
6	14	22
7	15	23
8	16	24


Figure 7. An example of a parent ROI with analysis ROIs numbered according to their export order.

Background Level: The user can select which threshold level to use for counting.

Lines on the histogram indicate the position of these different levels, and the numerical value of the level selected is displayed in the Value box. Alternatively, the user may enter a value by selecting **Manual**, and typing in a value. -5 sigma from the mean value of the background intensity is the default value.

Resolution: Indicates the relative resolution of the image to be counted. The counting parameters are adjusted for optimal results. 300 dpi (dots per inch; ~118 dots per cm) = low; 600 dpi (~236 dots per cm) = medium; 1200 dpi (~472 dots per cm) = high. For images acquired with a digital camera, the medium setting usually works well.

3.5.3 Navigation Options

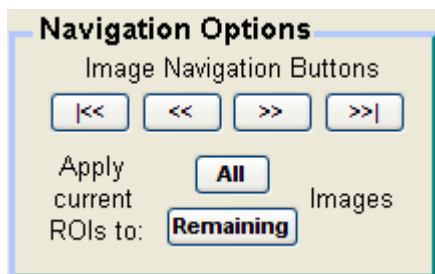


This window allows the user to scroll through images when multiple images were opened. It also allows the user to copy ROIs (parent and individual) of one image to other open images. This is useful in batch processing.

Arrows: Navigate between the images or results.

Apply current ROIs to All or Remaining images: The ROIs for the currently displayed image can be copied to all, or the remaining, images in the batch file.

3.5.4 Stored Data

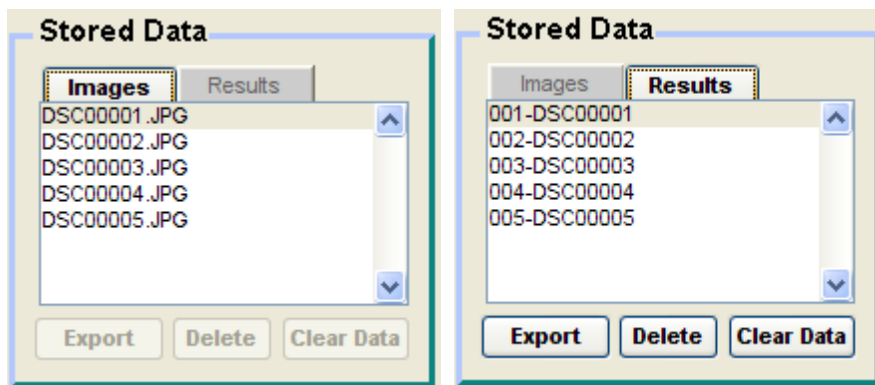


This window allows the user to view loaded images and results counted in that session. Tabs at the top of the panel toggle between the list of loaded images and the list of results.

Images: In the images tab the window lists the loaded files. Files are listed alphabetically, and represent the order in which they will be counted. Double-clicking on the image name will display the image. If ROIs have been created for this image, then those ROIs will be displayed. If ROIs have not been generated, they will be created when loading the image based on the parameters set when the image was opened.

Results: In the results tab the window lists the counted files. Results are listed in the order they were counted. Results are named by the filename along with a numerical prefix indicating the count order. Double-clicking on the result name will display the image with ROIs and counts. However, to save memory, the black and white “processed” image is not stored. Images can be recounted by clicking the count button. Results will be saved as a new result, i.e. the same file name but a different numerical prefix.

Export: Write all stored results to an MS Excel or text file. First a dialog will ask whether to export all the results or just the currently selected ones. Next, a dialog will open to allow the user to select a filename and location. If the filename exists, the user will be asked if they wish to overwrite. In the case of Excel files, only the sheet within the file will be overwritten. A second window will pop up, asking the user to enter a worksheet name where the data will be saved. If the sheet exists (even if it is blank), the user will be asked if they wish to overwrite it. Data cannot be saved to files that are currently opened.

An example of the output file is shown in Figure 8.

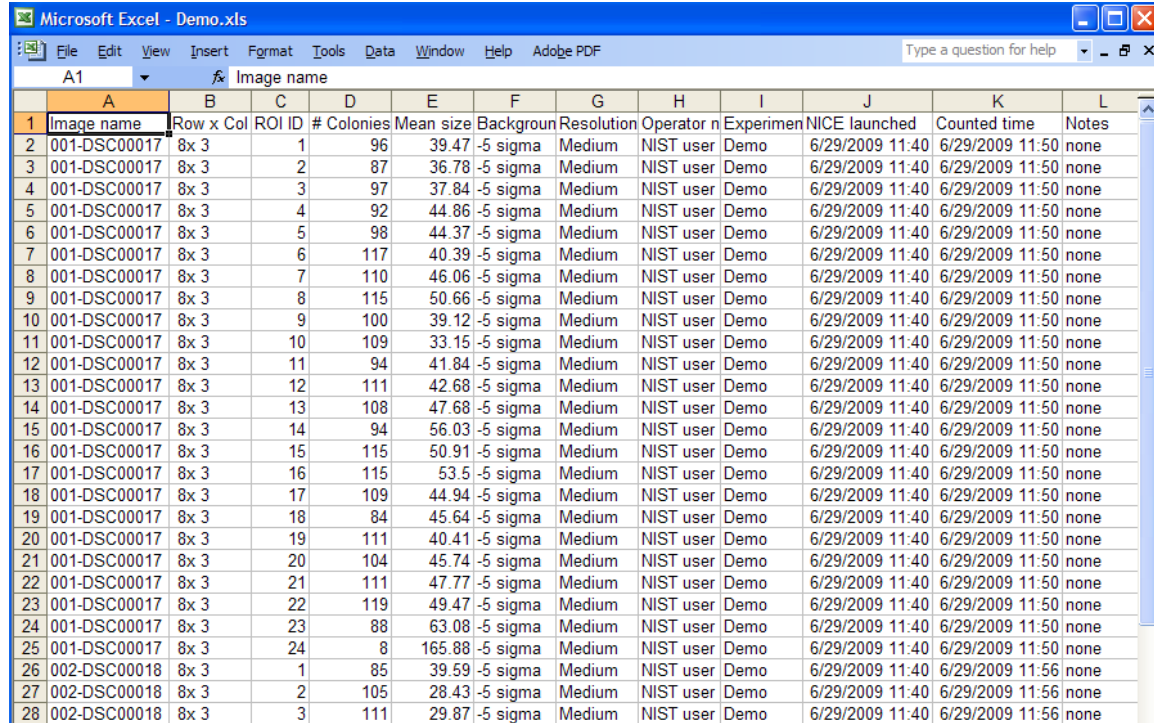

	A	B	C	D	E	F	G	H	I	J	K	L
	Image name	Row x Col	ROI ID	# Colonies	Mean size	Background	Resolution	Operator n	Experiment	NICE launched	Counted time	Notes
1	001-DSC00017	8x 3	1	96	39.47	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
2	001-DSC00017	8x 3	2	87	36.78	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
3	001-DSC00017	8x 3	3	97	37.84	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
4	001-DSC00017	8x 3	4	92	44.86	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
5	001-DSC00017	8x 3	5	98	44.37	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
6	001-DSC00017	8x 3	6	117	40.39	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
7	001-DSC00017	8x 3	7	110	46.06	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
8	001-DSC00017	8x 3	8	115	50.66	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
9	001-DSC00017	8x 3	9	100	39.12	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
10	001-DSC00017	8x 3	10	109	33.15	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
11	001-DSC00017	8x 3	11	94	41.84	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
12	001-DSC00017	8x 3	12	111	42.68	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
13	001-DSC00017	8x 3	13	108	47.68	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
14	001-DSC00017	8x 3	14	94	56.03	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
15	001-DSC00017	8x 3	15	115	50.91	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
16	001-DSC00017	8x 3	16	115	53.5	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
17	001-DSC00017	8x 3	17	109	44.94	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
18	001-DSC00017	8x 3	18	84	45.64	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
19	001-DSC00017	8x 3	19	111	40.41	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
20	001-DSC00017	8x 3	20	104	45.74	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
21	001-DSC00017	8x 3	21	111	47.77	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
22	001-DSC00017	8x 3	22	119	49.47	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
23	001-DSC00017	8x 3	23	88	63.08	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
24	001-DSC00017	8x 3	24	8	165.88	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:50	none
25	002-DSC00018	8x 3	1	85	39.59	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:56	none
26	002-DSC00018	8x 3	2	105	28.43	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:56	none
27	002-DSC00018	8x 3	3	111	29.87	-5 sigma	Medium	NIST user	Demo	6/29/2009 11:40	6/29/2009 11:56	none

Figure 8 A demonstration export file. The analysis involved counting two 8 rows x 3 columns plates. Only a portion of the results are shown in this image.

Delete: Delete the selected stored data. If all files are selected then the file count will be reset to 001. Some temporary data may still exist, but will be overwritten.

Clear List: Clear all stored data. The file count will be reset to 001. Some temporary data may still exist, but will be overwritten.

An example of the program after counting a file is presented in Figure 9. Displayed is an image with 24 ROIs with minor adjustments to the ROIs.


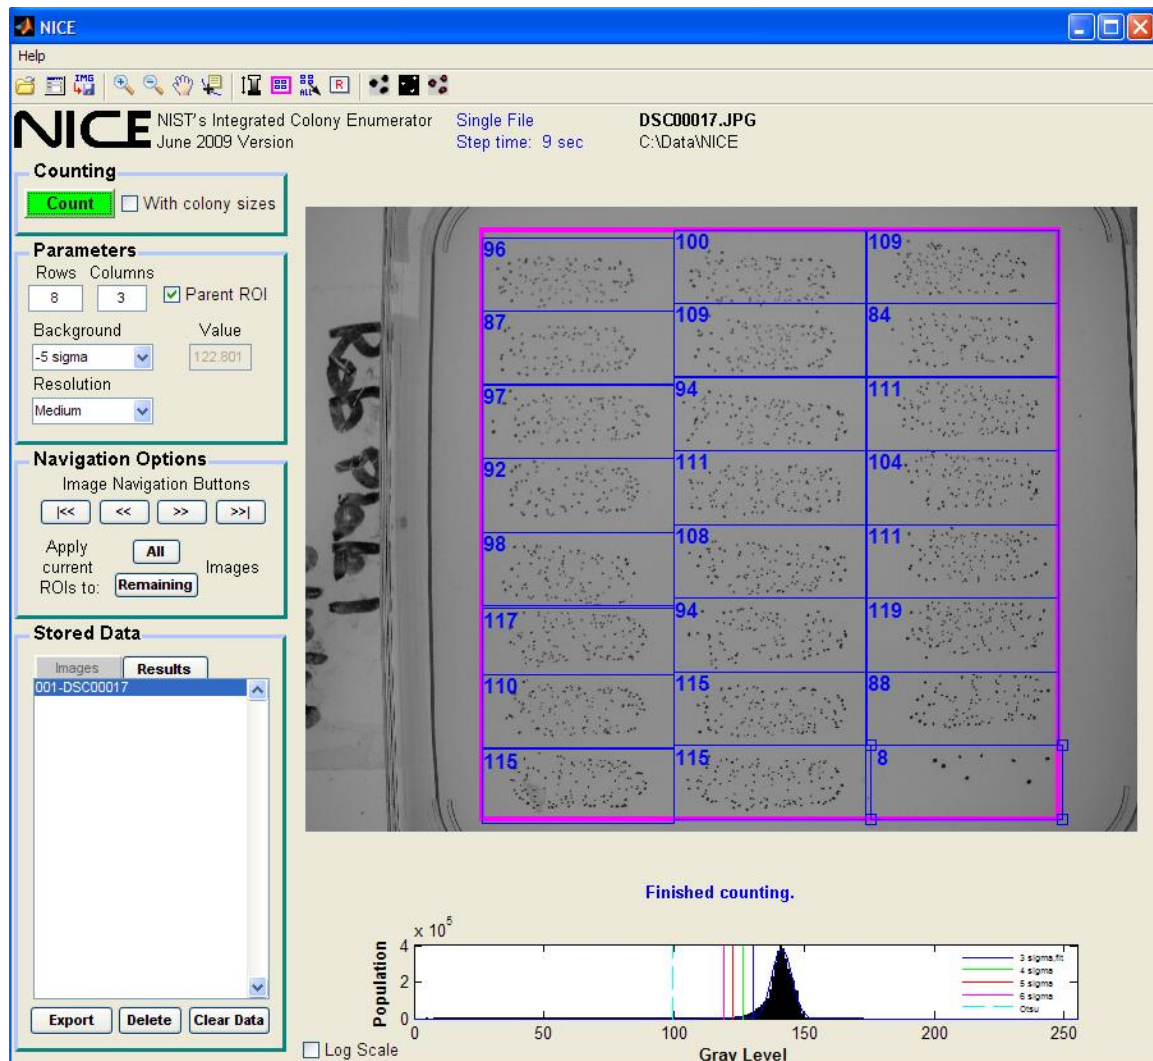


Figure 9. After counting an image the number of colonies counted in each analysis ROI is displayed in blue in the upper-left corner of the ROI.

3.5.5 Histogram

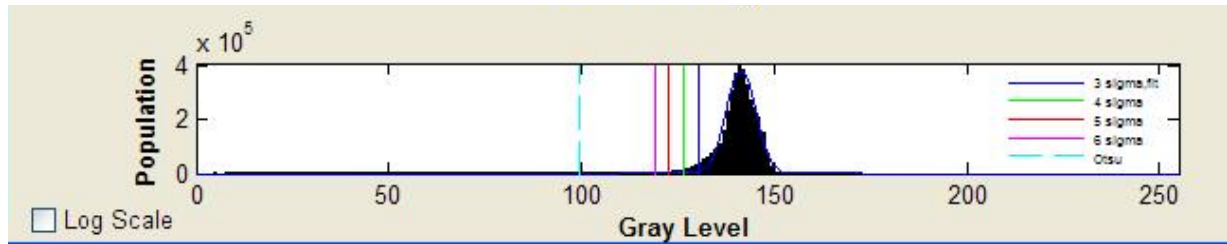

Each time an image is opened, the histogram (pixel intensities versus occurrences) of that image will be displayed. It represents the population of pixels with a given gray level. 0 corresponds to black pixels, while 255 corresponds to white. Background pixels will dominate the histogram. The background histogram will be fit using a Gaussian function (dark blue) and the mean minus 3, 4, 5, and 6 sigma will be indicated with the blue, green, red, and pink lines, respectively. The threshold based on the Otsu method is indicated by the dashed cyan line.

NICE fits the histogram to determine the mean background level and distribution. During counting, the threshold level is queried to determine if a count is valid.

During counting in Batch mode, the histogram fits are calculated, but the fitting lines are not displayed.

Log scale: Displays the histogram with a logarithmic (base 10) y-axis.

4 Counting Procedure


1. Open an image file or multiple image files.
2. Set the number of rows and columns for the individual ROI grid needed.
3. Set the counting parameters.
 - a. Set the background threshold (default is -5 sigma from the mean value of the background intensity).
 - b. Set the resolution (default is medium).

You may need to perform some initial testing to determine which parameters are best for your image acquisition system.

4. Create a parent ROI (if needed).
 - a. Click on the parent ROI check box.
 - b. Resize the parent ROI (by the “Adjust Parent ROI” toolbar icon).
 - c. Accept the parent ROI by double-clicking or selecting the Adjust Parent ROI” toolbar icon again.
 - d. After resizing the parent, the individual ROIs will be placed within the parent.
5. Make any adjustments needed to the position of the individual ROIs.
 - a. Single ROIs can be moved by clicking and dragging them to the new position.
 - b. Columns or rows of ROIs (or all ROIs) can be moved by selecting the “All ROI” toolbar icon.
 - c. If counting multiple images, use the navigation buttons to scroll through all loaded images and make any adjustments required to each image or use the same set of individual ROIs when adjustment is not necessary.
6. Press the “Count” button.
 - a. The elapsed time will be updated after each image is counted.
 - b. Once counting completes for each image, the image will be displayed with a counted colony number on the left hand side of each individual ROI.
7. Examine the results.
 - a. Users can view the image with a marker over each colony by pressing the “Highlight Counted Colonies” icon in the toolbar.
 - b. The processed image can be viewed using the “Display Processed Image” icon in the toolbar. NICE will display a black and white image of the local minima of colonies (only allowed after single image counting).
 - c. You view counting results by using the navigation buttons while in the “Results” tab, or by double-clicking on the result in the data list.
8. Export the results.
 - a. Users have the option of exporting all or selected results.
 - b. Results can be exported to Microsoft Excel or tab-delimited text files.

5 How NICE Counts

The basic algorithm of NICE is as follows:

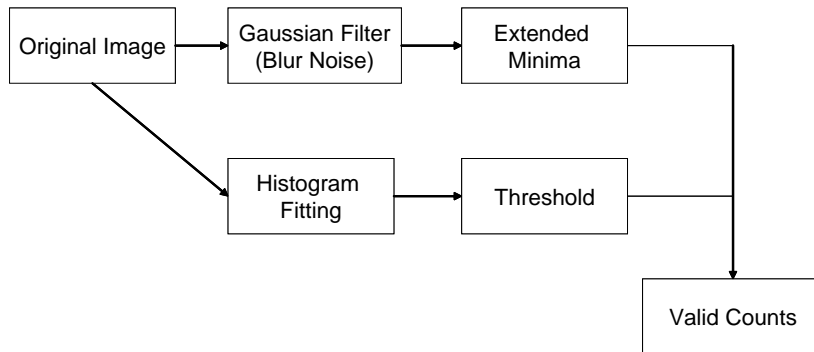

5.1 Finding Minima

Colonies are observed as dark spots in the image. These can be considered as low points in a topographic map. NICE selects colonies based on these regional low intensity pixels. However before doing so, image pixel noise needs to be reduced. The pixel noise may vary due to the acquisition method. From our testing of document scanners, we determined several settings to lightly blur the image, smoothing out this noise. The degree of smoothing needed is dependent on the scanner resolution. High resolution images had more noise per colony (because more pixels are present in each colony), and therefore a larger filter was applied.

For images acquired by a digital camera, we observed that less noise was present. This can partly be attributed to the compression algorithm of the camera causing the pixels to be smoothed. If no significant noise is observed, setting the resolution to “Medium” is recommended.

5.2 Choosing a threshold

Only minima found with a mean intensity below the threshold will be counted. NICE uses a dynamic method to determine a threshold for the image. The histogram of the image is analyzed. The histogram will be dominated by pixels from the background. The goal is to find the approximate mean background intensity and the width of the background signal. This is accomplished by fitting the histogram to a Gaussian function. While a Gaussian function may not produce an ideal fit for every image, it is suitable for this purpose.

After fitting, the standard deviation (sigma, σ) of the background is used to determine the threshold. A minimum of -3σ (fitted center of the Gaussian – 3 standard deviations) is required. The default setting is -5σ . Choosing larger $-\sigma$ values (i.e., choosing a lower intensity threshold) will only allow for darker regions to be counted.

6 Image Acquisition

Plate images can be acquired using a consumer digital camera or office scanner. If a digital camera is used, an illuminator and camera stand will be required. In preliminary testing performed at the University of Alabama at Birmingham, the set-up presented in Figure 10 worked well.

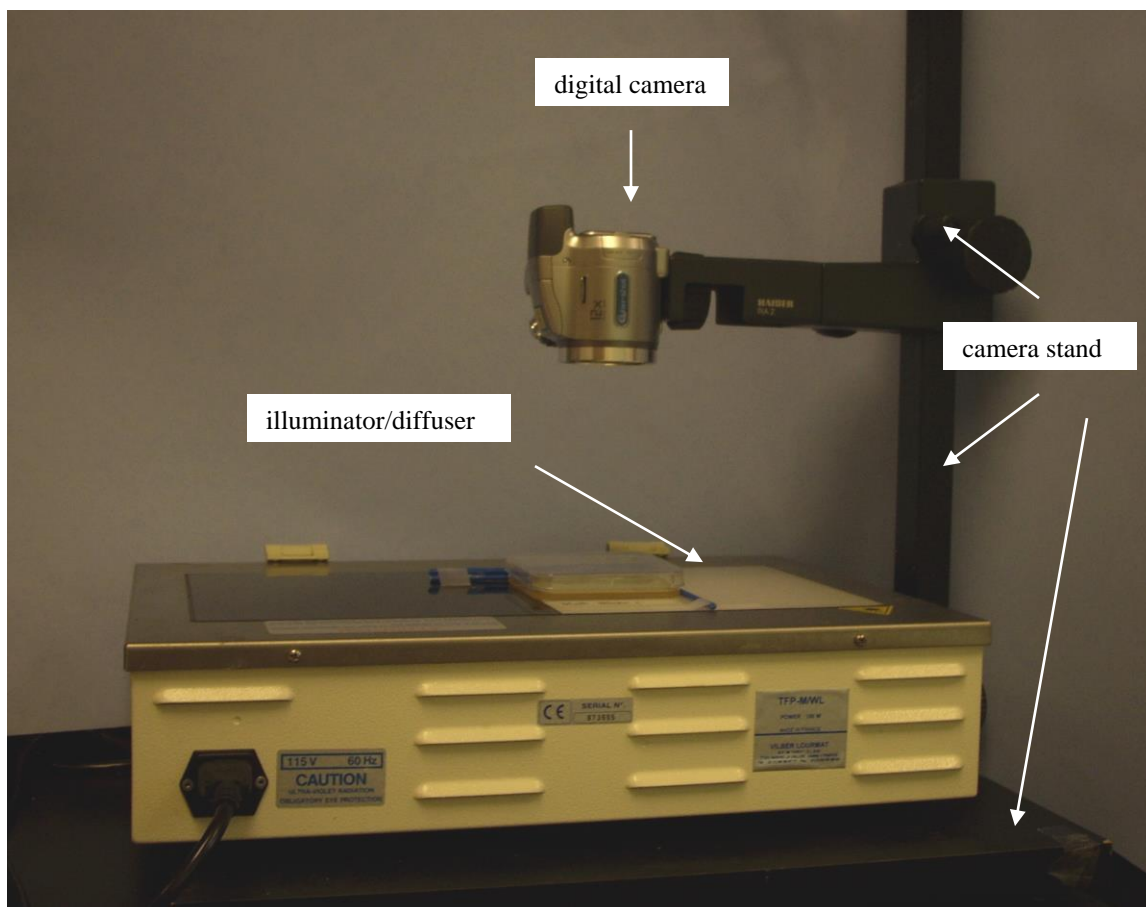


Figure 10. Image acquisition station using a digital camera.

By adding an immobile plate guide (Figure 11), the speed of image acquisition from multiple plates can be increased. Also, the position of the spots on the agar plate will be more consistent, resulting in less time to re-position individual ROIs.

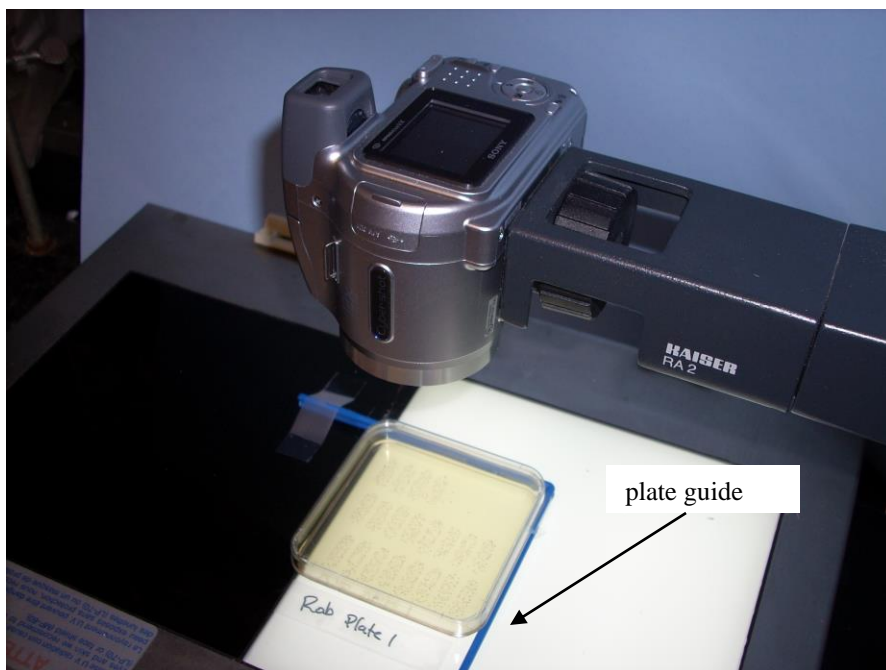


Figure 11. The plate guide allows for fast alignment of samples.

7 NICE Version History

Version 1.0: Initial release version (August 2009).

Version 1.1: Minor tweak to counting algorithm (October 2009).

Version 1.2: Added ROI shape option (August 2010).

Version 1.2.1: Minor debugging. (October 2010).

Version 1.3: Revised for Windows 7 64 bit compatibility (June 2018).

Version 1.4: Revised for Windows 10 64 bit compatibility (April 2020).

8 Legal Disclaimers

This software was developed by employees of the National Institute of Standards and Technology (NIST), an agency of the Federal Government and is being made available as a public service. Pursuant to title 17 United States Code Section 105, works of NIST employees are not subject to copyright protection in the United States. This software may be subject to foreign copyright. Permission in the United States and in foreign countries, to the extent that NIST may hold copyright, to use, copy, modify, create derivative works, and distribute this software and its documentation without fee is hereby granted on a non-exclusive basis, provided that this notice and disclaimer of warranty appears in all copies.

THE SOFTWARE IS PROVIDED 'AS IS' WITHOUT ANY WARRANTY OF ANY KIND, EITHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY THAT THE SOFTWARE WILL CONFORM TO SPECIFICATIONS, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND FREEDOM FROM INFRINGEMENT, AND ANY WARRANTY THAT THE DOCUMENTATION WILL CONFORM TO THE SOFTWARE, OR ANY WARRANTY THAT THE SOFTWARE WILL BE ERROR FREE. IN NO EVENT SHALL NIST BE LIABLE FOR ANY DAMAGES, INCLUDING, BUT NOT LIMITED TO, DIRECT, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES, ARISING OUT OF, RESULTING FROM, OR IN ANY WAY CONNECTED WITH THIS SOFTWARE, WHETHER OR NOT BASED UPON WARRANTY, CONTRACT, TORT, OR OTHERWISE, WHETHER OR NOT INJURY WAS SUSTAINED BY PERSONS OR PROPERTY OR OTHERWISE, AND WHETHER OR NOT LOSS WAS SUSTAINED FROM, OR AROSE OUT OF THE RESULTS OF, OR USE OF, THE SOFTWARE OR SERVICES PROVIDED HEREUNDER.

Support for this project was provided in part by PATH. The views expressed by the developers of the software do not necessarily reflect the views of PATH. NICE is an experimental system. Neither NIST nor PATH assumes any responsibility whatsoever for its use by other parties, and makes no guarantees, expressed or implied, about its quality, reliability, or any other characteristic. We would appreciate acknowledgment if the software is used. This software can be redistributed and/or modified freely provided that any derivative works bear some notice that they are derived from it, and any modified versions bear some notice that they have been modified.

Certain commercial equipment, instruments, or materials are identified in this paper in order to specify the experimental procedure adequately. Such identification is not intended to imply recommendation or endorsement by the National Institute of Standards and Technology, nor is it intended to imply that the materials or equipment identified are necessarily the best available for the purpose.