













```

Configure interface eth2? [Yes/No]:n
Configure interface eth3? [Yes/No]:n
Enter ip-address of the default gateway :
Incorrect input: '' is not a valid IP-address
Please try again
Enter ip-address of the default gateway : 8.9.10.2
Do you want to use DNS server? [Yes/No] : n
Do you want to use NTP daemon to synchronize the time? [Yes/No] : n
Enter hostname (default hw-va-322b000a)
Only latin letters, digits and '-' symbols are allowed (2-63 symbols)
Or press Enter to leave default value :
The current virtual IP address range is: 11.0.0.1/8
Do you want to specify custom virtual IP address range? [Yes/No] : n
Do you want to probe VPN-connection with some host in order to verify the configuration you've just made? [Yes/No] : n
Do you want to start VPN services before leaving the installation wizard? [Yes/No] : y
Do you want to start the command shell now? [Yes/No] : y

Restarting system log daemon: syslogd.
Loading VPN modules
eth0: autoneg on
eth0: ip 1.2.3.1 netmask 255.255.255.240 broadcast 1.2.3.15 up
eth1: autoneg on
eth1: ip 8.9.10.1 netmask 255.255.255.0 broadcast 8.9.10.255 up
eth2: autoneg on
eth2: down
eth3: autoneg on
eth3: down
Awaiting initialization of executor for 30 seconds...
Warning: to avoid problems please check configuration carefully
Check Kernel Interface driver
Check Iplir Watchdog driver
Check Iplir Crypto driver
Check Iplir driver
Starting failover daemon. Used single mode
Setup is successfully completed.
Loading command shell, please wait...
Starting the command line interface of Platform: HW-VA
hw-va-322b000a> _

```