

<<subsystem>>

nic-emu-cli

libnic-emu

Intel 82540EM
Behavioral model

Access PCI regions

DMA & Trigger interrupts

libvfiio-user

Send & Receive
Ethernet frames

Manage timer

vfiio-user
UNIX socket

Tap interface

TimerFd

Hypervisor

