




Power Supply

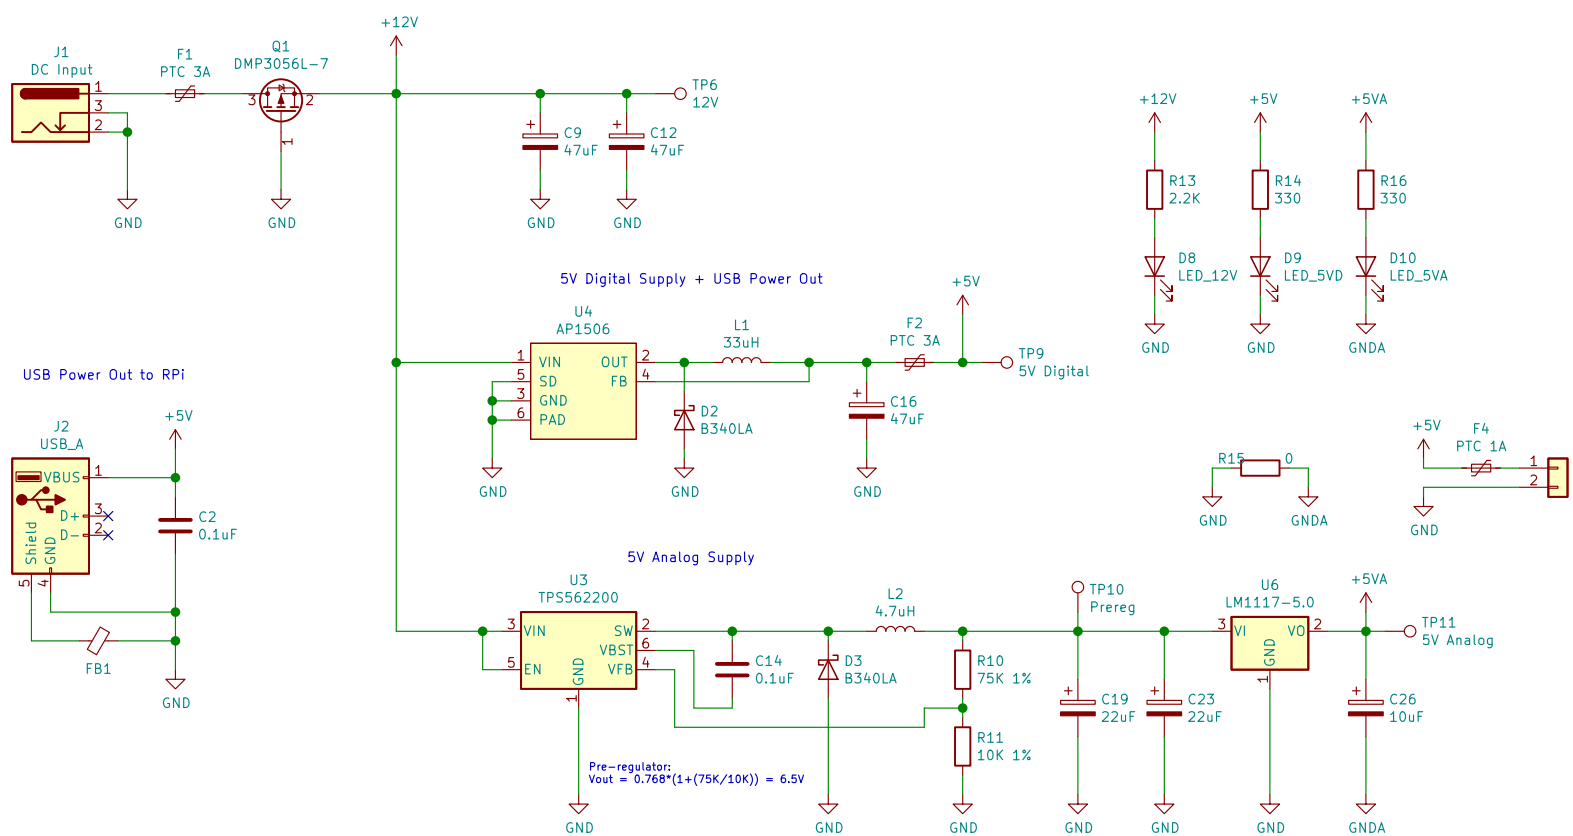


Alarm Output

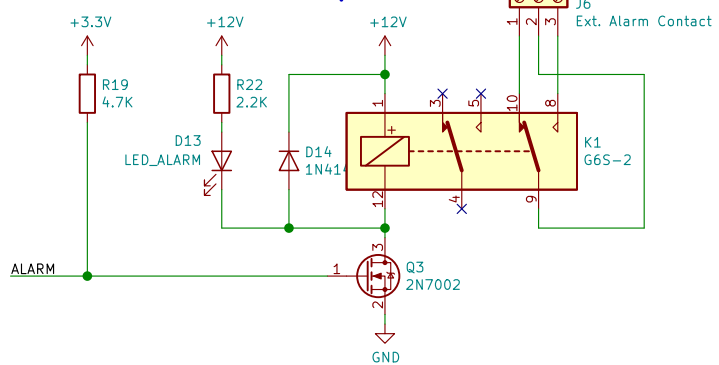


Carrier-operated Squelch

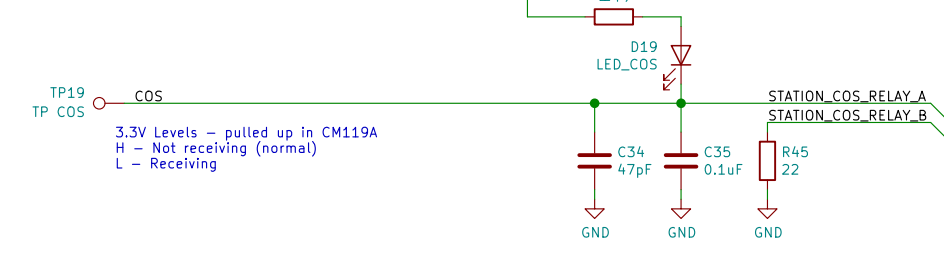


PL Active

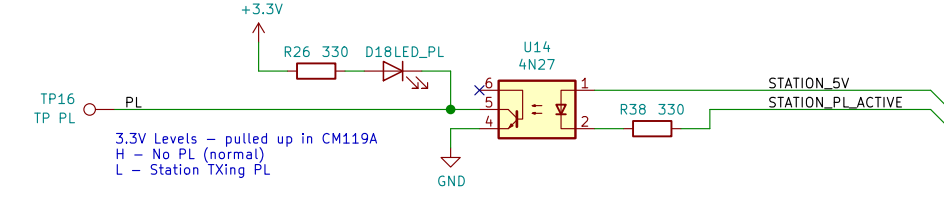


PTT and Failsoft

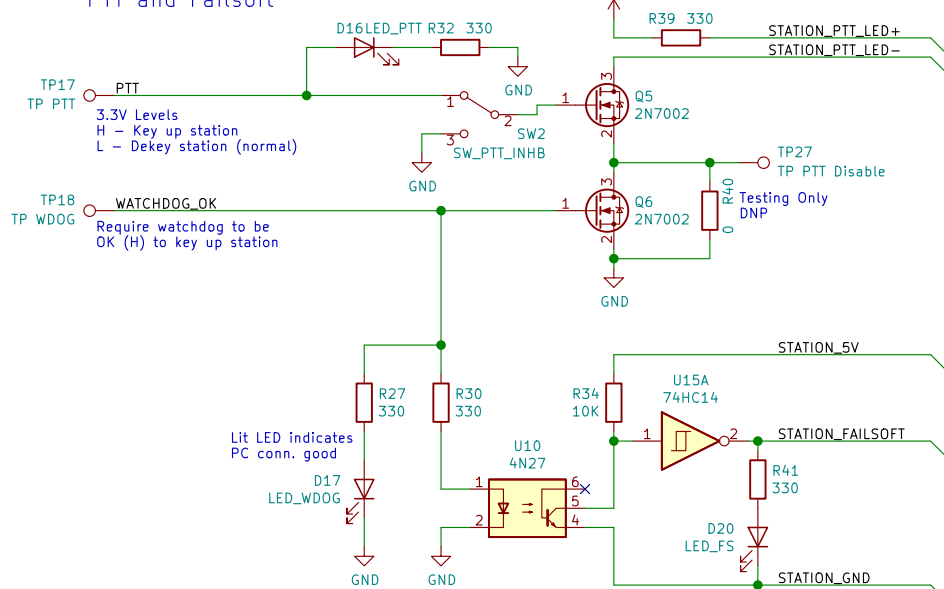


TX Inhibit

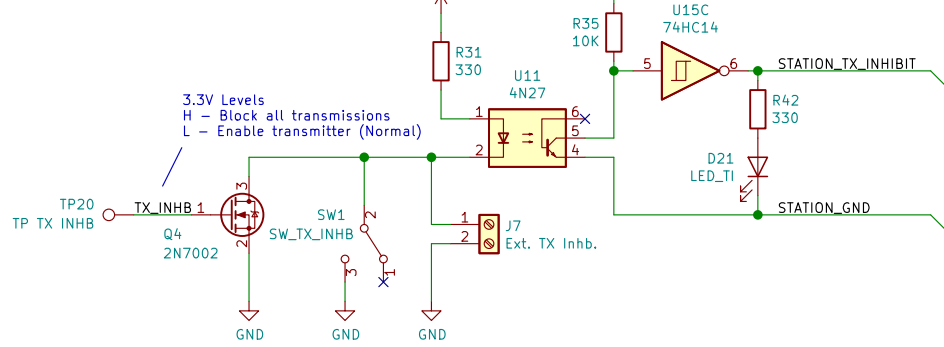


Scan Disable

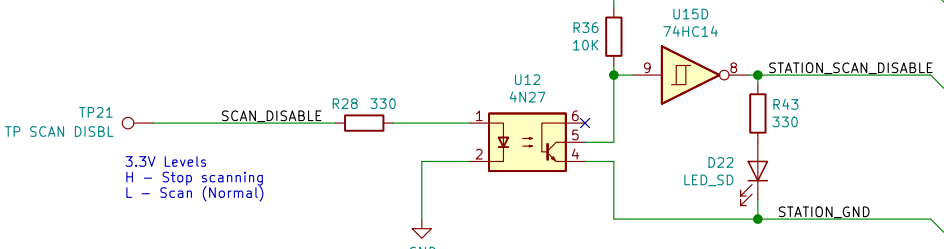


Spare Input

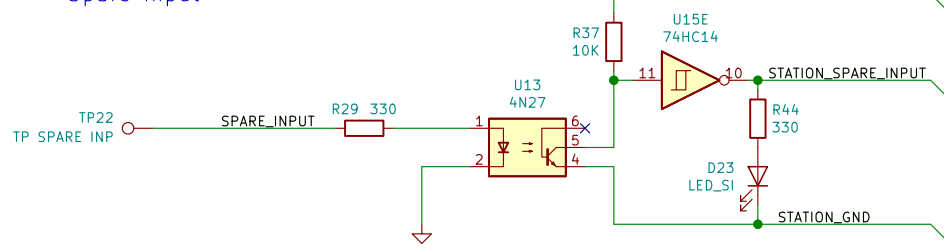


Alarm

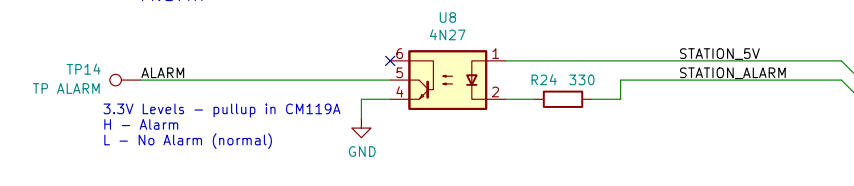


Spare Output

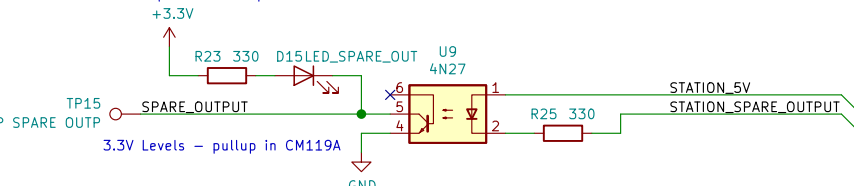








USB Codec

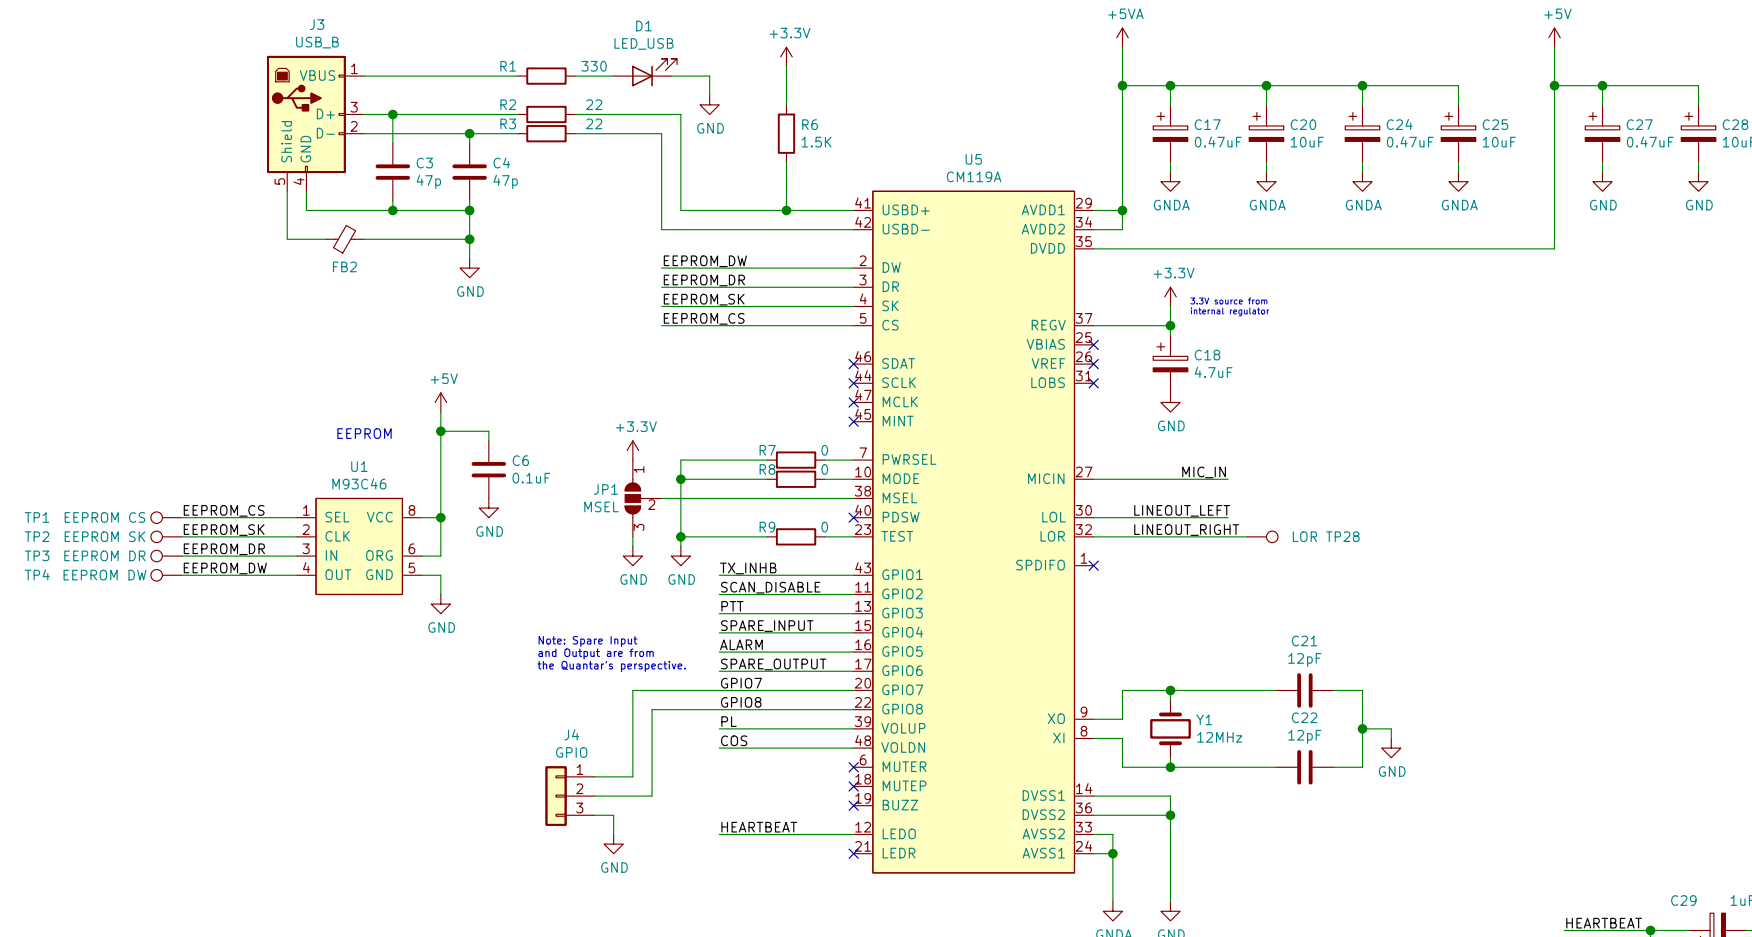

Audio I/O

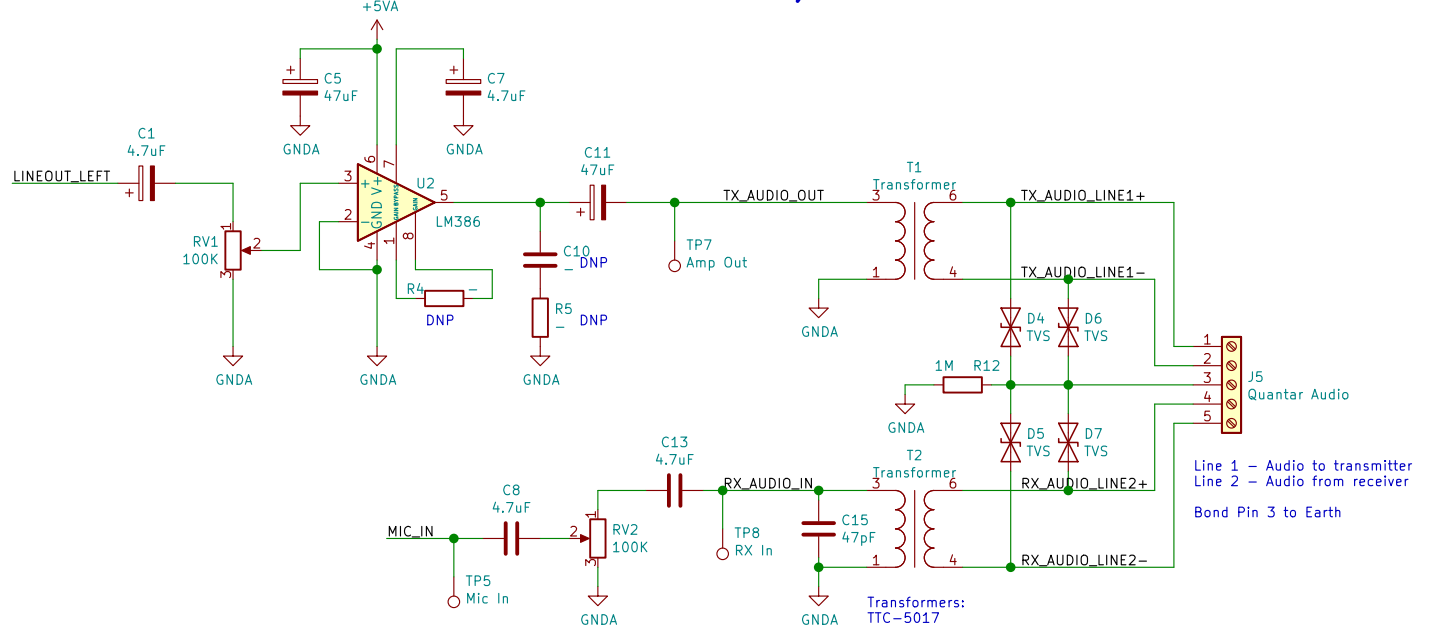

Watchdog

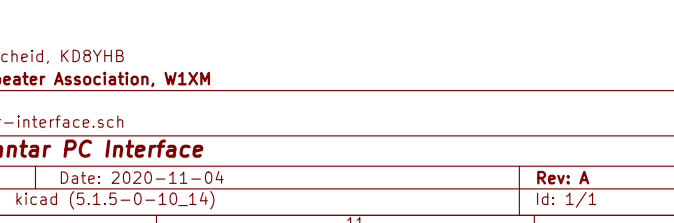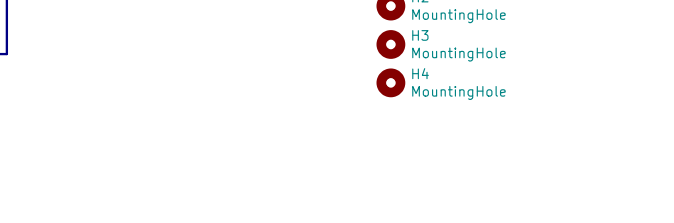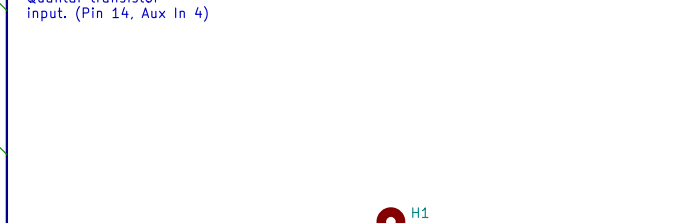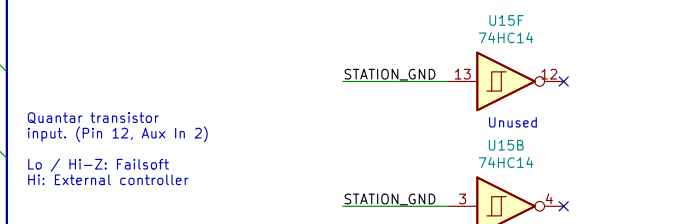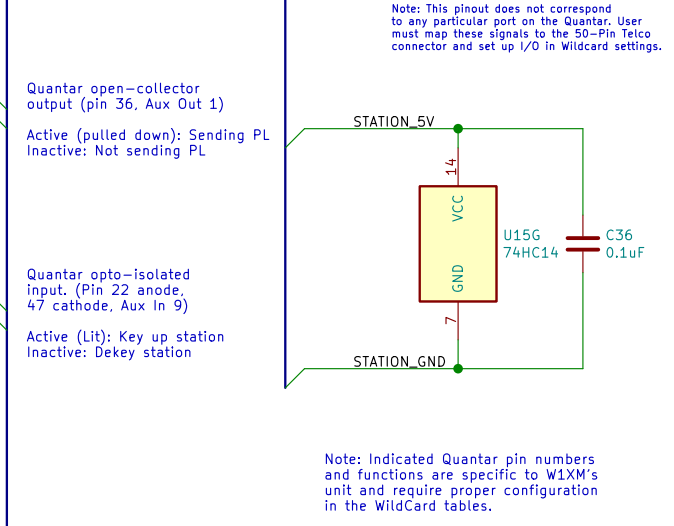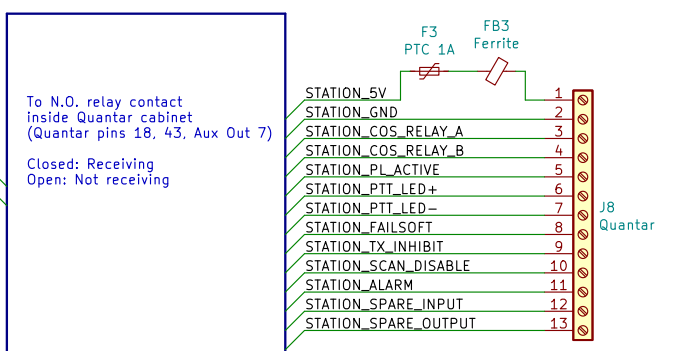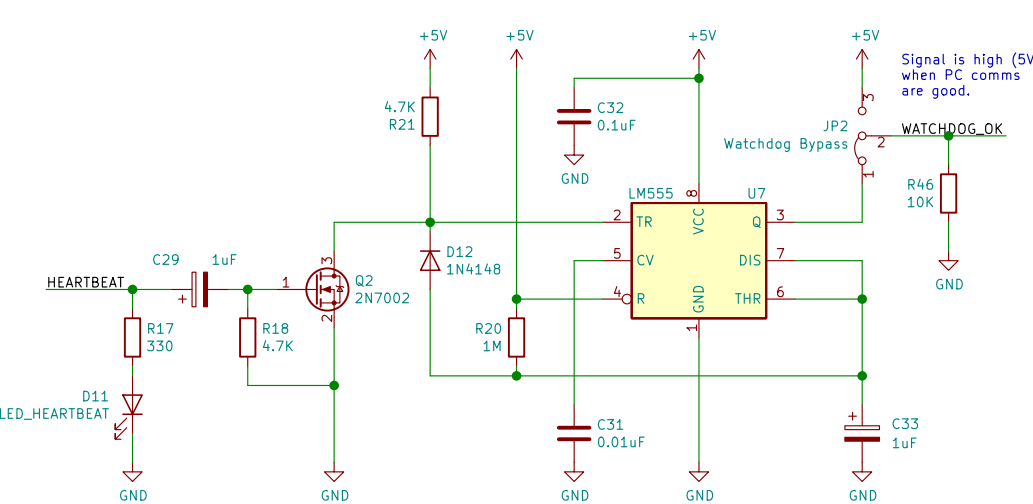

Drafted By
Tristan Honscheid, K8BYH8
MIT UHF Repeater Association, W1XM
Sheet: /
File: quantar-interface.sch
Title: Quantar PC Interface
Size: A2 Date: 2020-11-04 Rev: A
KiCad E.D.A. kicad (5.1.5-0-10.14) Id: 1/1