

GM8136

GENERAL-PURPOSE INPUT/OUTPUT (GPIO)

User Guide

Rev.: 1.0

Issue Date: September 2014



For Faraday Technology Corp
(24610)

REVISION HISTORY

GM8136 GPIO User Guide

Date	Rev.	From	To
Sept. 2014	1.0	-	Original

Copyright © 2014 Grain Media, Inc.

All Rights Reserved.

Printed in Taiwan 2014

Grain Media and the Grain Media Logo are trademarks of Grain Media, Inc. in Taiwan and/or other countries. Other company, product and service names may be trademarks or service marks of others.

All information contained in this document is subject to change without notice. The products described in this document are NOT intended for use in implantation or other life support application where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Grain Media's product specification or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Grain Media or third parties. All information contained in this document was obtained in specific environments, and is presented as an illustration. The results obtained in other operating environments may vary.

THE INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED ON AN "AS IS" BASIS. In no event will Grain Media be liable for damages arising directly or indirectly from any use of the information contained in this document.

Grain Media, Inc.
5F, No. 5, Li-Hsin Road III, Hsinchu Science Park, Hsinchu City, Taiwan 300, R.O.C.

Grain Media's home page can be found at:
<http://www.grain-media.com>

For Faraday Technology Corp
(24610)

TABLE OF CONTENTS

Chapter 1	GPIO Configuration	1
1.1	GPIO Overview	2
1.2	Options about GPIO in Linux Kernel	3
1.3	Examples of GPIO Usage	4
1.4	GPIO in User Space	5
1.5	Related File	6

For Faraday Technology Corp
(24610)

LIST OF FIGURES

Figure 1-1.	Control Flow of GPIO	2
Figure 1-2.	Build FTGPIO010	3
Figure 1-3.	sysfs of FTGPIO010.....	3
Figure 1-4.	Example of Using GPIO Input as Interrupt Code	4
Figure 1-5.	sysfs Setting for GPIO.....	5

Chapter 1

GPIO Configuration

This chapter contains the following sections:

- 1.1 GPIO Overview
- 1.2 Options about GPIO in Linux Kernel
- 1.3 Examples of GPIO Usage
- 1.4 GPIO in User Space
- 1.5 Related File

1.1 GPIO Overview

General-Purpose Input/Output (a.k.a. GPIO) is a common interface of SoC. Users can configure a GPIO pin as an input or output. When the GPIO pin is configured as an output, this pin can be set to the high voltage or low voltage. When the GPIO pin is configured as an input, this pin can be used to detect the voltage level. Moreover, an input pin may be configured as an external interrupt source.

GM8136 provides two ports for GPIO. Each port has 32 pins, which can be individually configured. Please make sure that the pins are well multiplexed before using them. Figure 1-1 illustrates the control flow when a kernel GPIO function is called by the driver.

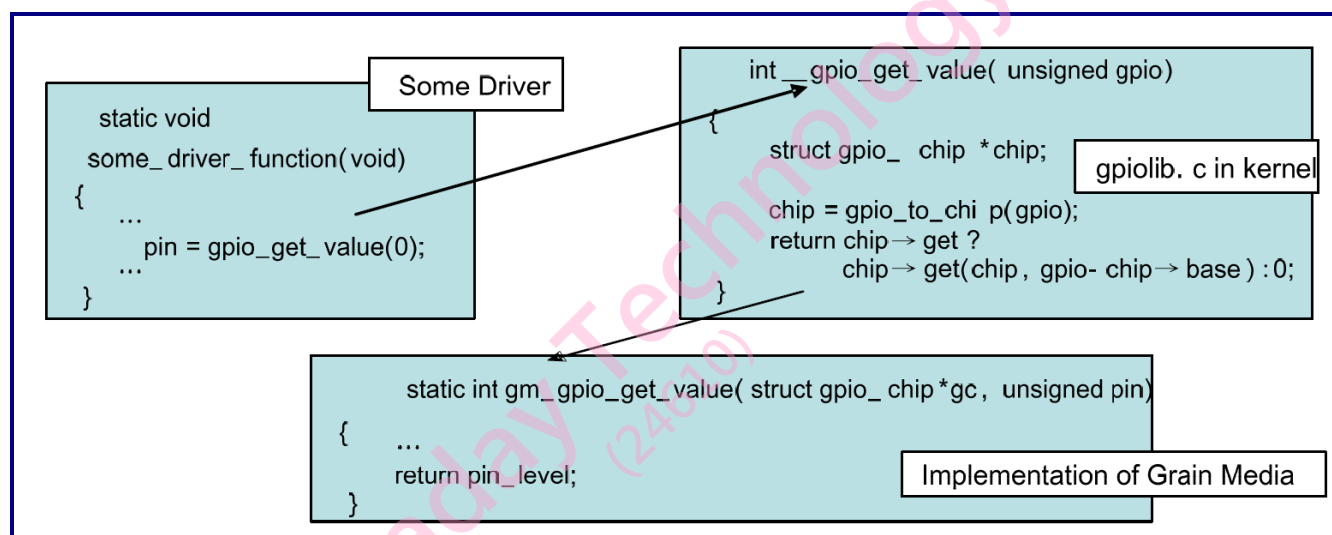


Figure 1-1. Control Flow of GPIO

When the driver calls one of the functions, `gpio_get_value`, of the kernel GPIO, kernel will call the corresponding GPIO chips based on the GPIO pin number. GM8136 has two GPIO ports. The first port controls pins[31:0] and the second port controls pins[63:32]. Users should use pins[95:0] to configure the pin and the corresponding port. Specific GPIO chip will call a callback function that has registered in advance. This implementation is a specific GPIO implementation of GM8136.

1.2 Options about GPIO in Linux Kernel

The GPIO function on SoC is FTGPIO010. The GPIO module is built-in in the Linux kernel image. Users can use the menu configuration (make menuconfig) to choose the items for FTGPIO010. As shown in Figure 1-2, the items are chosen in menu configuration of Linux kernel.

The steps are: Device Drivers ---> GPIO Support ---> FTGPIO010 GPIO support

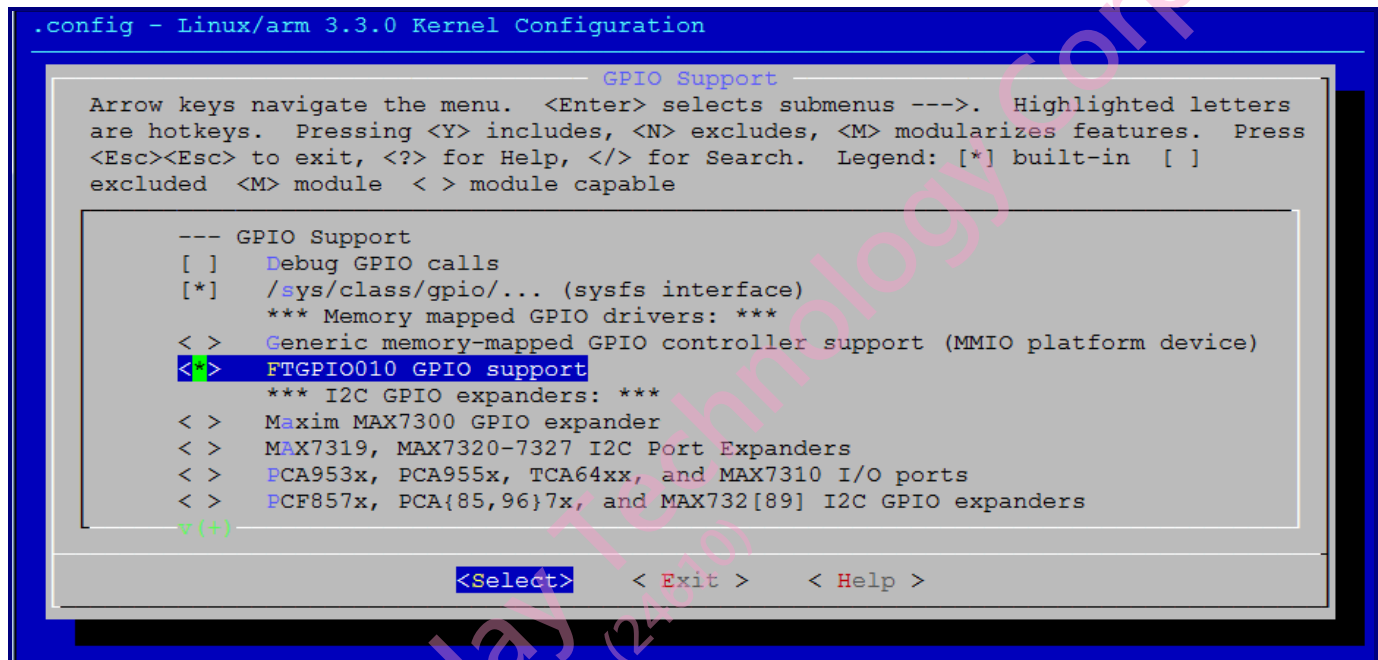


Figure 1-2. Build FTGPIO010

After building GPIO module in the kernel image, users can boot Linux and find sysfs of FTGPIO010, whose path is "/sys/devices/platform/ftgpio010.0". In Figure 1-3, users can find sysfs and make sure that the driver is already built in.

```
/ # ls /sys/devices/platform/ft
ftdmac030.0/      ftgmac100-1.1/    ftgpio010.1/      ftnandc023_nand/
ftgmac100-0.0/    ftgpio010.0/      ftiic010.0/       ftsdc021.0/
/ # ls /sys/devices/platform/ftgpio010.0/
driver          gpio             modalias        subsystem       uevent
/ #
```

Figure 1-3. sysfs of FTGPIO010

1.3 Examples of GPIO Usage

The usage of the Linux GPIO function is described in Section 1.3. If users want to set GPIO port 0 pin0 of GM8136 as an output with high voltage, please check the following example code:

```
/* the procedure of setting gpio 0 high */
int ret = -1;
if ((ret = gpio_request(0, "gpio0")) != 0) { return ret; }
if ((ret = gpio_direction_output(0, 1)) != 0) { return ret; }
```

The input pin of GPIO should be used as an interrupt source to prevent the kernel from checking the pin status by using a periodic timer. The Linux GPIO middleware does not provide the GPIO interrupt interface; however, Grain Media has added these functions for the user convenience. Figure 1-4 is a snip example of using the GPIO input as an interrupt code, in which pin0 is set as an interrupt.

```
static irqreturn_t gm_test_gpio_isr(int irq, void *dev_id)
{
    printk("gpio isr\n");
    gpio_interrupt_clear(0);

    return IRQ_HANDLED;
}

struct fake_dev {
    int foo;
};

static void test_gpio_interrupt(struct fake_dev *dev)
{
    struct gpio_interrupt_mode mode = {
        .trigger_method = GPIO_INT_TRIGGER_EDGE,
        .trigger_edge_nr = GPIO_INT_SINGLE_EDGE,
        .trigger_rise_neg = GPIO_INT_FALLING
    };

    gpio_direction_input(0);
    gpio_interrupt_enable(0);
    gpio_interrupt_setup(0, &mode);

    if (request_irq(gpio_to_irq(0), gm_test_gpio_isr, IRQF_SHARED, "gpio-0", dev) < 0)
    {
        printk("%s fail: request_irq not OK!!\n", __FUNCTION__);
    }
}
```

Figure 1-4. Example of Using GPIO Input as Interrupt Code

Please note that users must use `gpio_request()` to control the pin.

In the `test_gpio_interrupt` function, Grain Media constructs a mode variable, which specifies that this pin should be triggered from high to low. Then, `request_irq()` is used to register ISR. Please take the `IRQF_SHARED` flag into consideration. Please use the GPIO input as the interrupt for all pins of the same GPIO port that have the same IRQ number. Users should use the last parameter in `request_irq()`, `dev`, to distinguish the pin from being triggered in ISR.

1.4 GPIO in User Space

If users use the Linux GPIO subsystem, GPIO can be set in the user space for kernel sysfs.

First, users should make sure that the following menu configuration is set.

Device Drivers ---> GPIO Support ---> `/sys/class/gpio/...` (sysfs interface)

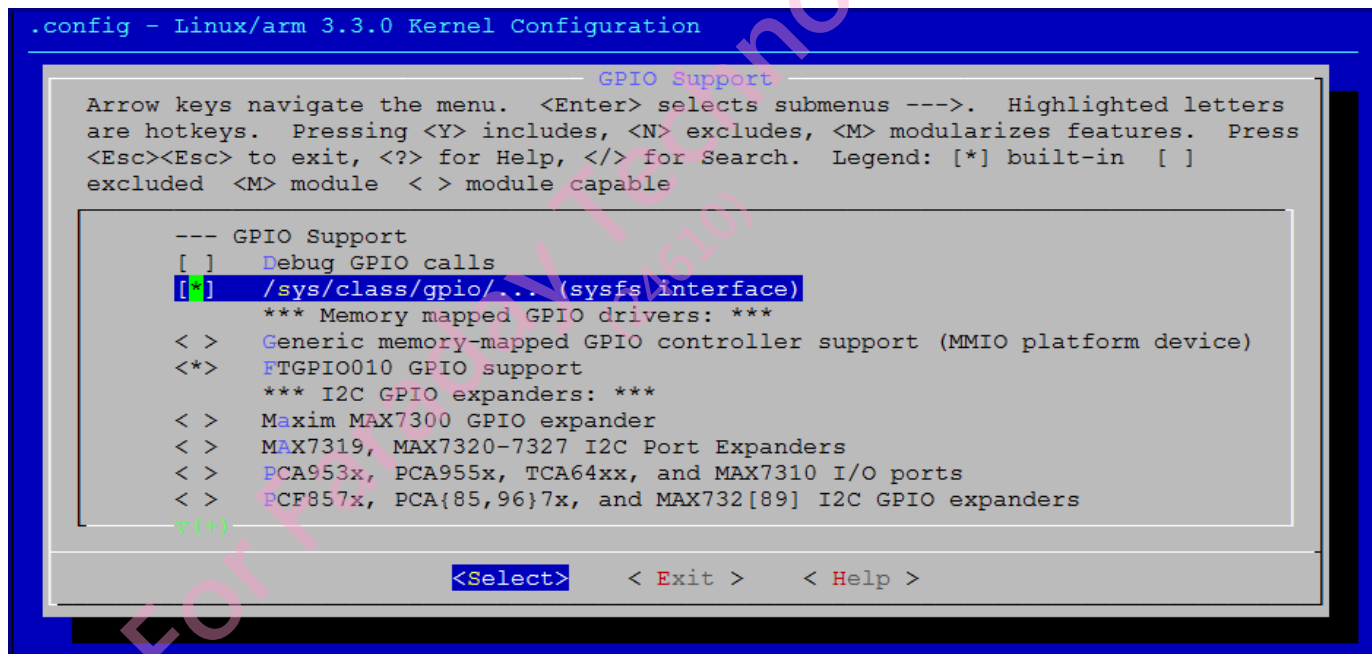


Figure 1-5. sysfs Setting for GPIO

After building the kernel image and booting the system, users should follow the steps below for operating GPIO. (The blue words mean results.)

`/ # ls /sys/class/gpio/` <<- To see if GPIO is correct or not

```

export    gpiochip0  gpiochip32  gpiochip64  unexport
/ # echo 0 > /sys/class/gpio/export <<- Request port0 pin0. (If using port1 pin0, echo 32 >
/sys/class/gpio/export)
/ # ls /sys/class/gpio/ <<- Generate a new folder(gpio0) and its attributes is in the folder
export    gpio0      gpiochip0  gpiochip32  gpiochip64  unexport
/ # cat /sys/class/gpio/gpio0/direction <<- Check input of output
in
/ # cat /sys/class/gpio/gpio0/value <<- Above result is input and check its voltage. 1 means high.
1
/ # echo out > /sys/class/gpio/gpio0/direction <<- Change to output
/ # cat /sys/class/gpio/gpio0/direction <<- Check result
out
/ # cat /sys/class/gpio/gpio0/value <<- Check voltage of output
0
/ # echo 1 > /sys/class/gpio/gpio0/value <<- Set voltage to high
/ # cat /sys/class/gpio/gpio0/value <<- Check result
1

```

Important: Before using this user space function, users must set **pinmux** for the GPIO pin.

1.5 Related File

Documentation/gpio.txt