

Action	Switch	Switch Input	Voice Command (Keyword: "Launcher")
Toggle Lock	Wrist	Click	Lock
Calibrate IMU		Hold > 0.5 seconds	Calibrate
Toggle Speech Recognition		Hold > 4 seconds	
+5 Speed	Headrest	Click	
-5 Speed		Hold > 0.5 seconds	
Fire		Hold > 4 seconds	
Set speed to x			Any multiple of 10 between 10 - 100
Launcher on			On
Launcher off			Off

Assembly Instructions:

Step 1: Ensure assembly is angled down completely

Step 2: Knob is threaded onto standoff screw, carefully insert standoff screw through open slot

Step 3: Slide launcher forward and insert safety pin (allen key) through the designated hole

Step 4: Tighten knob (safety pin may need to be backed off slightly to properly tighten knob)

Disassembly Instructions:

Step 1: Angle the assembly down completely

Step 2: Remove the safety pin

Step 3: Loosen knob

Step 4: Remove launcher from open slot