

Top Rated National® Electronics
Company

Sign in (<http://store.linksprite.com/login.php>) or Create an account (http://store.linksprite.com/login.php?action=create_ac)

My Account (<http://store.linksprite.com/account.php>)

Gift Certificates (<http://store.linksprite.com/giftcertificates.php>)

Wish lists (<http://store.linksprite.com/wishlist.php>)

 (<http://store.linksprite.com/cart.php>)



Home (<http://store.linksprite.com/>) Blog (<http://store.linksprite.com/pages.php?pageid=4>)

pcDuino (<http://store.linksprite.com/pcduino/>) Wiki (<http://www.linksprite.com/wiki>)

Blog (<http://store.linksprite.com/blog/>) Forum (<http://linksprite.invisionzone.com/>)

Learn (<http://learn.linksprite.com>) Distributor (http://www.linksprite.com/?page_id=252)

Rewards (<http://www.sloyalty.com/storefront/en-us/bigcommerce/store.linksprite.com/faqv2/>)

Affiliates (<http://affiliates.linksprite.com>) Contact (<http://store.linksprite.com/pages.php?pageid=8>)

Terms and Conditions (<http://store.linksprite.com/terms-and-conditions/>)


Privacy Policy (<http://store.linksprite.com/privacy-policy/>)

Home (<http://store.linksprite.com>) **Sensors** (<http://store.linksprite.com/sensors/>)

LinkNode R4: Arduino-compatible WiFi relay controller

LinkNode R4: Arduino-compatible WiFi relay controller

Brand: LinkSprite
(<http://store.linksprite.com/brands/LinkSprite.html>)

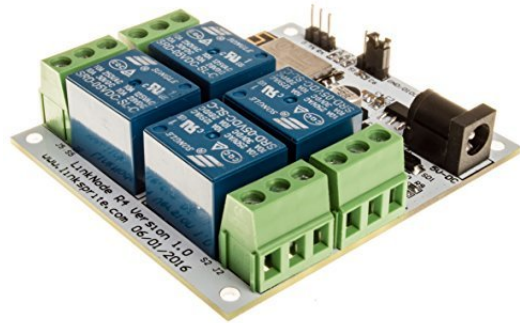


\$9.90

★★★★★ 3 product reviews

SKU: LN_RELAY4CH


Weight: 0.20 LBS

 **Weight:** Calculated at checkout

Quantity:


CURRENTLY OUT OF STOCK. CHECK BACK
LATER.

Add to Wishlist


 (http://pinterest.com/pin/create/button?url=http://store.linksprite.com/arduino-compatible-wifi-relay-controller/&media=https://cdn2.kiwifox.com/1593/514GfYxnMBL_614c=2&description=LinkSprite - LinkNode R4: Arduino-compatible WiFi relay controller)

Product Description


LinkNode R4 is a WiFi relay controller and it is powered by ESP-12f ESP8266 WiFi module which is compatible with Arduino programming. There are 4 relay channels and each channel allows you to control high-power devices (up to 10 A) via the on-board relay. LinkNode R4 can be used to remotely turn lights, fans and other devices on/off. The WiFi interface will allow you to associate the board with your existing WiFi network and send the commands over the network.

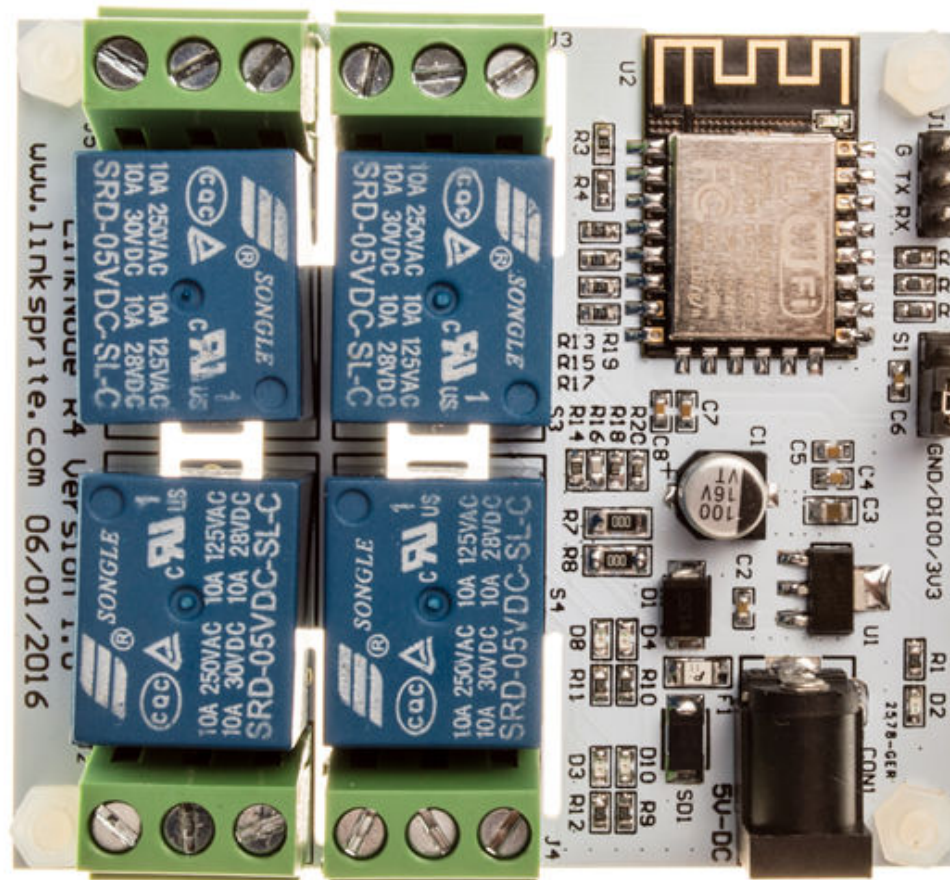


(http://linksprite.com/wiki/index.php5?title=File:211201004-with_pillar-001.jpg)

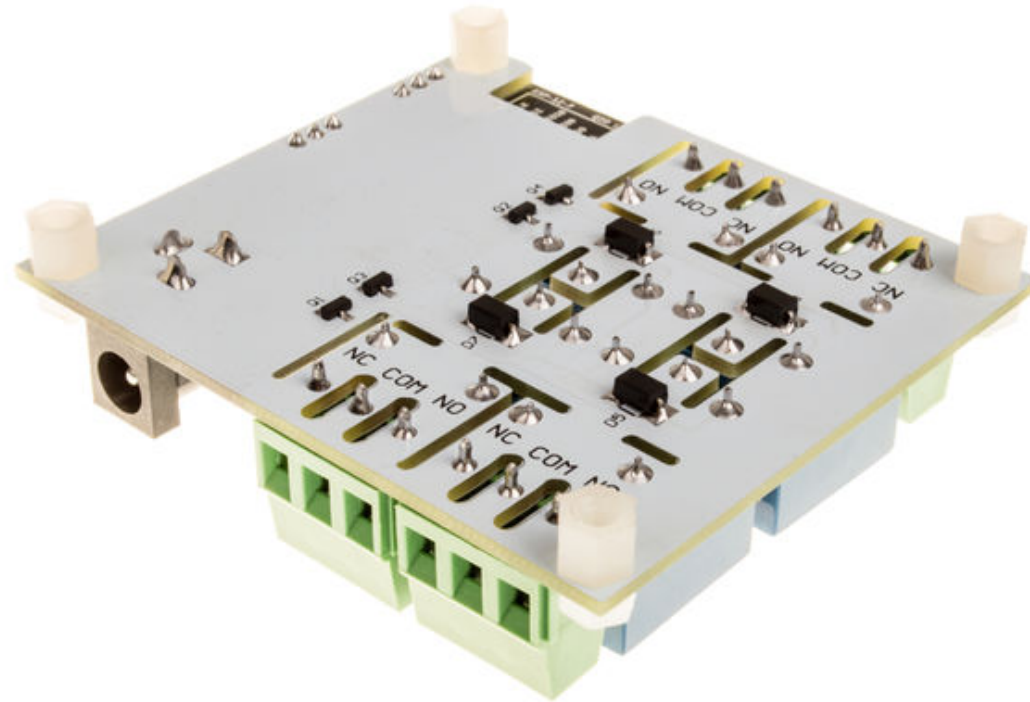

(http://linksprite.com/wiki/index.php5?title=File:211201004-with_pillar-002.jpg)

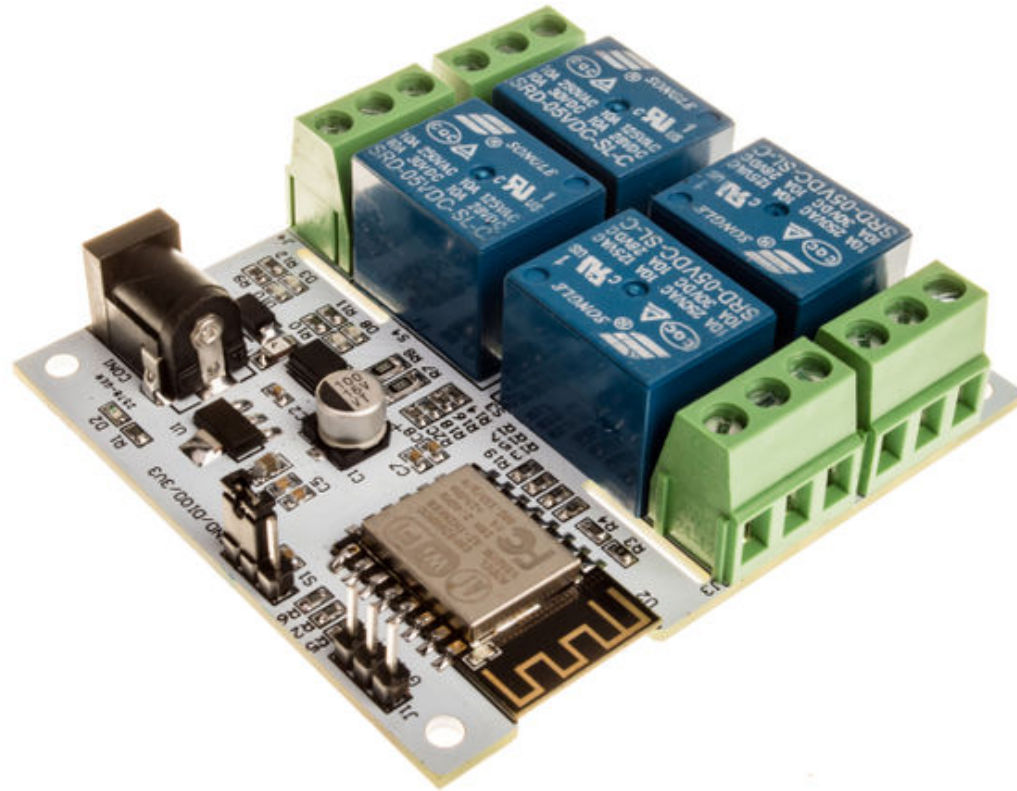

(http://linksprite.com/wiki/index.php5?title=File:211201004-without_pillar-001.jpg)

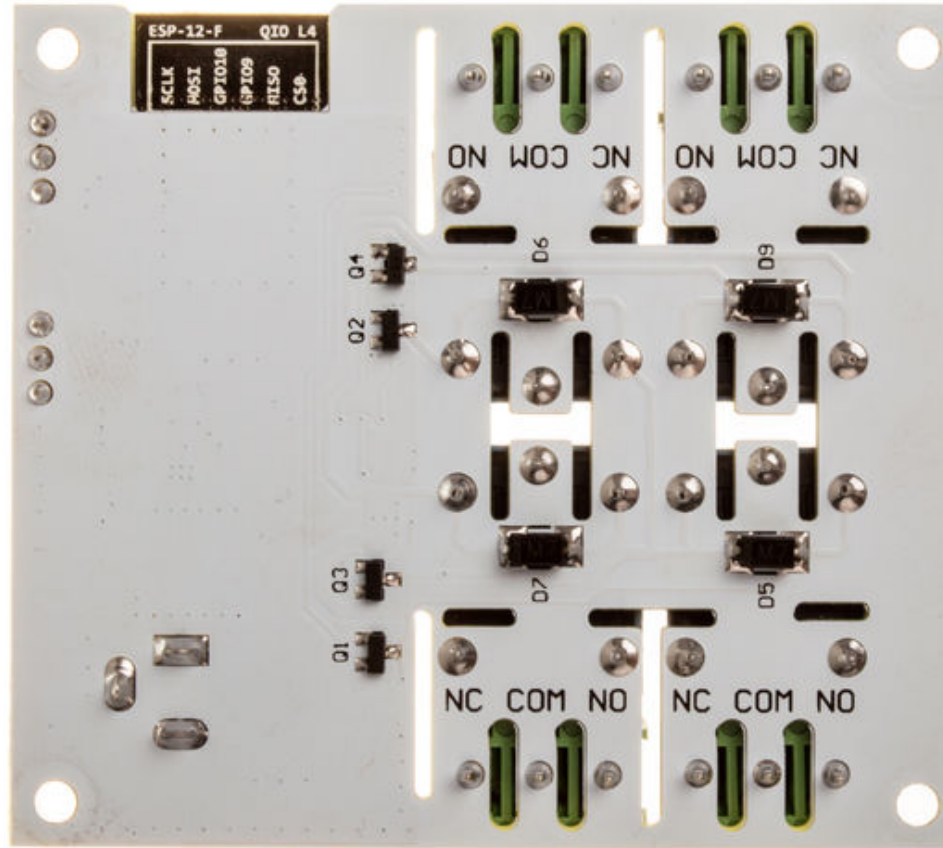


(http://linksprite.com/wiki/index.php5?title=File:211201004-without_pillar-002.jpg)

Features

- ESP-12f ESP8266 WiFi module
- 4 Channel relays, supporting:
 - 277V AC, 10A

- 125V AC, 12A
- 5V DC power
- Two work modes:
 - Program via UART
 - Boot from flash
- 4 indicator LEDs

LinkNode R4 Diagram

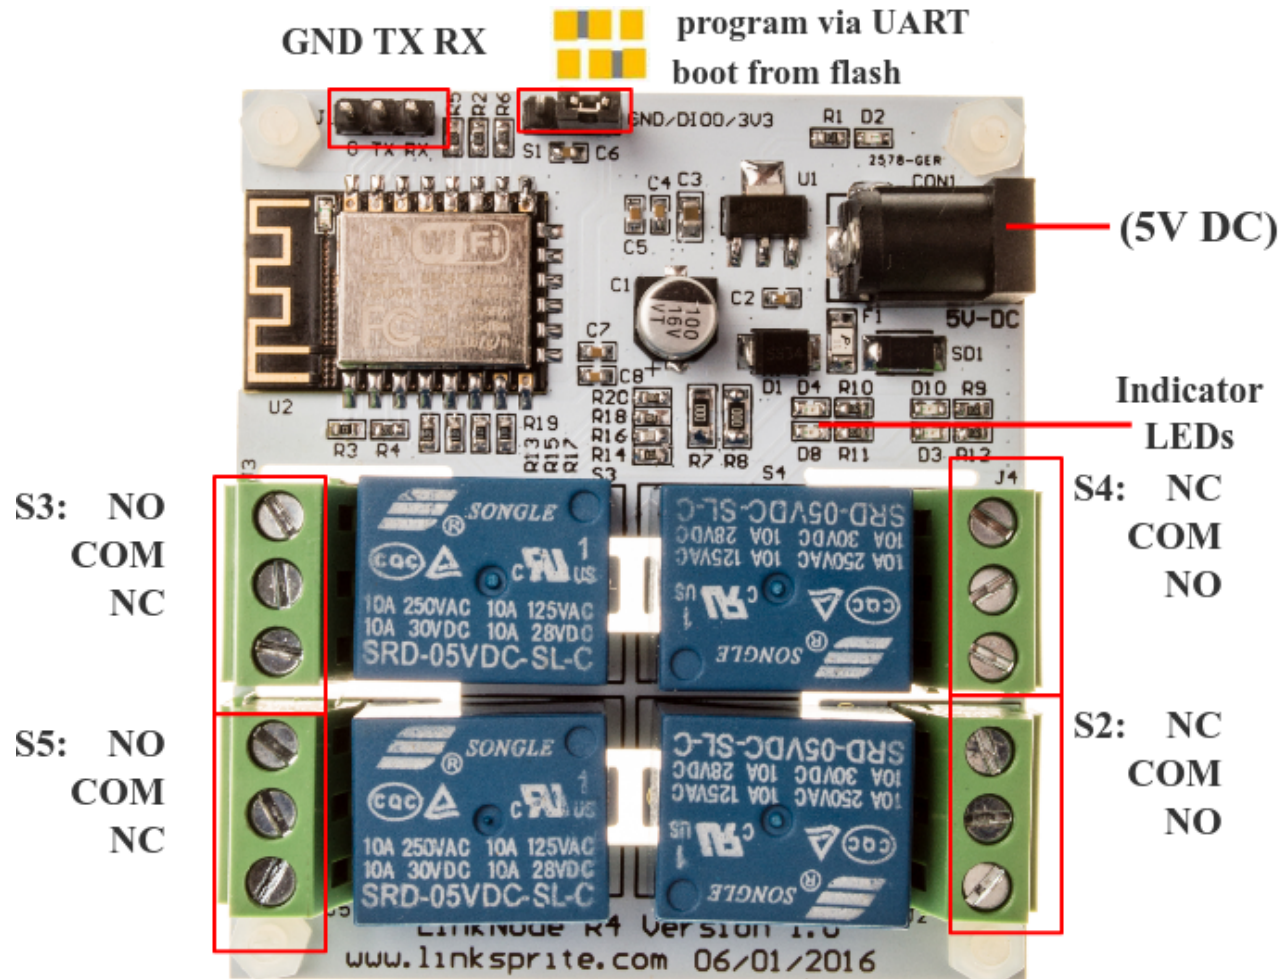

(<http://linksprite.com/wiki/index.php5?title=File:211201004-diagram.png>)


Control logic

ESP8266 Pin	Control Signal	Relays'status	Indicator LED
GPIO12	0	S4 off	D10 off
GPIO12	1	S4 on	D10 on
GPIO13	0	S5 off	D8 off
GPIO13	1	S5 on	D8 on
GPIO14	0	S3 off	D4 off
GPIO14	1	S3 on	D4 on
GPIO16	0	S2 off	D3 off
GPIO16	1	S2 on	D3 on

(<http://linksprite.com/wiki/index.php5?title=File:211201004-GPIO.png>)

How to use Android APP to control LinkNode R4

LinkNode R4 is an open source 4-Channel relay controller which is powered by the ESP8266 WiFi SoC.

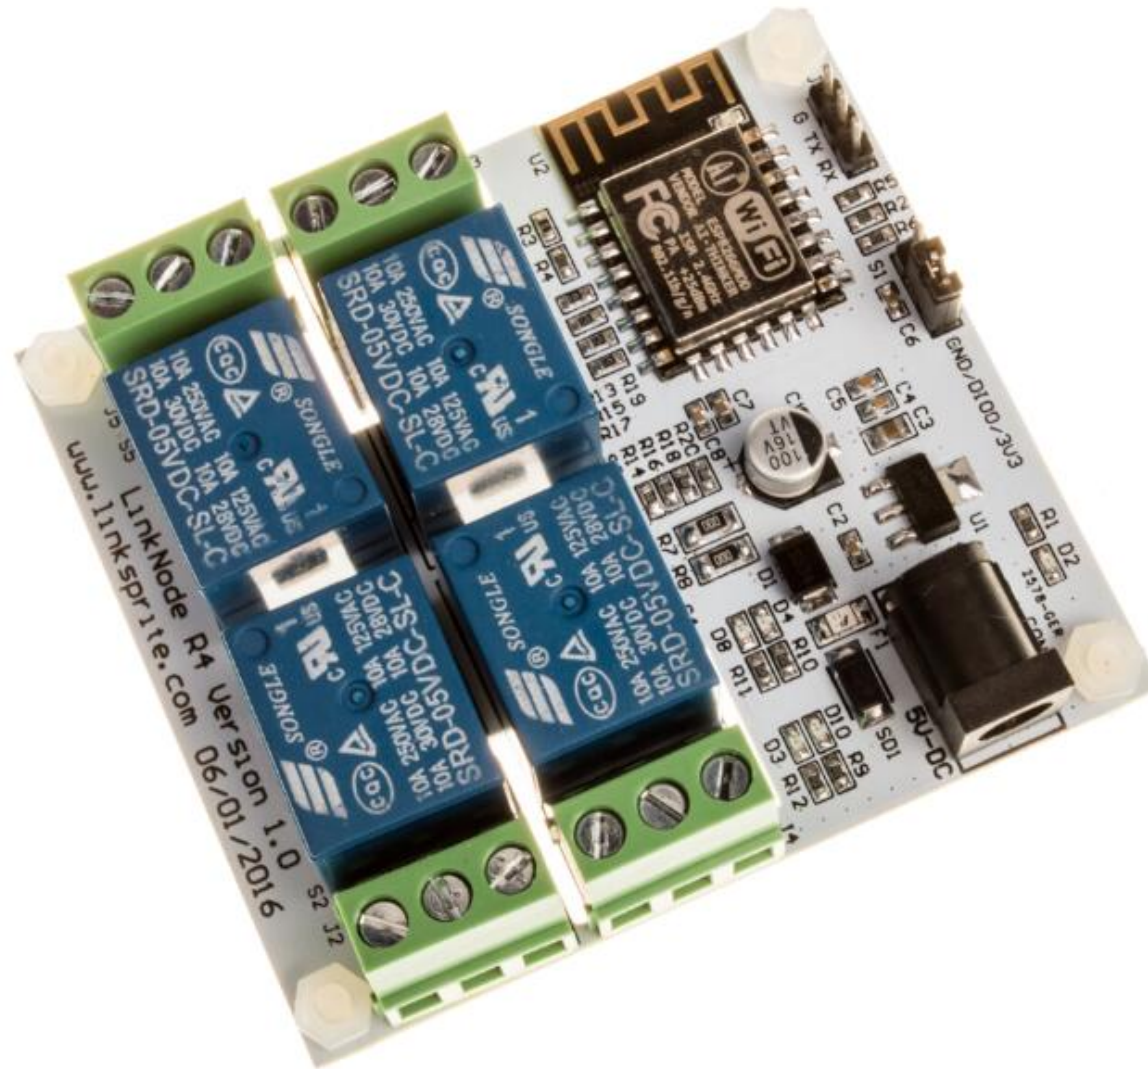

(http://linksprite.com/wiki/index.php5?title=File:Linker_Nord_R4.jpg)

The following will introduce how to use Android APP to control the LinkNode R4.

Steps

1. Install Android and iOS APP

- Download the APK file from the github (<https://github.com/delongqilinksprite/LinkNodeR4-app>) and install it.
- if your equipment is iphone/ipad,you can get the app form appstore and name is "LinkNode Relay".
- iOS App download link : LinkNode Relay (<https://itunes.apple.com/cn/app/linknode-relay/id1163468201?mt=8>)

2.Login LinkSpriteIO

- If you never register an account on LinkSpriteIO, please enter Email and your password, then click the SIGN IN button
- If you have an account on LinkSpriteIO, please enter Email and your password, then click the **REGISTER** button



Email

Password (optional)


(http://linksprite.com/wiki/index.php5?title=File:LinkNode_R4_1.png)

SIGN IN

REGISTER

3. Go to Relay device list


- Click the plus icon on the upper right quarter to add a new LinkNode R4.

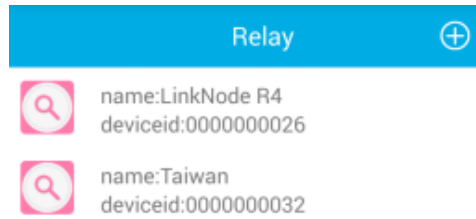


(http://linksprite.com/wiki/index.php5?title=File:LinkNode_R4_2.png)

4.Scan the QRcode

- Get the device information and register it to your account.

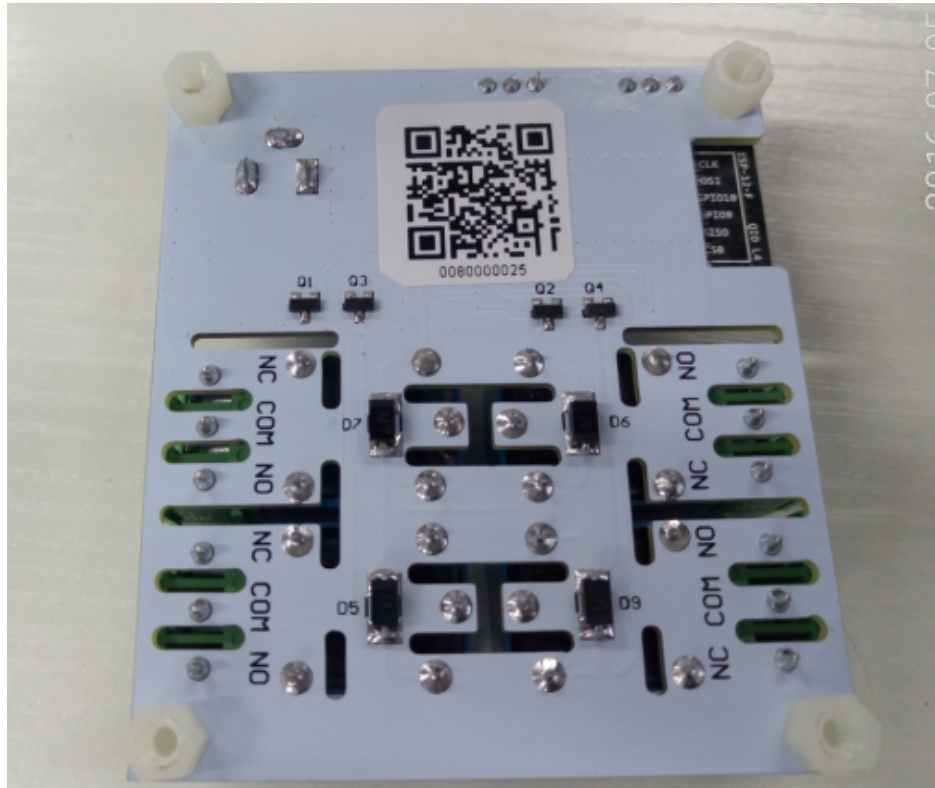

(http://linksprite.com/wiki/index.php5?title=File:LinkNode_R4_3.png)

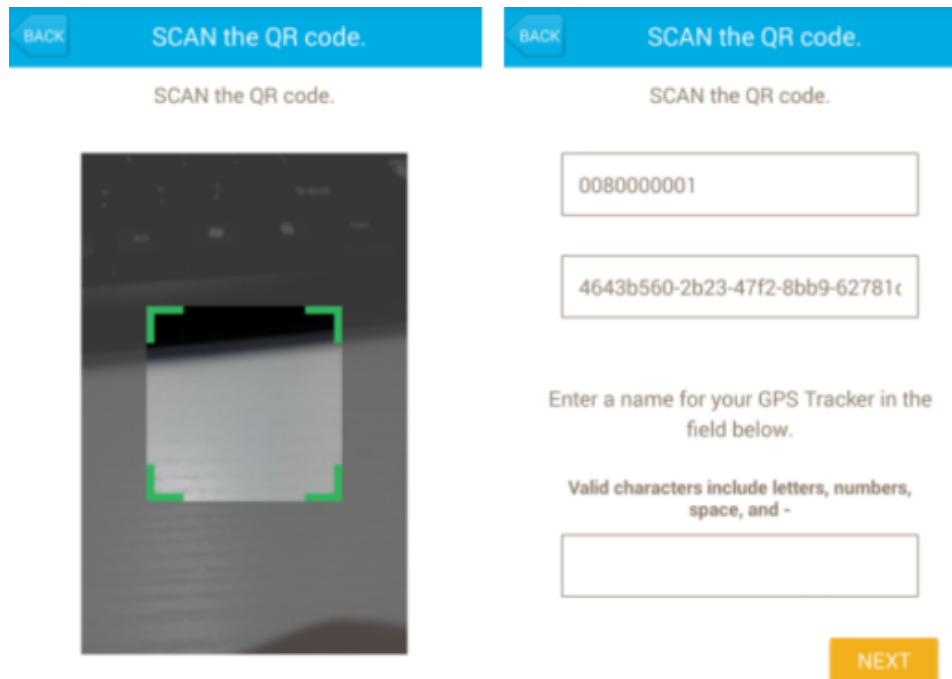

BACK SCAN the QR code.

SCAN the QR code.

0080000001

4643b560-2b23-47f2-8bb9-62781c

Enter a name for your GPS Tracker in the field below.


Valid characters include letters, numbers, space, and -

NEXT

(http://linksprite.com/wiki/index.php5?title=File:LinkNode_R4_4.png)

5. Configure to access WiFi AP

- Supply the power for LinkNodeR4, the LinkNode R4 will create a AP called **LinkNodeAP**
- Use your mobile phone to connect this AP
- Open a browser and enter the ip address **10.0.1.1** and you will see the following website:

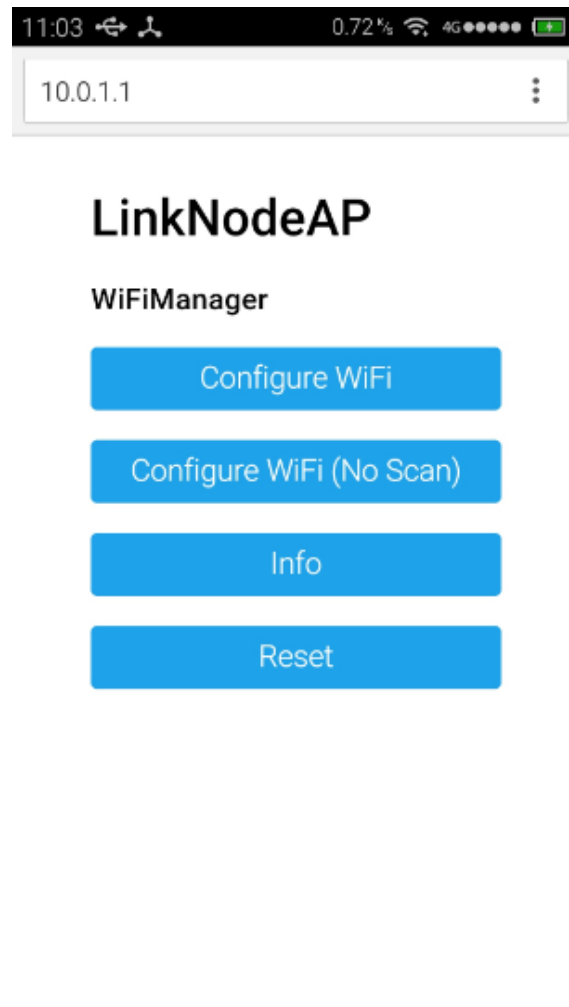


(<http://linksprite.com/wiki/index.php5?>

title=File:LinkNode_R4_5.png)

- Click the button **configure WiFi**
- Select your WiFi AP which you want to connect and enter your wifi password.
- If connecting failed, you can go to the same website to configure it again.
- After that, LinkNode R4 will connect to Linksprite IO via the internet.

6.Control your 4-channel relay

- control the button on the right side to turn on or off the relays, and you can click the relay's name to change it.

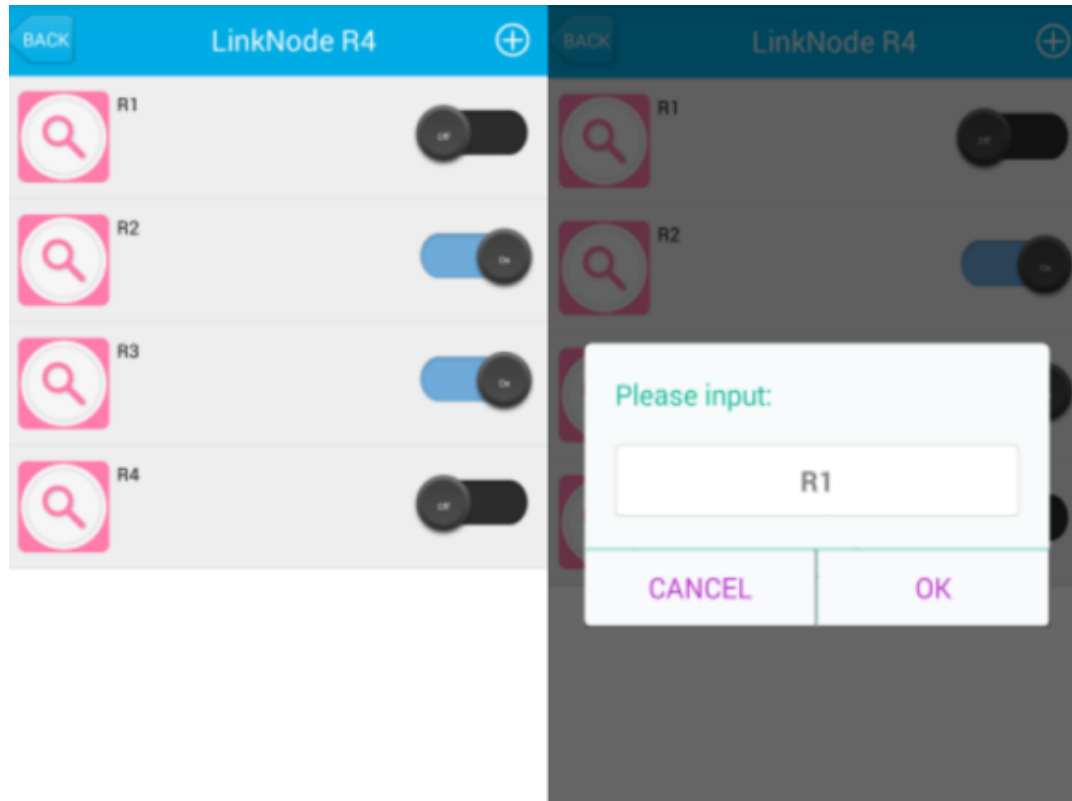

(http://linksprite.com/wiki/index.php5?title=File:LinkNode_R4_6.png)

Tutorial

1. Get started in Arduino programming

a. Requirements

Software


- Arduino IDE (<https://www.arduino.cc/en/Main/Software>), (the latest version is 1.6.8)
- The Arduino core (<https://github.com/esp8266/Arduino>) for LinkNode R4

**** Hardware****

- 5V/1A DC power is recommended.
- USB TTL UART cable


b. Install Arduino core for ESP8266

- Install Arduino 1.6.8 from the Arduino website (<http://www.arduino.cc/en/main/software>).
- Start Arduino and go to File --> Preferences .
- Enter http://arduino.esp8266.com/stable/package_esp8266com_index.json (http://arduino.esp8266.com/stable/package_esp8266com_index.json) into Additional Board Manager URLs field. You can add multiple URLs, separating them with commas.

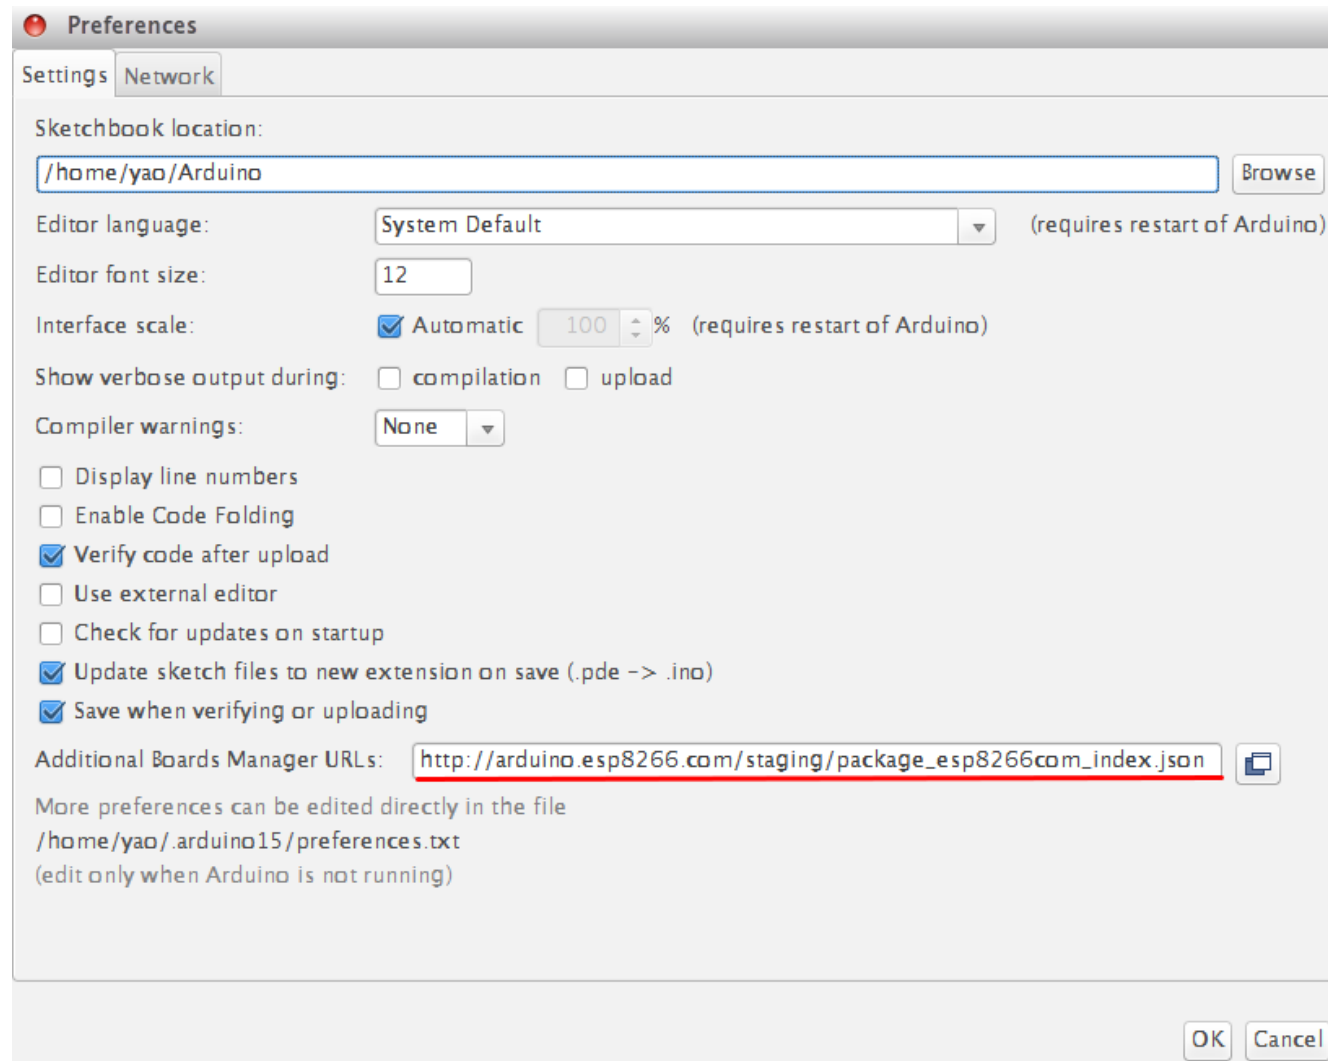

(<http://linksprite.com/wiki/index.php5?title=File:1-249.png>)

- Open Boards Manager from Tools --> Board menu --> Boards Manager.

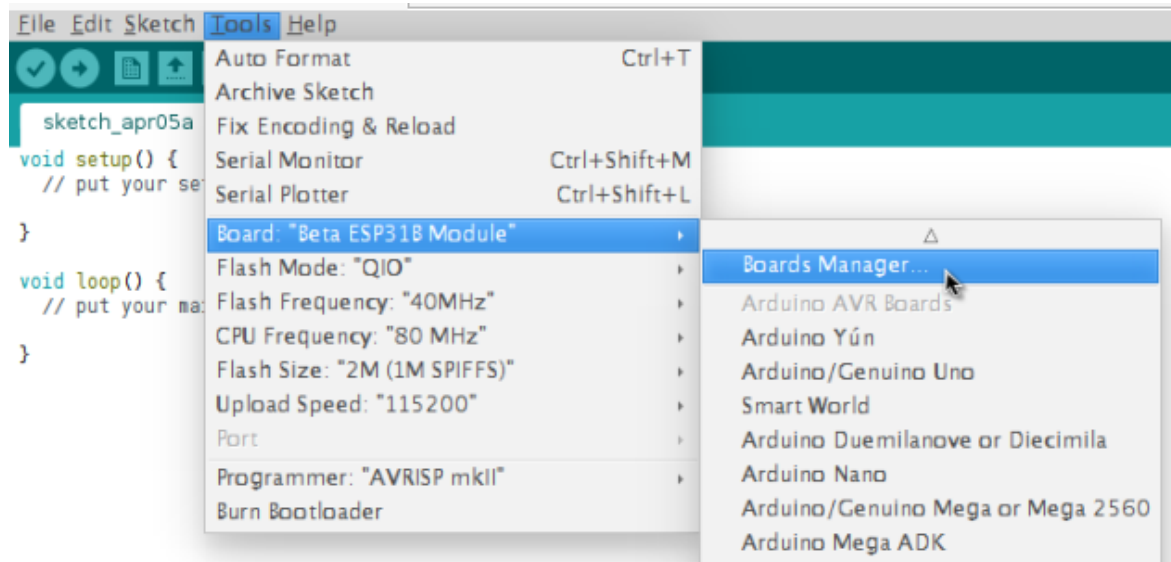

(<http://linksprite.com/wiki/index.php5?title=File:1-250.png>)


- Search and install esp8266 platform (and don't forget to select your ESP8266 board from Tools --> Board menu after installation).



(<http://linksprite.com/wiki/index.php5?title=File:1-251.png>)

c. Check the configuration of Board

Because the LinkNode R4 has not been added into the official ESP8266 Arduino core repository yet, so you can't find this board on the boards list, but you can use the Generic ESP8266 Module, and select Flash Mode as QIO.

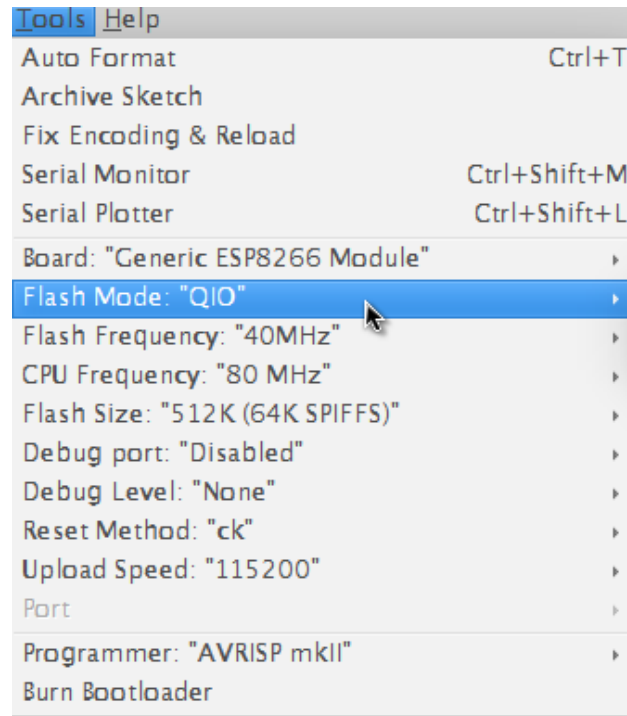

(<http://linksprite.com/wiki/index.php5?title=File:1->

252.png)

d. Create a Arduino Project


- Enter the following source code and compile

```

/*Turn on and off the S3 relay in every second */
void setup()
{
  pinMode(12,OUTPUT);
  Serial.begin(9600);
}
void loop()
{
  digitalWrite(12,HIGH);
  Serial.println("Relay ON\n");
  delay(1000);
  digitalWrite(12,LOW);
  Serial.println("Relay OFF\n");
  delay(1000);
}

```

e. Test

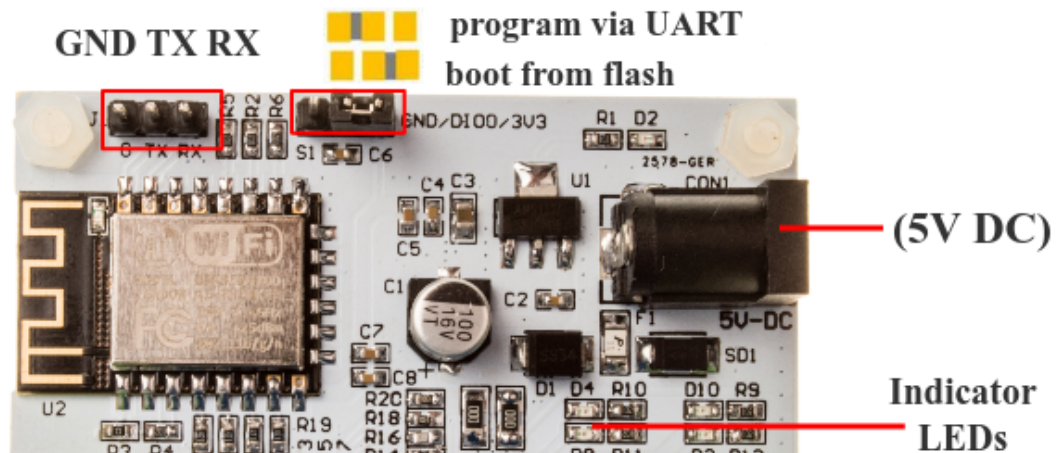

(<http://linksprite.com/wiki/index.php5?title=File:211201004-test.png>)


- Jump out the S5 on LinkNode R4 and select program via UART
- Connect DC power to LinkNode R4
- Connect USB TTL UART cable to UART port of LinkNode R4
- Connect the other side to PC
- Check your serial port which your PC recognize
- Click the ****Upload*** on Arduino IDE
- After finished, jump out the S5 on LinkNode R4 and select boot from flash

2. Remotely control LinkNode R4 with LinkSprite.IO platform

LinkSprite IO (<https://github.com/YaoQ/pcduino-doc/blob/master/LinkNodeR4/www.linksprite.io>) is an IoT platform which supports RESTful API and WebSocket. These make the mobile APP, website application or device connect it very easily. The following I will introduce is about how to use LinkNode R4 to communicate with LinkSprite IO platform.

a. Create a new account and device on LinkSprite.io

Go to www.linksprite.io (<http://www.linksprite.io/>) and sign up. Enter your Email and password to create a new account. Go to My Account to get your own API Key. The API Key is fatal because only add the Key in your codes, can the data sync to your IoTgo account.

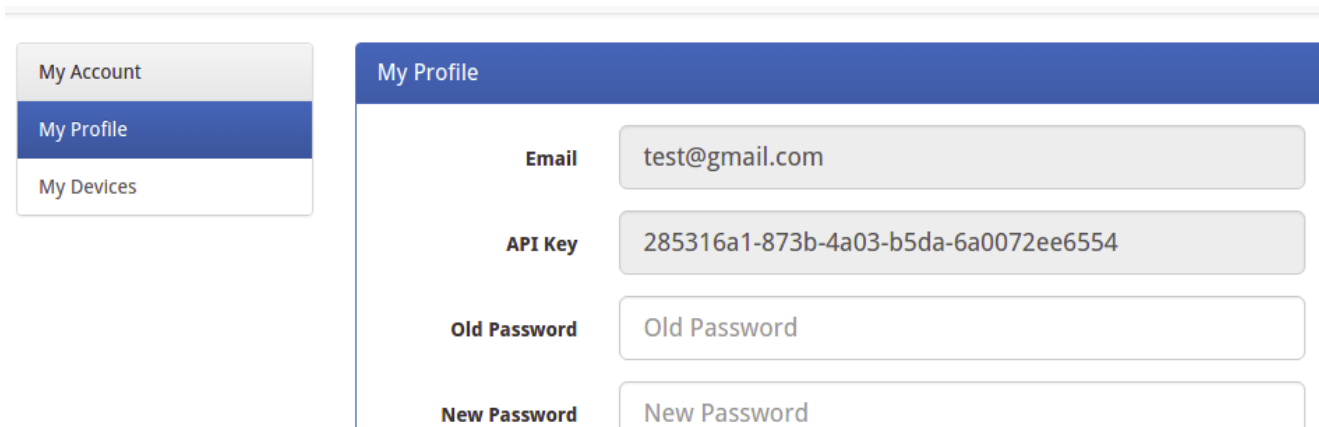

My Profile	
Email	test@gmail.com
API Key	285316a1-873b-4a03-b5da-6a0072ee6554
Old Password	Old Password
New Password	New Password

(<http://linksprite.com/wiki/index.php5?title=File:1-254.png>)

- Click My Device, and choose Create DIY Device.

Create New Device

Device Name

light

Device Type

02 (Simple light) ▼

Group Name

LinkNode

Create

Close


(<http://linksprite.com/wiki/index.php5?title=File:1-255.png>)

- Click the created device icon and get the DeviceID.

nodeMCU ×

Light: OFF

Light On Light Off



Action: ON OFF

Add Timer

Device ID

0200000001

Device Name

nodeMCU

Group Name

LinkNode

Save Delete Close

(<http://linksprite.com/wiki/index.php5?title=File:1-256.png>)

b. Query the source code using your own apikey and device ID

Device API which the LinkSprite IO support is JSON-based, which means all request and response data is enclosed in JSON format. Currently it supports 3 kind of request.

- Update: Update device status to LinkSprite IO
- Query: Get device status from LinkSprite IO


This demo will send http POST request to query the param--light on linksprite.io, if the light is on, then turn one relay on, if off, then turn off the relay.

c. Install WiFi Manager library

To make it more convenient, we add WiFi manager library in this demo.

The ESP8266 WiFi Connection manager with web captive portal, this Arduino library can make configure AP's SSID and password via web page when you want LinkNode R4 to connect to AP.

- Open Arduino IDE and go to Sketch --> Include Library --> Manage Libraries
- Search the wifimanager and install it

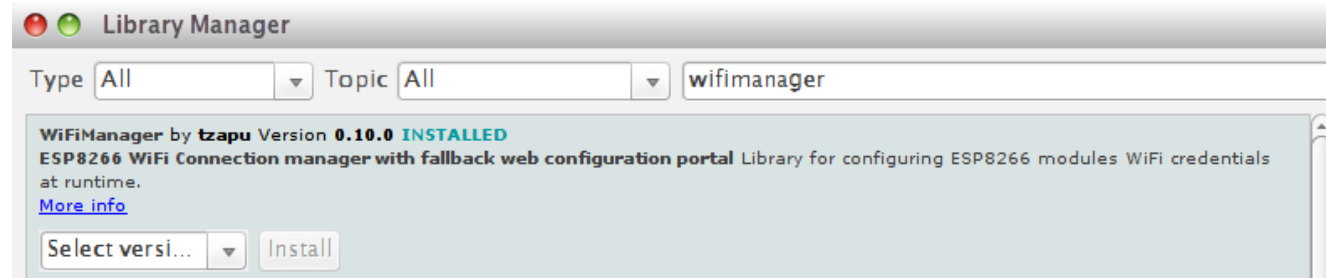

(<http://linksprite.com/wiki/index.php5?title=File:1-257.png>)

d. Develop source code

- Enter the following source code
- Configure your apikey and deviceId in the source code

```

#include <ESP8266WiFi.h>
#include <WString.h>
//the library are needed for autoconfig WiFi
#include <DNSServer.h>
#include <ESP8266WebServer.h>
#include <WiFiManager.h>
// replace with your own API key and device ID,
String apikey = "xxxxxxxxxxxxxxxxxxxxxxxxxxxx";
const char* deviceID="xxxxxxxxxxxx";
const char* server = "www.linksprite.io";
WiFiClient client;
void setup() {
  Serial.begin(115200);
  pinMode(12, OUTPUT);
  WiFiManager wifiManager;
  wifiManager.setAPStaticIPConfig(IPAddress(10,0,1,1), IPAddress(10,0,1,1), IPAddress(255,255,255,0));
  wifiManager.autoConnect("LinkNodeAP");
  Serial.print("WiFi Connected ...\n");
  Serial.println("WiFi connected");
}
void loop() {
  if (client.connect(server,80)) {
    String postStr="{";
    postStr += "\"action\":\"query\",";
    postStr += "\"apikey\":\"";
    postStr += apikey;
    postStr += "\",";
    postStr += "\"deviceid\":\"";
    postStr += deviceID;
    postStr += "\",";
    postStr += "\"params\":\"";
    postStr += "[";
    postStr += "\"light\"";
    postStr += "]";
    postStr += "}\"";
    client.print("POST /api/http HTTP/1.1\n");
    client.print("Host: ");
    client.print(server);
    client.print("\nContent-Type: application/json\n");
    client.print("Content-Length: ");
    client.print(postStr.length());
    client.print("\n\n");
  }
}

```

```

    client.print(postStr);
  }
  delay(1000);
  Serial.println("Store response...");
  String request = "";
  while (client.available()) {
    char c = client.read();
    request +=c;
  }
  if (request!= NULL)
  {
    int index1 = request.indexOf("{");
    int index2 = request.indexOf("}",");
    String param = request.substring(index1, index2 + 1);
    Serial.print("The param is ");
    Serial.println(param);
  }

```

```

if(param.indexOf("off")>0){
  digitalWrite(12, LOW);
  Serial.println("OFF");
} else if(param.indexOf("on")>0){
  digitalWrite(12, HIGH);
  Serial.println("ON");
}

```


```

client.stop();
Serial.println("Waiting...");
delay(2000);
}
}

```

e. Configure to accese WiFi AP

- Take the step above to upload the program, the LinkNode R4 will create a AP called LinkNodeAP
- Use your mobile phone to connect this AP
- Open a browser and enter the ip address 10.0.1.1 and you will see the following website:

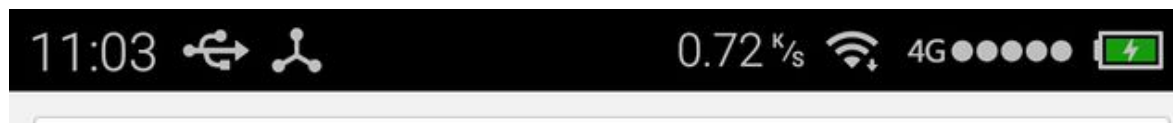

10.0.1.1



LinkNodeAP

WiFiManager

Configure WiFi

Configure WiFi (No Scan)

Info

Reset

(<http://linksprite.com/wiki/index.php5?title=File:1-258.jpg>)

- Click the button configure WiFi
- Select your WiFi AP which you want to connect and enter your wifi password.
- If connecting failed, you can go to the same website to configure it again.
- Also, you can use Serial Monitor in Arduino IDE to check the status.
- After that, LinkNode R4 will connect to Linksprite IO via the internet.


f. Test

- Open the serial monitor to check the status

nodeMCU ×

Light: OFF

Light On Light Off



Action: ON OFF

Add Timer

Device ID

0200000001

Device Name

nodeMCU

Group Name

LinkNode

Save Delete Close

(<http://linksprite.com/wiki/index.php5?title=File:1-259.png>)

- Open your light device which is create on linksprite.io
- Click the button ON and OFF
- Check the status of relay on LinkNode R4, is it following your control?

Schematic

LinkNode R4 Schematic (<https://s3.amazonaws.com/linksprite/LinkNode+R4/LinkSprite+R4+V1.0.pdf>)

Video

How to use Android APP to control Linknode R4 (<https://www.youtube.com/watch?v=Tj6FJDmlhXY&feature=youtu.be>)

How to use IOS APP to control Linknode R4 (https://youtu.be/OO_Q2HpZP5I)

Product Reviews

Find Similar Products by Category

Customers also viewed



(<http://store.linksprite.com/linknode-r8-arduino-compatible-wifi-relay-controller/>)

LinkNode R8:
Arduino-compatible
WiFi relay controller
 (<http://store.linksprite.com/linknode-r8-arduino-compatible-wifi-relay-controller/>)


\$14.85



(<http://store.linksprite.com/linknode-r1-arduino-compatible-wifi-relay-controller/>)

LinkNode R1:
Arduino-compatible
WiFi relay controller
 (<http://store.linksprite.com/linknode-r1-arduino-compatible-wifi-relay-controller/>)

\$9.09

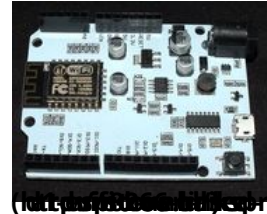

(<http://store.linksprite.com/linknode-d1-esp8266-based-arduino-uno-like-wifi-board/>)

LinkNode D1:
ESP8266 Based
Arduino Uno Like
WiFi Board
 (<http://store.linksprite.com/linknode-d1-esp8266-based-arduino-uno-like-wifi-board/>)

\$9.99



(<http://store.linksprite.com/laser-virtual-keyboard/>)

Laser Virtual
Keyboard
 (<http://store.linksprite.com/laser-virtual-keyboard/>)

\$43.66



(<http://store.linksprite.com/one-wire-digital-temperature-sensor-ds18b20/>)

**One Wire Digital
Temperature Sensor
- DS18B20**

(<http://store.linksprite.com/one-wire-digital-temperature-sensor-ds18b20/>)

\$3.99

Related Products



(http://store.linksprite.com/wifi-diamondback-1-0-arduino-compatible-wifi/)

WiFi DiamondBack 1.0 -- Arduino Compatible WiFi
(http://store.linksprite.com/wifi-diamondback-1-0-arduino-compatible-wifi/)

\$49.00



(http://store.linksprite.com/wifi-redback-1-0-arduino-yellowjacket-compatible/)

WiFi RedBack 1.0 -- Arduino yellowjacket Compatible
(http://store.linksprite.com/wifi-redback-1-0-arduino-yellowjacket-compatible/)

\$49.00



(http://store.linksprite.com/linknode-d1-esp8266-based-arduino-uno-like-wifi-board/)

LinkNode D1: ESP8266 Based Arduino Uno Like WiFi Board
(http://store.linksprite.com/linknode-d1-esp8266-based-arduino-uno-like-wifi-board/)

\$9.99



(http://store.linksprite.com/linknode-r8-arduino-compatible-wifi-relay-controller/)

LinkNode R8: Arduino-compatible WiFi relay controller
(http://store.linksprite.com/linknode-r8-arduino-compatible-wifi-relay-controller/)

\$14.85



(http://store.linksprite.com/)

**LinkNode R1:
Arduino-compatible
WiFi relay controller
(http://store.linksprite.com/linknode-r1-arduino-compatible-wifi-relay-controller/)**
\$9.09

Sign up for our newsletter

Get great deals sent directly to
your inbox!

Subscribe

Quick Links

Home
(http://store.linksprite.com/)

Blog
(http://store.linksprite.com/pages.php?pageid=4)

pcDuino
(http://store.linksprite.com/pcduino/)

WiKi
(http://www.linksprite.com/wiki/)

Categories

PCduino (/main-board/)

Home Automation
(/home-automation/)

Arduino (/arduino/)

Raspberry Pi (/raspberry-pi/)

Robotics (/robotics/)

All Categories
(/categories/)

My Account

My Account
(/account.php)

Wishlist (/wishlist.php)

Order Status
(/account.php?action=order_status)

View Cart (/cart.php)



(http://store.linksprite.com/)

Our company is dedicated to providing the very best quality products and service. Happy customers is our number one goal! We strive to be the best in the industry and innovate our products.



Blog
(<http://store.linksprite.com/blog/>)

Forum
(<http://linksprite.invisionzone.com/>)

Learn
(<http://learn.linksprite.com>)

Distributor
(http://www.linksprite.com/?page_id=252)

Rewards
(<http://www.sloyalty.com/storefront/en-us/bigcommerce/store.linksprite.com/faqv2/>)

Affiliates
(<http://affiliates.linksprite.com>)

Contact
(<http://store.linksprite.com/pages.php?pageid=8>)

Terms and Conditions
(<http://store.linksprite.com/terms-and-conditions/>)

Privacy Policy
(<http://store.linksprite.com/privacy-policy/>)

All prices are in USD © 2020 LinkSprite . Sitemap
(<http://store.linksprite.com/sitemap/>) | Powered by eCommerce Marketing
360® (<http://www.ecommercemarketing360.com/>)