



## **Sonata AR30/DR30 DAB/FM and FM/AM Amp IR Codes**

System Code = 17 (extended)      (RC-5 Code)

<b>Key</b>	<b>Command Code(decimal!)</b>
Standby Toggle	66
Preset 1	91
Preset 2	92
Preset 3	93
Preset 4	94
Preset 5	95
Preset 6	96
Preset 7	97
Preset 8	98
Preset 9	99
-/--	118
0	100
Vol Up	64
Mute Toggle	67
Band	101
Vol Down	65
Preset Up	106
Backwards	78
Select	87
Forwards	77
Preset Down	107
Alarm	125
Info	121
Brightness_toggle	71
Menu	123
CD	111
DVD	112
AUX	113
Tuner	114
MP3	115
Scan Up	68
Scan Down	69
Play/Pause	70
iPodMenu	72
iPodShuffle	74
IPodStop	79
IPodRepeat	80
IPodFwd	81
iPodRew	82
Sleep	73
Display bright	75
Display dim	76

Gallery Court, Hankey Place, London SE1 4BB England

Tel: +44 (0)20 7940 2200 Fax: +44 (0)20 7940 2233 Web: [www.cambridge-audio.com](http://www.cambridge-audio.com)



## CD Commands

System Code = 08 F7 (NEC Code)

Key	Command Code
CD_BRIGHT	21H
CD_DIM	22H

## DVD Commands - System 17

System Code = 12 (RC-5 Codes)

Display Dim	50
Display Bright	51

## ***Hidden AR30 DR30 Commands***

Power On	102
Power Off	103
Mute On	110
Mute Off	119
Auto Tune (for DAB tuner)	117
DAB (or FM for FM/AM tuner)	108
FM (of AM for FM/AM tuner)	109

Information in this document has been carefully checked for accuracy; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice. If you notice any errors please feel free to email us at: [www.cambridgeaudio.com/sts](http://www.cambridgeaudio.com/sts)

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright Cambridge Audio Ltd 2008