

WNM PGB-1 Quick Start Guide

Join the Community


Join the Wee Noise Makers discord server to engage with a community of users, share your experience, tips and tricks, and music made on the PGB-1

<https://discord.gg/EAmAgsmV5V>



And don't hesitate to tag us in your social media posts (@weenoisemakers), we will be happy to share your creations.

Hardware Layout

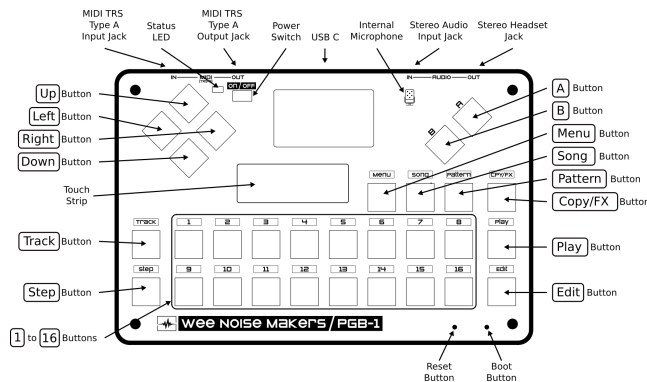

Powering Up and charging

To power up the device, slide the Power Switch to the left. The device will power up and the status LED will glow cyan blue.

The internal battery can be charged by connecting PGB-1 with a USB type C cable to a standard USB port on a computer, a USB power adapter, or USB power bank. Always use good quality equipment and cables to charge the device. The status LED will glow red when charging.

A full charge takes about 1h20. The red status LED will turn off when the charge is complete.

⚠ New batteries must be fully charged before use.

⚠ During charging operation, the on-screen battery level indicator does not provide valid information on the state of charge. Only the red status LED will tell you if the battery is still charging or not.

Firmware Updates

Regularly check for firmware update on the Wee Noise Makers website at <https://weenoisemakers.com/pgb-1>. You can also join the discord server (<https://discord.gg/EAmAgsmV5V>) or follow us on social media to receive notifications of firmware updates.

⚠ Never turn-off PGB-1 or unplug the USB cable during a firmware update. This may leave the device in an invalid state and will require you to follow the [Forced Firmware Update Procedure] .

First, connect PGB-1 to your computer using a good quality USB cable. Then, to start firmware update mode, turn on the device and press [Menu], use [Left] or [Right] to reach the **Update Mode** entry, press [A] to enter, press [Right] and then [A] to confirm. The device should now be in Firmware Update mode as indicated by the letters "UP" displayed on the keyboard LEDs.

The device should appear as a removable drive called "RPI-RP2" on your computer. Drag and drop the UF2 firmware file into the "RPI-RP2" removable drive. The update will proceed and PGB-1 will automatically reboot when finished.


Menus and Navigation

Use [Left], [Right], [Up], [Down], [A], and [B] buttons to navigate inside the PGB-1 settings and menus.

The [Left] and [Right] buttons select between the different settings. The [Up] and [Down] buttons change the value of the selected setting. The [A] button is used for positive actions (select, accept, enable, etc.), the [B] button for negative actions (go back, reject, disable, etc.).

On the screen, a menu position indicator is showing how many pages of settings are available and which one is currently displayed. In addition, a left/right facing arrow shows there are pages to the left/right of the current page.

For example, looking at the track settings:

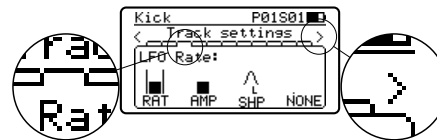

Audio In/Out and Volume

Audio output will automatically switch from internal speaker to headset output when a jack is inserted. To change the output volume, hold the [Play] button down and press or hold [Up] or [down]. Max volume can be very loud, especially with headphones or earbuds. Be careful, high volume for a long time may damage your hearing.

Audio input is disabled by default. To configure audio input, open the main menu with [Menu], then select **Inputs**. You will be able to unmute/mute for each input (Line-in, internal microphone, headset microphone), and set a common volume. On the second page. You can select a common effect for audio input.

Playing Demo Projects

PGB-1 comes with built-in demo projects that you can play to get familiar with the device's capabilities.

To load a project, press the [Menu] button, then press [A] to enter the **Projects** sub-menu. Go [Right] to select **Load** and press [A]. You should see a list of projects saved on the device, use the [Up] and [Down] buttons to select a project, then press [A] again. You will then have to confirm the action as loading a project will erase the current patterns, steps, tracks, and song settings.

Once the project is loaded, you can press the [Play] button to start the sequencer.

Most demo projects contain several "song parts", these are sections of a song with different patterns, chords, or instruments enabled (intro, chorus, break, outro, etc.).

To change the song part, press the [Song] button to enter **Song** mode, then press button [2] to queue part two. It can take some time for the new part to start playing as the sequencer will wait for the full run of the current part before switching to the new one.

Get familiar with each part and perform your own version of the track. You can also jump in **Track** mode and tweak the synths parameters.

Demo projects acknowledgement:

- "Lost1" (Lost one) by AA Battery Music (youtube.com/aabattery, @aabattery on Instagram)
- "Noxis" in collaboration with Technoval (soundcloud.com/technoval)
- "Dark (#1)" based BroBeatzTV's dark trap tutorial (youtube.com/BroBeatzTV)
- "Echo (#2)" based Alice Efe's downtempo tutorial (youtube.com/@Alice-Efe)

Main Modes

The PGB-1 interface can operate in 4 main modes that will affect the information displayed on the screen, the keyboard LEDs, as well as the function of the buttons. The main modes are: **Track** Mode, **Step** Mode, **Pattern** Mode, **Song** Mode.

 
To enter one of the main modes, press and release the mode buttons ([Track], [Step], [Pattern], [Song]). The corresponding LED will turn on and the screen will display settings for this mode.

Note: A fifth mode is available: Sample Mode. This mode allows you to create and edit samples directly on the device. To enter sample mode, hold the [Cpy/FX] button and press [Edit].

Track Mode

Track mode allows you to configure one of the 16 tracks of the PGB-1. By default, tracks 1 to 6 are synths tracks (Kick, Snare, Hihat, Bass, Lead, Chords), tracks 7 and 8 are sample tracks, tracks 9 to 11 are audio FX tracks, and tracks 12 to 16 are MIDI tracks. Note that all tracks can be configured to MIDI mode and control external devices.

In **Track** mode, pressing one of the [1] to [16] buttons will select the corresponding track and trigger a "preview" note for this track. The name of the selected track is shown at the top left of the screen.

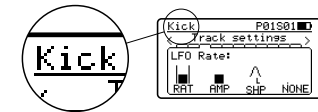


To select a track without playing it, hold the [Track] button and then press one of the [1] to [16] buttons. Note that you can use the same method to change the selected track from one of the other main modes without switching to **Track** mode.

On the screen, the track settings menu allows you to configure the selected track (synth engine, synth parameters, LFO, volume, shuffle, arpeggiator, etc.).

Step Mode

Step mode allows you to configure each of the 16 steps for the selected pattern of the selected track.

In **Step** mode, pressing one of the [1] to [16] buttons will select the corresponding step and trigger it at the same time. The numbers of the selected pattern and step is shown at the top right of the screen.

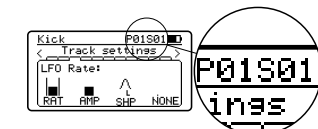

To select a step without playing it, hold the [Step] button and then press one of the [1] to [16] buttons. Note that you can use the same method to change the selected step from one of the other main modes without switching to **Step** mode.

 
On the screen, the step settings menu allows you to configure the selected step (Trigger condition, note, duration, velocity, repeats, etc.).

Pattern Mode

Pattern mode allows you to configure each of the 16 patterns for the selected track. In *Pattern* mode, pressing one of the [1] to [16] buttons will select the corresponding pattern. The number of the selected pattern is shown at the top right of the screen. To change the selected pattern from one of the other main modes without switching to *Pattern* mode, hold the [Pattern] button and then press one of the [1] to [16] buttons.


⚠ Selecting a pattern will not play this pattern. Which pattern is playing for each track is decided in *Song* mode.

On the screen, the pattern settings menu allows you to configure the selected pattern (Length and link). When two patterns are linked, the second pattern will automatically play at the end of the first one. Using this feature and pattern length, it is possible to create patterns from 1 step to 256 steps (all patterns linked: 16 x 16). A visualization of linked patterns is displayed on the screen. LEDs also show (cyan) all patterns linked to the selected pattern (blue).

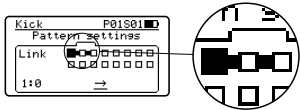

Song Mode

Song mode is different from the other modes because it controls two different things: Song Parts and Chord Progressions. In *Song* mode, pressing one of the [1] to [12] buttons will select and queue in the corresponding Song Part. To select a Song Part without queuing it, hold the [Song] button and then press one of the [1] to [12] buttons. On the screen, the Song Part settings menu allows you to configure the selected part, in particular for each track which pattern to play, if any. Each of 16 cells in the grid correspond to a track, similar to the 16 buttons in *Track* mode. The number inside the cell selects which pattern to play for a given track. An empty cell mutes the track (no pattern playing).

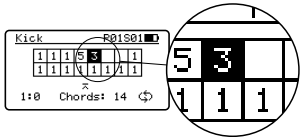

Use [A] and [B], to reach the settings at the bottom of the screen: length of the part, selected chord progression, and part link. Press [13] to [16] to select the corresponding Chord Progression. On the screen, the Chord Settings menu allows you to program a chord progression by specifying root note, quality and duration of chords. On the last page of chord settings, you also have the option to generate a random chord progression.

Live FX

PGB-1 features 16 live effects that can be enabled at any time during playback. They are split in two categories: sequencing effects and mixing effects. To toggle a live FX, hold the [Cpy/FX] button and press one of the [1] to [16] buttons. Sequencing Effects are located on the left side of the keyboard, in slots [1] to [4] and [9] to [12]. Mixing Effects are located on the right side of the keyboard, in slots [5] to [8] and [9] to [12].

Sequencing Effects :	Mixing Effects :
[1] Roll 16th	[5] Low Pass Filter
[2] Roll 8th	[6] Band Pass Filter
[3] Roll Quarter	[7] High Pass Filter
[4] Roll Beat	[8] Stutter 1
[9] Fill Steps	[13] Low Pass Filter Sweep
[10] Auto-fill Low Probability	[14] Band Pass Filter Sweep
[11] Auto-fill High Probability	[15] High Pass Filter Sweep
[12] Auto-fill Build-up	[16] Stutter 2

There can be only one effect of the same category enabled at a time (Filter, Auto Fill, Stutter, Roll), they cancel each other when enabled.

 
Create Your First Project

This section provides instructions to create a simple groove on the PGB-1 :

- Start a new project: press [Menu] then → Projects → New
- Go to *Track* mode: press [Track]
- Select the Kick track: press [1]
- Enable pattern edit: press [Edit]
- Enable steps: press [1], [5], [9], and [13]
- Switch to Snare track: hold [Track] and press [2]
- Enable steps: press [5], and [13]
- Switch to Hi-Hat track: hold [Track] and press [3]
- Enable steps: press [3], [5], [7], [8], [11], [15], and [16]
- Go to *Step* mode: press [Step]
- Select step 1: press [1]
- Change step "Condition" to "75%": press [Up] (multiple times)
- Go to "velocity" settings: press [right] 3 times
- Use the [Touch Strip] to lower the velocity to about a third
- Copy and paste step 1: Hold [Cpy/FX], then successively press [Step], [1], [2], [5], [6], [9], [10], [13], [14]
- Go to *Track* mode: press [Track]
- Set Hi-Hat shuffle: press [Right] multiple times until you reach the "Shuffle" page, then press [up] to increase the value (to taste).
- Press [Play].

Copy and Paste

There are four elements that can be copied and pasted on the PGB-1 : Song Parts, Tracks, Patterns, and Steps. Copying tracks means copying all patterns of a track to another track, but this **does not** include track settings. Copying patterns means copying all steps of a pattern to another pattern, this **does** include pattern settings. Start the copy/paste procedure, by holding the [Cpy/FX] button down, and keep it down during the entire procedure. Then select which kind of item you want to copy by pressing one of the [Step], [Pattern], [Track], or [Song] buttons. The screen will now display the kind of element to copy, and two "addresses": From and To. Addresses have between 1 and 3 identifiers: 1 for song parts, and tracks, 2 for patterns (Track and Pattern), 3 for steps (Track, Pattern, and Step).

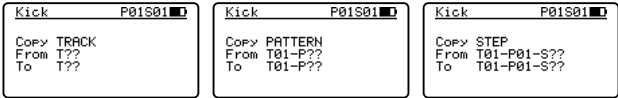

In the "From" address, two blinking question marks indicate the identifier to enter, press one button from [1] to [16] to set it. This is what will be copied. Now, there are two blinking question marks on the "To" address, press one button from [1] to [16] to select where to copy. The copy/paste is done immediately and blinking question marks on the "To" address indicate that you can paste the same element to another destination. The pattern and step addresses have more than one identifier, track and pattern id are automatically set to the current track and pattern. To change these values, press either [Track], or [Pattern] after selecting the kind of copy. For example the following sequence will copy step 2 from pattern 5 or track 7, to step 9 from pattern 3 of track 1. [Cpy/FX] → [Step], [Track], [5], [7], [2], [Track], [7], [3], [9]

Shortcuts

- Increase Volume Hold [Play] + Press [Up]
- Decrease Volume Hold [Play] + Press [Down]
- Increase BPM Hold [Play] + Press [Right]
- Decrease BPM Hold [Play] + Press [Left]
- Mute Track Hold [Play] + Press [1] to [16]
- Solo Track Hold [Play] + Press [Track], then Press [1] to [16]
- Enter Sampling Mode Hold [Cpy/FX] + Press [Edit]

Tips and Tricks

- By combining pattern length and pattern link features, you can create sequences from 1 step to 256 steps.
- Use step velocity setting to trigger synths at different intensity. For example, on the HiHat to create groove, or on the Snare to simulate ghost hits.
- To create Open HiHat steps, increase the "Release" synth parameter of a given step.

Troubleshooting

Device won't turn off

In case the device doesn't turn off when the power switch is in the [Off] position, it means there is an unrecoverable software malfunction. The only way out is to follow the [Reset Procedure] below.

Procedures

Reset Procedure

⚠ Changes to the current project, if any, will not be saved.

Use a paperclip to press the reset button (leftmost hole at the bottom right of the front panel).

Forced Firmware Update Procedure

First, make sure the device is off (power switch to the right, and cyan blue status LED is off). If the device doesn't turn off, follow the [Reset Procedure] . Connect the device to your computer using a good quality USB cable. Use a paperclip to hold the 'boot' button down (rightmost hole at the bottom right of the front panel). While holding the 'boot' button down, turn on the device (power switch to the left). The device should appear as a removable drive called "RPI-RP2" on your computer. Drag and drop the UF2 firmware file into the "RPI-RP2" removable drive. The update will proceed and PGB-1 will automatically reboot when finished.

Warranty

Devices purchased directly from Wee Noise Makers have a warranty of six months from the date of purchase. This warranty can be extended depending on local regulations. This warranty covers any manufacturing defects in the device. It does not cover damage due to incorrect handling, storage, power, overvoltage events, or modifications. Please use the "Contact" form on our website if you are experiencing issues with your device. Devices returned under warranty will either be refunded, replaced, or repaired at our discretion. User data may not be preserved. You will be responsible for the cost of returning the device to Wee Noise Makers .

Modding and Hacking

PGB-1 is open source and designed to be extended and modified by users, however, hardware modification or installation of third party firmware can lead to irreversible damage to the device. Wee Noise Makers will not be accountable for those damages, any modification will void the warranty, and could void the user's authority to operate the equipment. We will not refund, repair, or replace any products that have been modified.