

Syncro phone user guide

Contents

 
- Getting started.....3**
 - Inserting the battery.....3
 - Removing the battery.....3
 - Inserting the SIM card.....3
 - Important keys and shortcuts.....4
- Phone basics.....4**
 - Making a call.....4
 - Setting up a conference call.....5
- Troubleshooting.....5**
 - Repairing the phone.....5
 - Running problem diagnostic report.....5
 - Frequently asked questions.....6
- Index.....7**

Getting started

Inserting the battery

Before proceeding with these steps, make sure that your mobile phone is turned off.

1. Insert the battery into the battery compartment. See the following image:

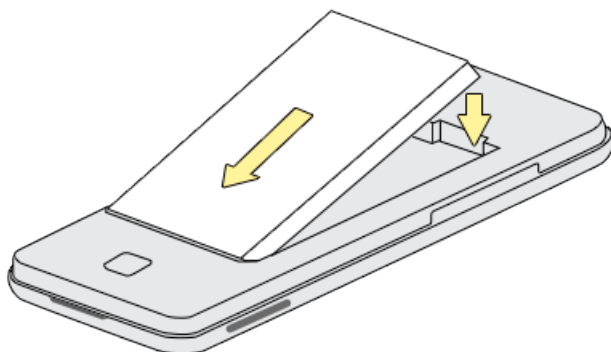


2. Put the back cover on. Make sure it is closed firmly.

Removing the battery

Before proceeding with these steps, make sure that your mobile phone is turned off.

 1. Remove the back cover.
2. Lift out the battery from the notch as per the following image:

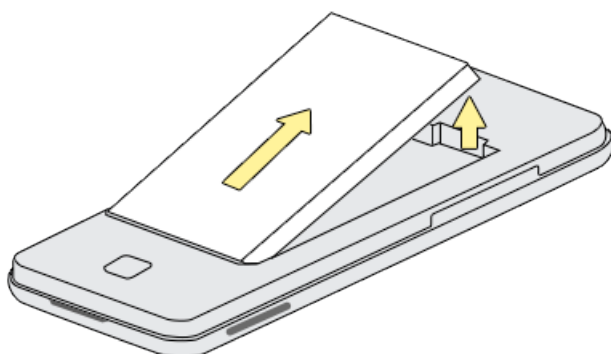

Inserting the SIM card

Describes how to insert the SIM card into the phone.

Make sure that your phone is turned off.

- 1.
2. Insert the SIM card with the gold contacts facing down.
- 3.

Important keys and shortcuts

The most important keys and shortcuts of your phone are listed here:

Table 1: Important keys









Keys on your phone keyboard		
	<i>Send</i>	<ul style="list-style-type: none"> • Make a call • Answer a call
	<i>End/Power</i>	<ul style="list-style-type: none"> • End a call • Return to the home menu
	<i>Lock</i>	<ul style="list-style-type: none"> • Lock or unlock the phone
	<i>Escape</i>	<ul style="list-style-type: none"> • Close the menu • Return to previous menu
	<i>Menu</i>	<ul style="list-style-type: none"> • Open the main menu • Select an item on click

Table 2: Phone shortcuts

Most used shortcuts	
Check your voice mail	Press and hold <i>I</i> .
Change your ring tone	Press and hold  and then select <i>Phone Ring Tones</i> .
Turn on or turn off the speakers	Press the  key.
Set the device on silent mode	Press and hold the  key.
Contact speed dial	Press and hold the key you would like to assign to contact for speed dial.

Phone basics

This section shows the basics phone features.

Making a call




Make sure that your phone is unlocked, otherwise press the *Unlock* key

1. Type a phone number or a go to *Contacts* and search for contact name
2. Press the *Call* key.
3. To end your call, press the *Cancel* key.

Setting up a conference call

You can easily set up a conference call with your family, friends, co-workers. Call the first participant and then join calls together as described in the following procedure.

Before starting, make sure that your *SIM card* is enabled for conference calls service.

1. Call the first participant. See [Making a call](#) on page 4
2. During the call, press  key to add a participant. In this way the first participant is put on hold.
3. Type the participant phone number or search for in contacts.
4. Press the  key.
5. To join also the first contact to the conference call, press the  key again.
6. To join other contact to the conference, repeat steps 2 - 5.

Troubleshooting

 
Troubleshoot most common issues.

Repairing the phone

This section contains a brief explanation that helps the technician to identify and troubleshoot the phone problems.

Make sure that your phone is turned off.

1. Remove the back cover.
2. Lift out the battery from the notch as per the following image:

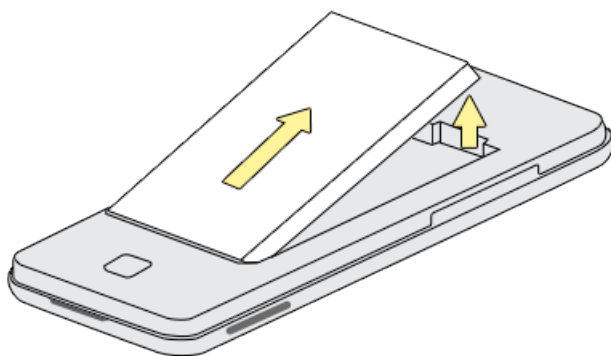

3. Inspect the phone main-board.
4. Look for signs of corrosion or moisture and, if found, replace the main-board.
5. Insert the battery.
6. Put the back cover on.

Running problem diagnostic report

If you have connectivity problems, you can run a diagnostic report that helps you to identify the issues the phone might have. To run the report, follow this procedure:

1. Select *Menu > Settings*.
2. Choose *Advanced Settings > Problem diagnostic*.

3. Press *Run*.
4. Look for out of range data.

Frequently asked questions

- **Q:** What is my lock, PIN, or PUK code?

A: The default lock code is dsadasdasd asdas dasdiasd asdio asdasiodjas2345. If you forget or lose the lock code, contact your device dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

- **Q:** How do I close an application that is not responding?

A: Press and hold the home key. Scroll to the application, and press the backspace key to close the application.

Index

C

Contact
 speed
 dial [4](#)
corrosion [5](#)

D

diagnostic
 report [5](#)

M

moisture [5](#)