

- More
  - View source
  - History
- Page

# Gazebo Tutorial

**This tutorial describes how to use Sawyer with Gazebo the standard Physics Simulator for ROS.**



**Please visit the Gazebo Tutorials homepage for more information about the Physics simulator (<http://gazebo.sim.org/tutorials>)**

## Contents

- 1 Installation/Prerequisites
- 2 Sawyer Simulator Installation
  - 2.1 Simulation
- 3 Smoke Test
- 4 Run SDK Examples
- 5 Troubleshooting

## Installation/Prerequisites

- Make sure you have followed the Workstation Setup tutorial before beginning this section. Sawyer Gazebo is **only** available for **Ubuntu 16.04, ROS Kinetic, and Gazebo 7**.
- Ensure the following software packages are installed:

ROS Kinetic

```
$ sudo apt-get install gazebo7 ros-kinetic-qt-build ros-kinetic-gazebo-ros-control ros-kinetic-gazebo-ros-pkgs  
ros-kinetic-ros-control ros-kinetic-control-toolbox ros-kinetic-realtime-tools ros-kinetic-ros-controllers ros-  
kinetic-xacro python-wstool ros-kinetic-tf-conversions ros-kinetic-kdl-parser ros-kinetic-sns-ik-lib
```

## Sawyer Simulator Installation

### ROS Kinetic

- From your catkin workspace where the SDK resides, use wstool to install and update:

#### Install sawyer\_simulator

```
$ mkdir -p ~/ros_ws/src  
$ cd ~/ros_ws/src  
$ git clone https://github.com/RethinkRobotics/sawyer_simulator.git  
$ cd ~/ros_ws/src  
$ wstool init .  
$ wstool merge sawyer_simulator/sawyer_simulator.rosinstall  
$ wstool update
```

**IMPORTANT:** Make sure all simulator repositories update to their proper branch.

#### Build Source

```
$ source /opt/ros/kinetic/setup.bash  
$ cd ~/ros_ws  
$ catkin_make
```

## Simulation

- The intera.sh shell has a special hook of `*sim*` for Simulation. Run the Intera shell script with sim specified:

```
$ ./intera.sh sim
```

- Start simulation with controllers:

```
$ roslaunch sawyer_gazebo sawyer_world.launch
```

## Smoke Test

Check if the simulator was installed and launched successfully by typing the following commands:

```
$ rosnodetool list
```

This should list the nodes as here.

```
$ rostopic list
```

This should list the topics as here.

```
$ rostopic echo /robot/state
```

By default, the following messages should be displayed at 100 HZ.

```
enabled: False
stopped: False
error: False
estop_button: 0
estop_source: 0
---
```

## Run SDK Examples

- Start Joint Torque Springs example:

```
$ ./intera.sh sim
$ roslaunch sawyer_gazebo sawyer_world.launch
*in a new terminal*
$ ./intera.sh sim
$ rosrune intera_examples joint_torque_springs.py
```

- Or, Start Simulated Pick and Place example:

```
$ ./intera.sh sim
$ roslaunch sawyer_sim_examples sawyer_pick_and_place_demo.launch
```

For additional information on the interfaces that are implemented with this release, visit the [Simulator API page](#).

## Troubleshooting

- **Please refer to the troubleshooting page [Gazebo Troubleshooting](#)**

---

Retrieved from "[http://sdk.rethinkrobotics.com/intera/a/index.php?title=Gazebo\\_Tutorial&oldid=1565](http://sdk.rethinkrobotics.com/intera/a/index.php?title=Gazebo_Tutorial&oldid=1565)"

---

- © 2019 Rethink Robotics. All rights reserved.
- Special page