

Generic Sensor Kit Field Tool User Manual

David Gay, Intel Research
dgay@intel-research.net

March 19, 2003

1 Introduction

The field tool is a simple tool for debugging GSK-based sensor networks “in the field”. The field tool allows a user to walk up to a GSK-mote and inspect or modify its state by issuing a set of simple commands. The field tool only operates on the motes that are in direct radio range (i.e., close proximity) to the user.

The field tool runs on handhelds devices (currently HP Ipaq’s running Linux) equipped with a Canby compact-flash mote.

2 Mode of Operation

Before the first use, the field tool should be configured as explained in Section 4.

Once started, the field tool presents the user with the screen shown in Figure 1. The top-left pane is a list of commands (“command pane”) that can be sent to the mote, the top-right pane is a list of the motes (“mote pane”) that the field tool has discovered in the local neighbourhood, the bottom pane (“result pane”) displays the results returned of field tool commands as returned by the motes.

GSK-motes spend most of their time asleep; they will not discover (and be discovered by) the field tool until the next time they wake up. Once a mote notices the field tool, it will turn on its yellow LED and switch to an “always-on” state. Simultaneously, assuming no radio problems, the field tool will update the list of motes known to be in the neighbourhood (top-right pane).

The field tool advertises its presence by sending periodic messages. The interval between these periodic messages can be changed with the field tool configurator (Section 4). If a mote does not hear from the field tool for 20s, it assumes that it can return to normal operation, turns off its yellow LED, and resumes its regular sleep/wake schedule. Similarly, if the field tool does not hear from a mote for 10s (or the “Mote Timeout” value chosen using the configurator), it assumes that the mote is no longer in proximity to the field tool and removes it from the mote list in the top-right pane.

Sending commands to motes is straightforward:

1. Select a specific mote from the mote list, or select “ALL” to send a command to all motes in the range of the field tool (which should be the same as those shown in the mote list).
2. Execute the desired command by clicking on its button in the top-left command pane.

The results of the command, as returned by the motes, are shown in the result (bottom) pane. Results are of the form “mote number: command results”, with one entry per mote that received the command. Note that problems with radio

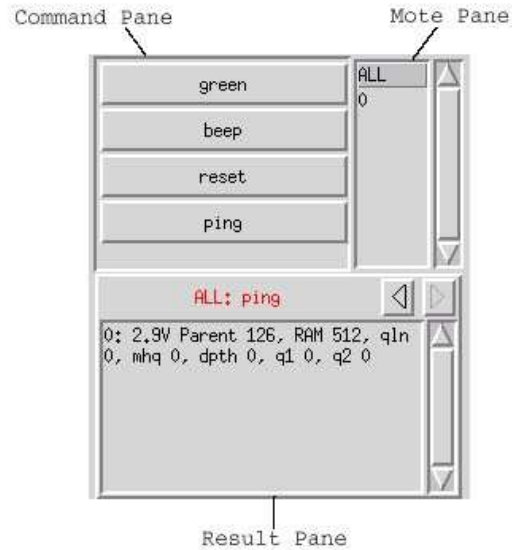


Figure 1: Field Tool User Interface.

connectivity may lead the mote to execute the command, but prevent the mote's answer from being displayed by the field tool.

It is possible to scroll through the answers from previous commands using the left and right arrows at the top-right of the result pane. The title area of the result pane shows the destination of the command (ALL or a mote number), the command name and the time the command was executed. The results from the latest command are displayed in red, without a time.

3 Field Tool Commands

There are currently four commands defined in the field tool:

- **green**: toggle the green LED. This can be used to check that field tool/mote communication is working. Motes just return "done" as the result.
- **beep**: sound the mote's sounder. The purpose is similar to "green". Motes just return "done" as the result.
- **reset**: Reset the mote. Note: this command has no result (as the mote just reset itself...).
- **ping**: Return vital statistics on the operation of the GSK-mote. The result is of the form "X V, Parent N, RAM R, qln Q, mhq M, dpth D, q1 Q1, q2 Q2", where:
 - X is the current voltage of the mote's batteries.
 - N is the parent of this mote in the routing tree.
 - R is the amount of RAM available for queries on this mote.
 - XXX: Wei, fill the other parameters in...

Figure 2: Field Tool Configurator.

4 Field Tool Configuration

The Canby mote should be programmed with the `GenericBase` application, programmed with

```
make <motekind> -DCANBY MSG_SIZE=49
```

where `<motekind>` is `mica` or `mica2`.

The field tool configurator must be used to set up important field tool parameters. The interface of this configurator is shown in Figure 2. The following parameters can be set:

- **Serial or IP:** choose whether the field tool communicates with the Canby mote (or equivalent) over IP or via a serial port. This should normally be left at “Serial”.
- **Host/Serial:** Hostname for IP communication when IP is chosen, serial port name when Serial is chosen. Normally “/dev/tts/0”.
- **Port/Baud:** Portname for IP communication, baud rate for serial communications (mica-based Canby motes use 19200 baud, mica2-based Canby motes use 57600 baud).
- **Group:** group id of the GSK motes. You must set this to match the group ID of your generic sensor kit deployment. Also, the Canby mote must be programmed with this group ID.
- **Local Id:** ID for the field tool. Should be different from any GSK-mote ID.
- **Msg Size:** Mote radio message size. Must be 56.
- **Command Period:** the commands selected by the user are sent multiple times to ensure reception by the motes. This value is the interval in ms at which messages are repeated. Normally 500ms.
- **Command Count:** the number of times commands selected by the user are sent. Normally 3.
- **Wakeup Period:** the interval (in ms) between the messages the field tool sends to advertise its presence to motes. Must be smaller than half the normal awake period of the motes, or they will not notice the field tool.

- **Mote Timeout:** interval (in ms) after which motes which have not been heard by the field tool are removed from the mote list. Default is 10s. This should be at least twice the wakeup period to avoid motes constantly appearing and disappearing from the mote list.