

Supported Commands

▸ Basic DSC Mode (BDSC)

▸ Decoder Key:

- XXXXX = a five digit number in decimal format
- [a|b] = "a" or "b"
- [1-10] = Any value between 1 and 10 inclusive
- \r = <CR>
- \t = <TAB>
- <some text> = a variable length string like this description

▸ Commands:

- A
 - Returns:
 - Action: Set aligned flag = True
- a
 - Returns: Y or N
 - Action: Returns if the scope has been aligned or not
- Q
 - Returns: [+|-]XXXXX\t[+|-]XXXXX\r
 - Action: Get encoder DSC values (RA, DEC)
- R XXXXX XXXXX\r
 - Returns: <nothing>
 - Action: Set encoder resolution (RA, DEC)
- Z XXXXX XXXXX\r
 - Returns: *
 - Action: Set encoder resolution (RA, DEC)
- G
 - Returns: [+|-]XXXXX\t[+|-]XXXXX\r
 - Action: Get encoder resolution (RA, DEC)
- H
 - Returns: [+|-]XXXXX\t[+|-]XXXXX\r
 - Action: Get encoder resolution (RA, DEC)
- V
 - Returns: <version>\r
 - Action: Get the software version of TeensyDSC
- q
 - Returns: XXXXX\r
 - Action: Get the error count
- T

- Returns: XXXXX,XXXXX\r
 - Action: Toggle Test mode. Prints encoder resolutions every 100ms
- P
 - Returns: P
 - Action: Pretends to "power up" the encoders
- MODE WIFI\r
 - Action: Switch to WiFly Command mode (see below)
- MODE CONFIG\r
 - Action: Switch to TeensyDSC Command mode (see below)
- MODE SERIAL\r
 - Action: Connect to Serial Port A

▸ WiFly Commands (MODE WIFI)

In this mode, most everything you type is passed directly to the WiFly chip. In order to talk to it, you'll want to read the [WiFly User's Guide](#).

Note, while in this mode the digital setting circles (DSC) feature of the device will be unusable.

▸ Warnings:

- Manually configuring your WiFly board may "brick" it and render it un-operable!
- If you enter "command mode" (\$\$\$), make sure you also exit command mode too! (exit)
- Do not change the command to enter "command mode" as described in section 2.6.1 of the user manual! Doing so will break TeensyDSC!
- EXIT\r
 - Action: Stop talking to the WiFly and return to the previous mode

▸ TeensyDSC Commands (MODE CONF)

▸ WiFi Config commands

- showconf\r
 - Action: prints the current TeensyDSC config
- ssid <ssid>\r
 - Action: Changes the SSID of the AP
- wpa [on|off]\r
 - Action: Enable/disable WPA security of the AP
- wpa pass <password>\r
 - Action: Changes the WPA password of the AP
- channel [1-13]\r
 - Action: Changes the WiFi channel of the AP
- save\r

- Action: Saves any WiFi changes to the AP EEPROM
- reboot wifi\r
 - Resets the WiFly. May be required for some changes to take effect!
- reset defaults\r
 - Resets all the stored defaults in the TeensyDSC
- EXIT\r
 - Action: Stop configuring the TeensyDSC and return to the previous mode