



#10

#1

6 position rotary switch (SRRN162)  
→ language selector

10 | 09 | 08 | 07 | 06 | 05 | 04

switch  
→ random  
→ consecutive

8Ω | 3W

switch  
→ speaker on  
→ speaker off

3.5mm  
audio jack

Micro SD card adapter with 16kHz  
unsigned 8 bit pcm .wav tracks on SD card.

10kΩ

0.05 µF

10 µF

250 µF

AMPLIFIER

LM386

10 µF

Giant DPDT  
rocker switch

LED  
inside  
arcade  
pushbutton

9v

9v