

# **How to Conect your Xstream server**

V1.0

20-11-17

## Preface

We always advice all friends to upadate the firmware by AllCode mode, beause the whole firmware include the application ,UI resouce, preset satelliate, bootloader.... But you will lost the channel list and softcam key data or IPTV or the server information after update allcode.

So Please backup those information to usb stick the first then update them to your box.



This feature is only for Freesat V8 Golden and V8 Super.

### **Notice:**

***Please prepare one usb stick which format is FAT32.the following actions need one usb stick to store some files.***

***Please keep you power adapter is stable and don't cut power or power off box when doing.***

- 1) Backup your channel list softcam data and cam server information.
- 2) Update the last firmware by allcode mode.
- 3) Insert Ethernet cable or enable wifi dongle
- 4) Enter main menu / Channel List / IPTV .

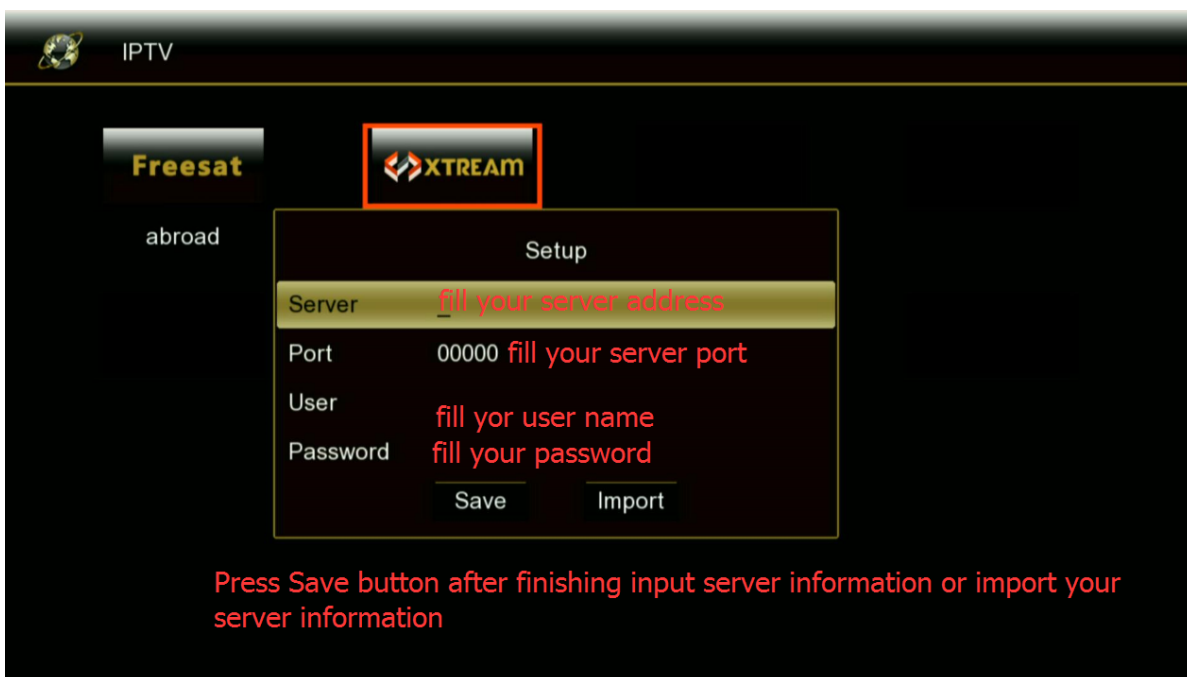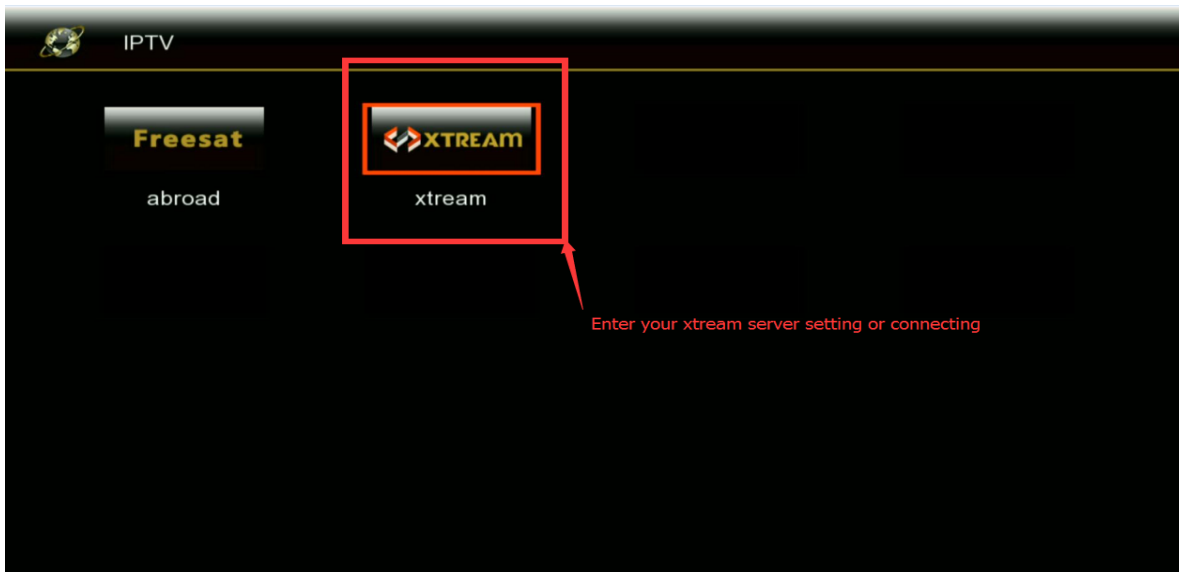

The box will auto connect the server after pressed Save button

5) The import file format :

5.1) Creat one free txt file then rename it to **xstream.txt**

5.2) open xstream.txt by notepad and edit. The format is same the following:

```
#this doc is xstream parameter setting  
#just like below
```

```
url = sample.xstream.info  
port = 12345  
user = user123  
password = user123
```

5.3) fill your server correct information then save the file.

5.4) copy this file to one usb stick and insert it to box.

5.5) enter xstream setting menu and press import button to get the server information from xstream.txt file then press save button to save and connect server.