

系统使用说明

- 1、使用 Google Chrome 浏览器输入地址：<http://221.2.232.82:8766/>，进入系统。
- 2、在登陆页面中输入用户名和密码，点击登陆按钮。通过验证后即可登入系统。



The image shows a web-based login interface for a system titled "基于网联网的智能控制系统" (Internet-based Intelligent Control System). The interface is enclosed in a light gray box with a blue grid border. At the top left, there is a small icon of a person and the text "用户登录" (User Login). The main title "基于网联网的智能控制系统" is displayed in a large, bold, black font, followed by the version number "v2015.07.05" in a smaller font. Below the title, there are three input fields: "用户名:" (Username) with the value "admin", "密码:" (Password) which is empty, and "保存密码:" (Remember password) with a dropdown menu showing "保存7天" (Save for 7 days). At the bottom center, there is a button with a person icon and the text "登录" (Login).

用户登录


基于网联网的智能控制系统 v2015.07.05

用户名:


密码:

保存密码:


 登录

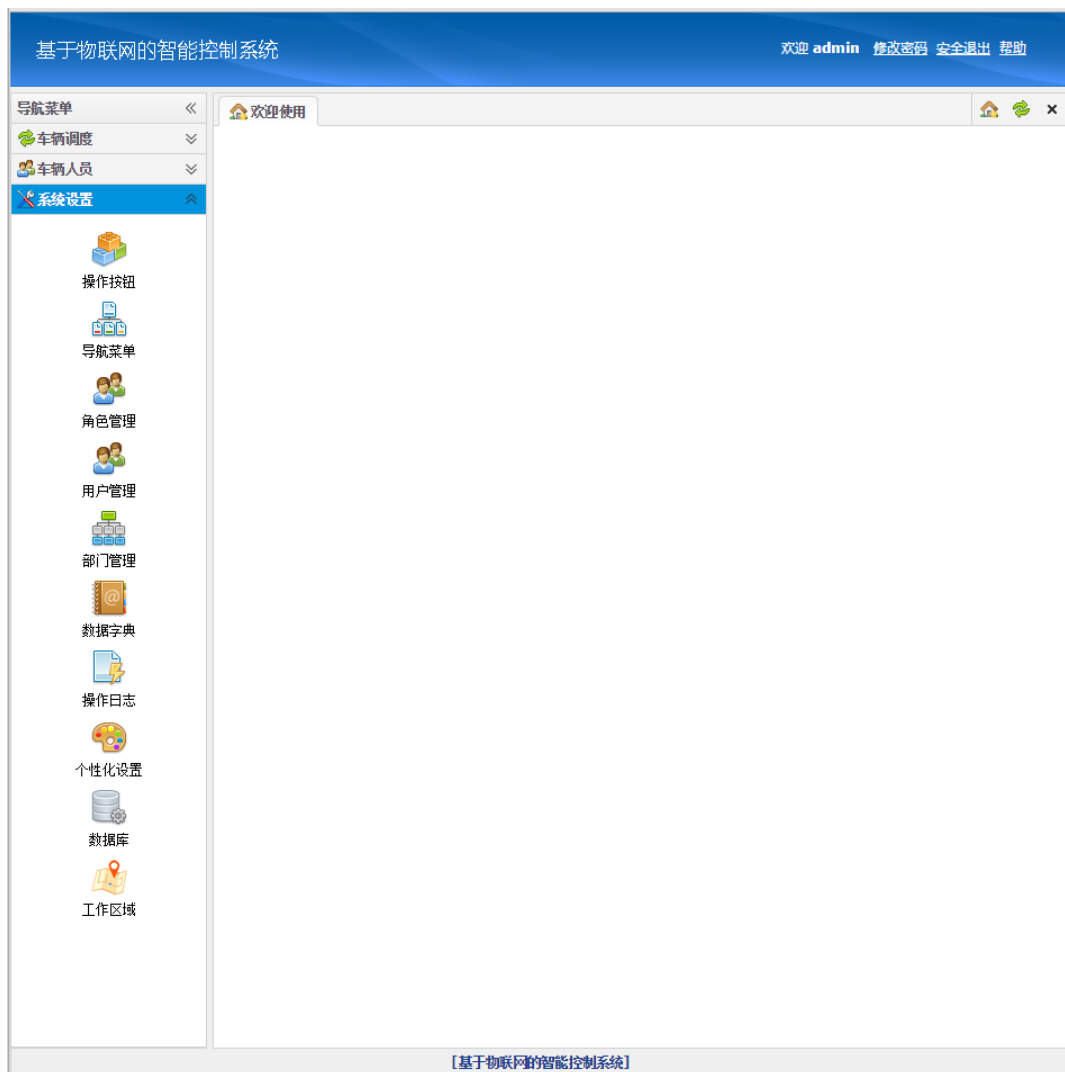



3、首次进入系统先添加其它用户。在系统管理-用户管理中增加删除用户。

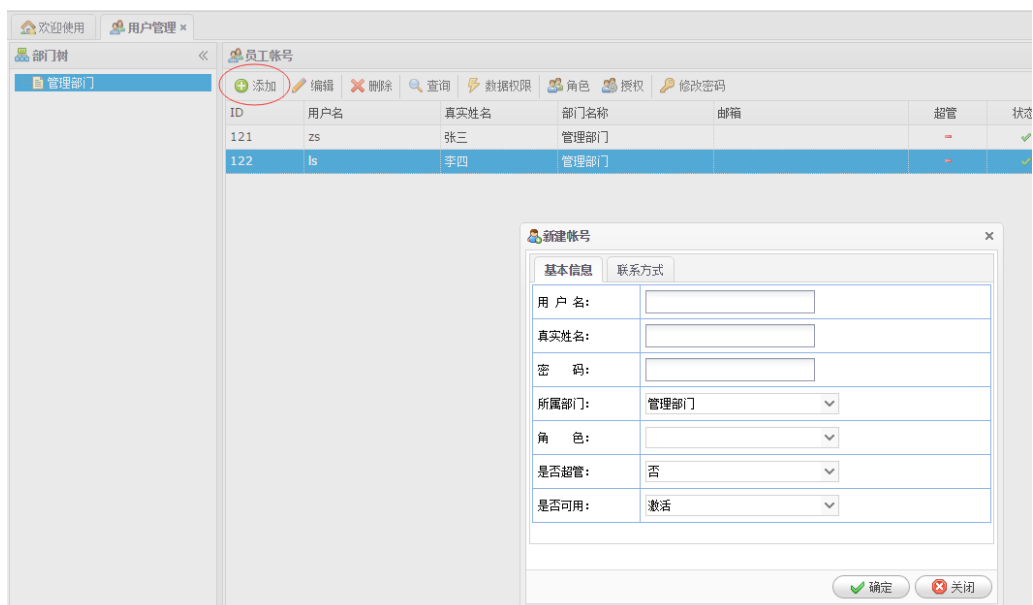

4、其次，对设备进行管理。在系统设置-数据字典中管理设备。设备安装后，向安装人员索要设备编号，添加进系统。在没有添加设备的情况下，不显示工作信息。

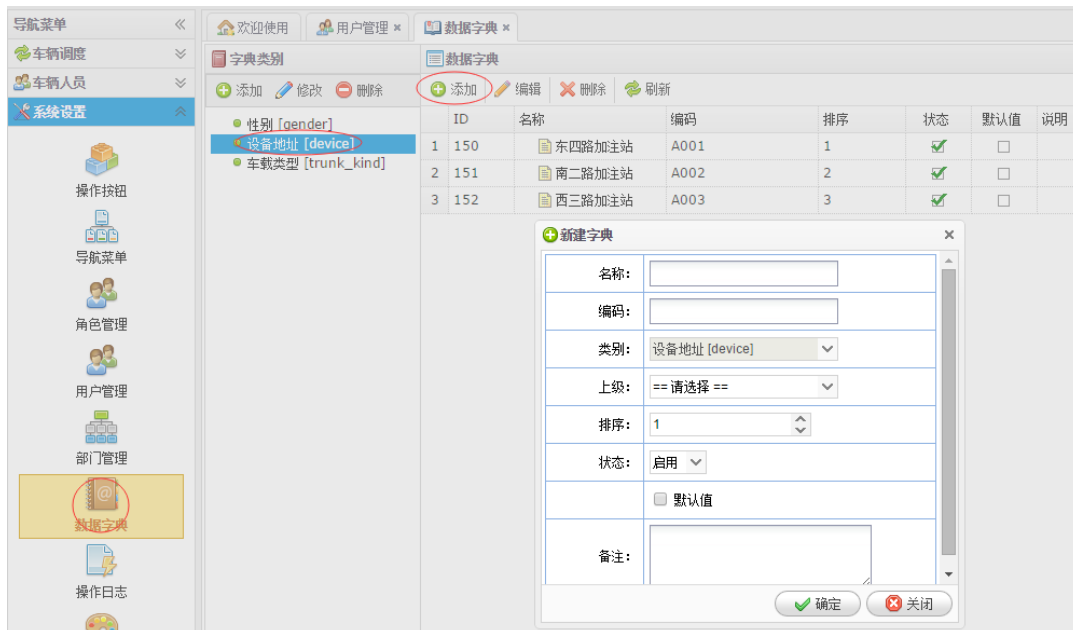

5、在车辆人员-车辆管理中增加车辆信息，在车辆人员-人员管理中增加人员信息。

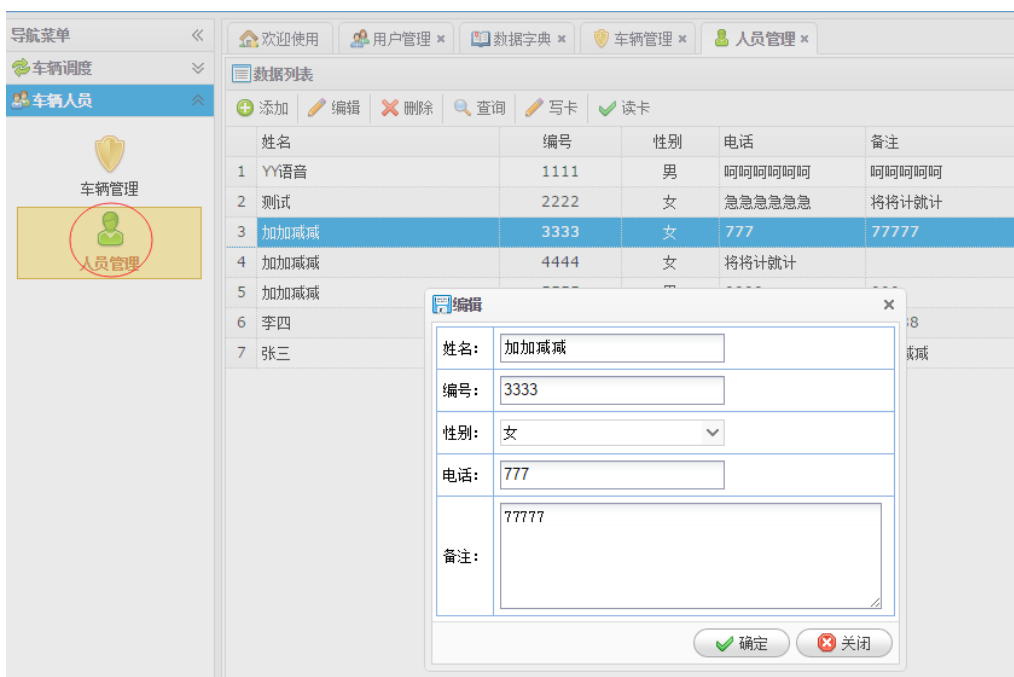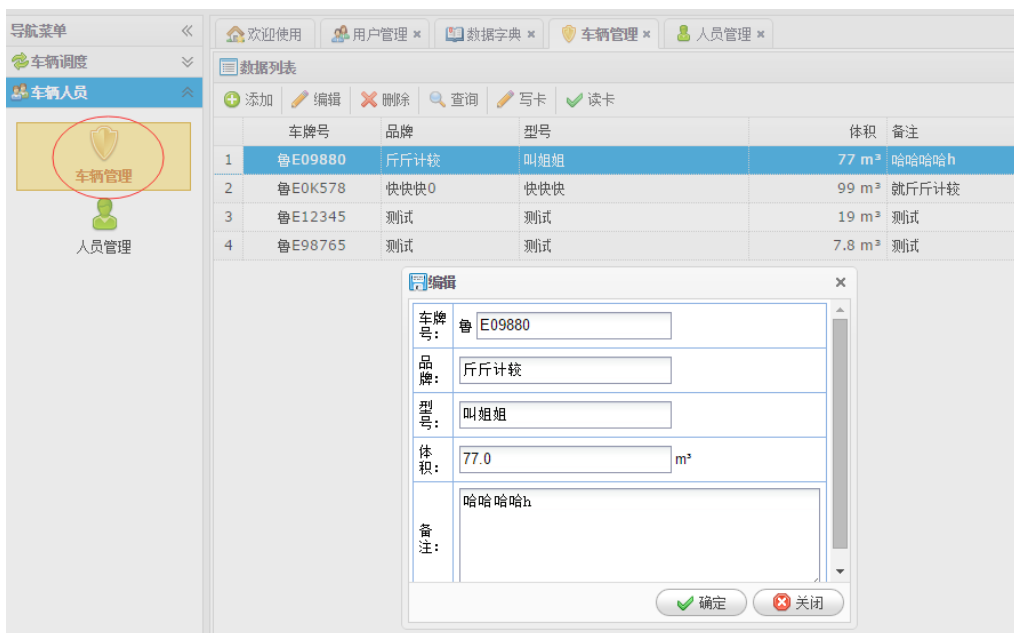

车辆、人员信息添加完成后，连接写卡器并将高频卡放在读卡器上方，点击写卡按钮即可将车辆、人员信息写入高频卡。

6、工作信息可以在车辆调度-工作明细中查看。

