

 


MODEL KMB-15 系說明書

MODEL KMB-15 INSTRUCTION MANUAL

KWC KWIEN WELL TOY INDUSTRIAL CO., LTD.
www.kwcgun.com

台南市東區自由路2段209巷5號
NO.5, LAINE 209, SEC. 2,
ZIH-YOU RD., EAST DISTRICT
70157, TAINAN, TAIWAN
TEL:06-2691815
sales@kwcgun.com
www.kwcgun.com

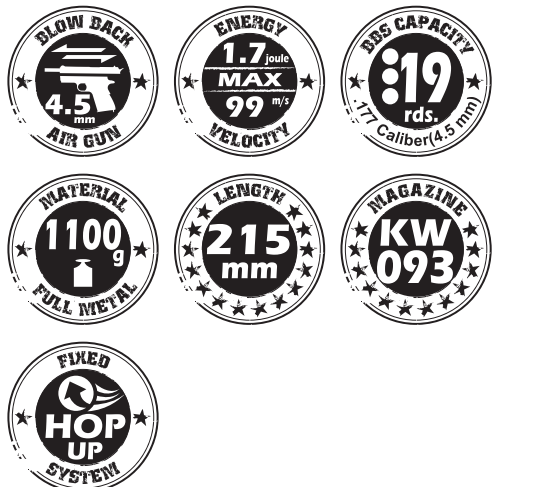

操作說明

 
OPERATION

1. 取出彈匣。
RELEASE MAGAZINE.



2. CO2小鋼瓶的使用
INSTALLING 12G CO2 CARTRIDGE
逆時針轉出旋塞後，置入小鋼瓶B，再以順時針方向鎖緊旋塞A。當刺破鋼瓶出氣時，請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

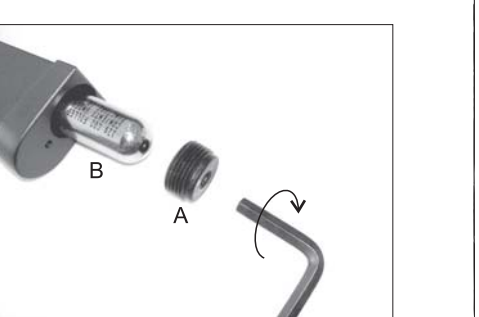


- ▲注意：為維護彈匣使用壽命，請盡可能不要殘留CO2氣體於彈匣內。
▲CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝BB彈

LOADING BBS

 為了使擊發順暢，填裝方法是讓B. B彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.

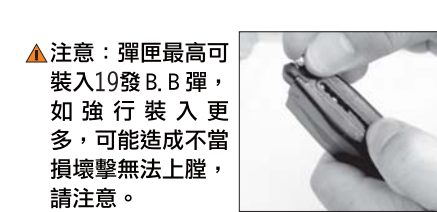

- ▲注意：彈匣最高可裝入19發B. B彈，如強行裝入更多，可能造成不當損壞擊無法上膛，請注意。
▲CAUTION: Magazine max capacity is 19 rounds. Loading more than this quantity could bring malfunctions.

4. 彈匣上膛

 
INSERTING THE MAGAZINE

將裝好BB彈的彈匣插入槍身上推入，直到彈匣卡筴發出“卡嗶”為止。Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.

5. B. B彈上膛

CHAMBERING THE BB

將上蓋往後拉到底，放開上蓋則上蓋會自動回位，同時亦將B. B彈送上膛完成射擊準備。
Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.

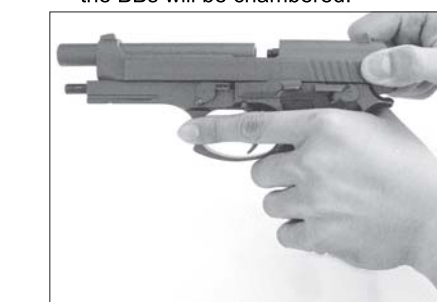

- ▲注意：拉動上蓋時，請勿將手指扣住扳機，以免發生不當射擊，造成危險。
▲CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 單連發及保險切換

SWITCH SEMI AUTO AND FULL AUTO

▲注意：必須在上膛狀態下保險才可關閉
▲CAUTION: Safety can only be turned on when this pistol is cocked.



若你購買的槍有連發系統，請依照下圖示操作啟動連發系統
If your pistol has full auto function, you may also switch to full auto by instruction below.

 
 
 


- ▲注意：上蓋滑動時，注意縫隙夾到手指
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

7. 射擊

SHOOTING

對準目標區後扣下扳機，則B. B彈將被射擊出去。
Aim the target and pull the trigger to shoot.

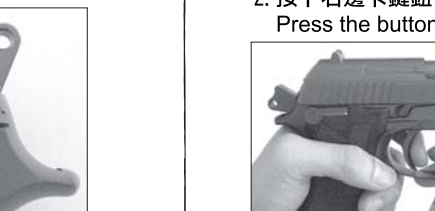
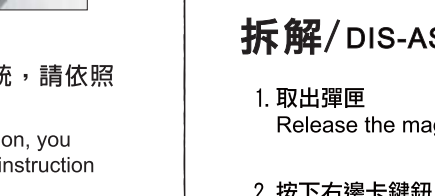
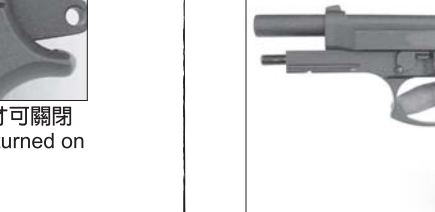


- ▲注意：上蓋滑動時，注意縫隙夾到手指
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

8. 上蓋即可取出

Remove the slide.

   ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

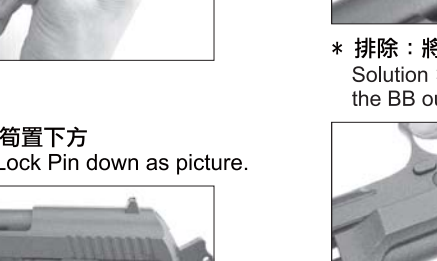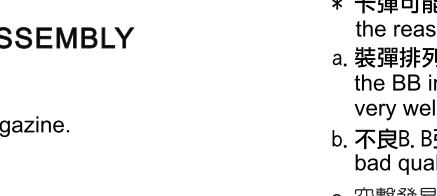
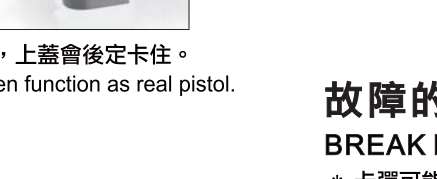


- ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

9. 射擊

SHOOTING

  對準目標區後扣下扳機，則B. B彈將被射擊出去。
Aim the target and pull the trigger to shoot.



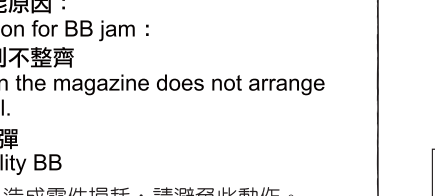
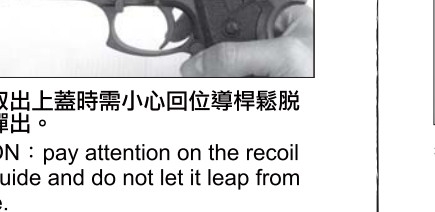


- ▲注意：上蓋滑動時，注意縫隙夾到手指
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

10. 上蓋即可取出

Remove the slide.

    ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

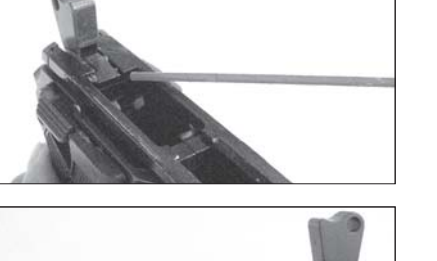
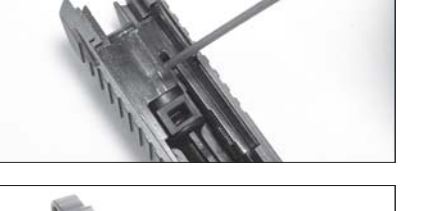
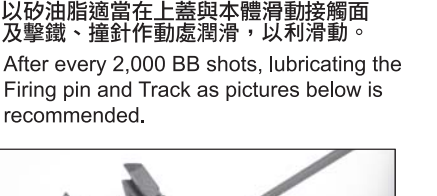
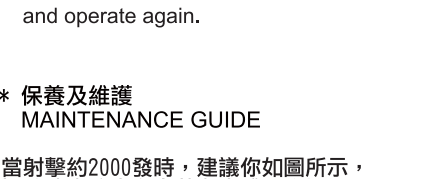


- ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

11. 射擊

SHOOTING

    對準目標區後扣下扳機，則B. B彈將被射擊出去。
Aim the target and pull the trigger to shoot.


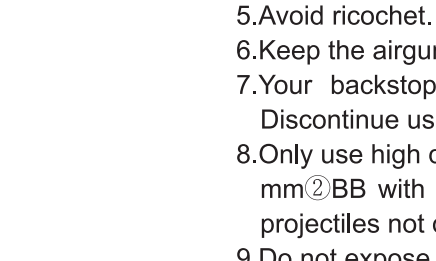
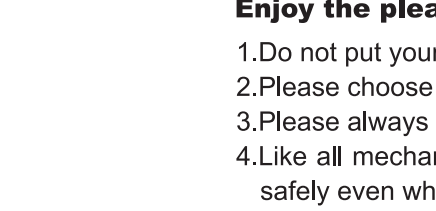
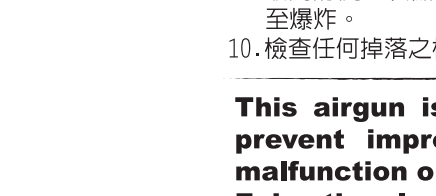
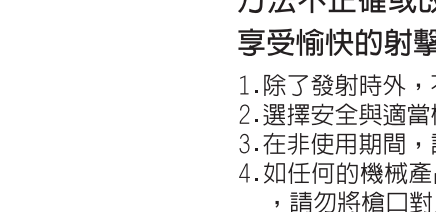


- ▲注意：上蓋滑動時，注意縫隙夾到手指
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

12. 上蓋即可取出

Remove the slide.

     ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

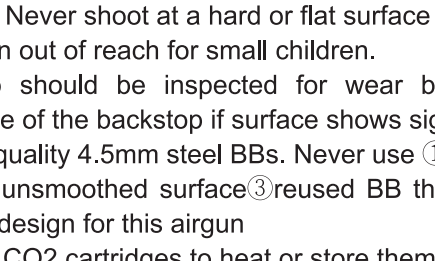
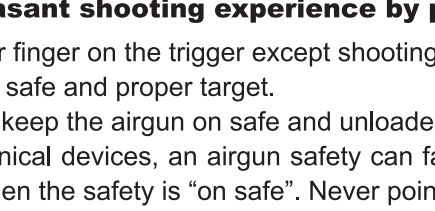
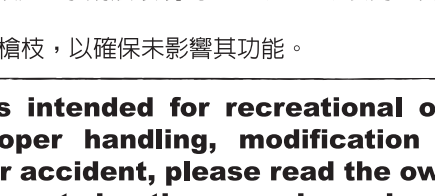
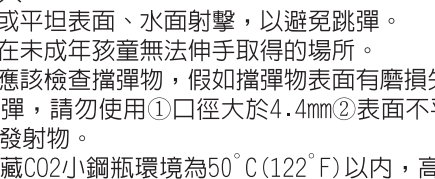
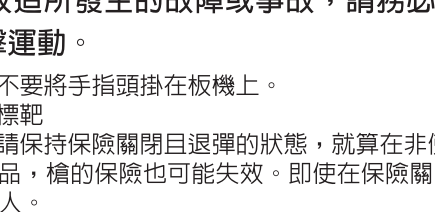


- ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

13. 射擊

SHOOTING

     對準目標區後扣下扳機，則B. B彈將被射擊出去。
Aim the target and pull the trigger to shoot.

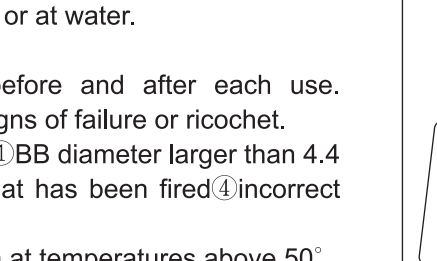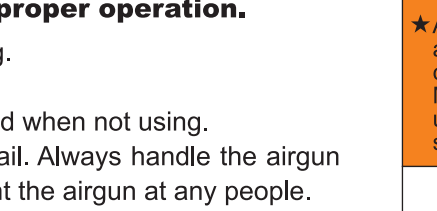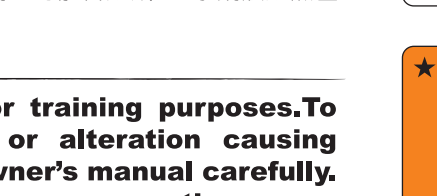
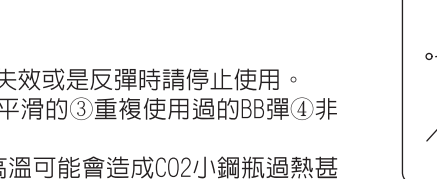
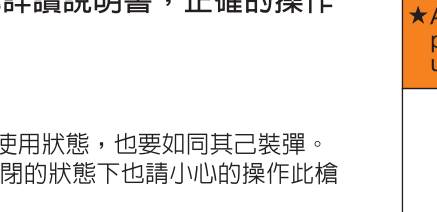


- ▲注意：上蓋滑動時，注意縫隙夾到手指
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

14. 上蓋即可取出

Remove the slide.

   ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

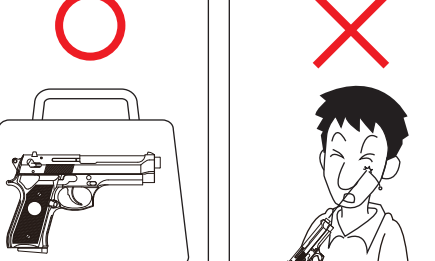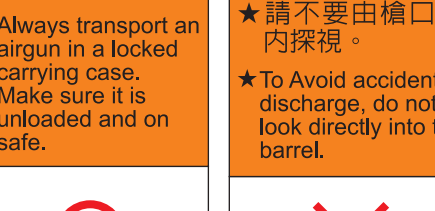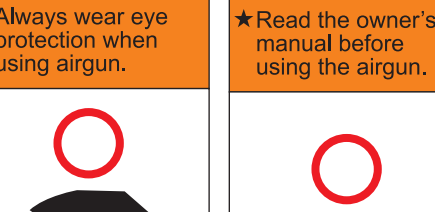

- ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

15. 射擊

SHOOTING

對準目標區後扣下扳機，則B. B彈將被射擊出去。
Aim the target and pull the trigger to shoot.

 
 


- ▲注意：上蓋滑動時，注意縫隙夾到手指
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

16. 上蓋即可取出

Remove the slide.

▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

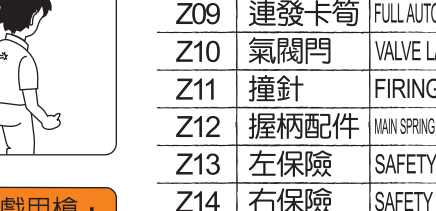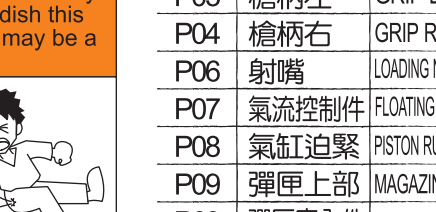

- ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

17. 射擊

SHOOTING

對準目標區後扣下扳機，則B. B彈將被射擊出去。
Aim the target and pull the trigger to shoot.

 


- ▲注意：上蓋滑動時，注意縫隙夾到手指
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

18. 上蓋即可取出

Remove the slide.

▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.





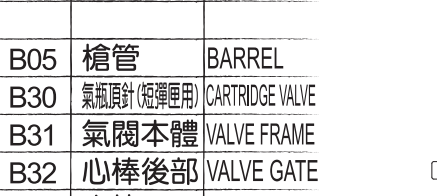


- ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

19. 射擊

SHOOTING

     對準目標區後扣下扳機，則B. B彈將被射擊出去。
Aim the target and pull the trigger to shoot.

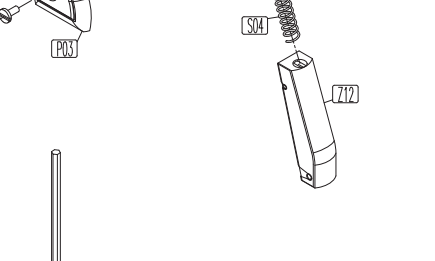
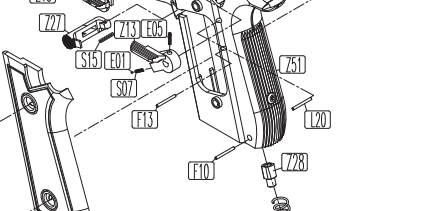
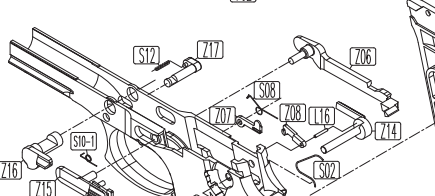
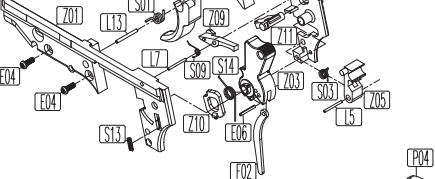
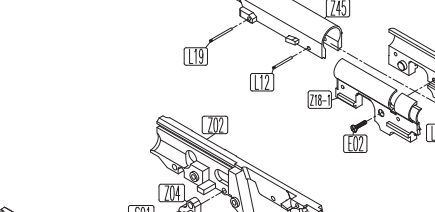


- ▲注意：上蓋滑動時，注意縫隙夾到手指
▲CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

20. 上蓋即可取出

Remove the slide.

     ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

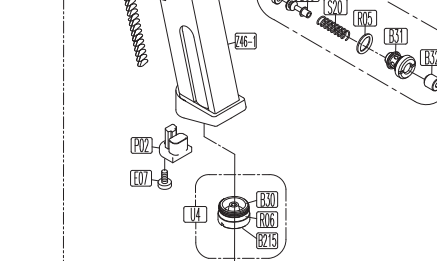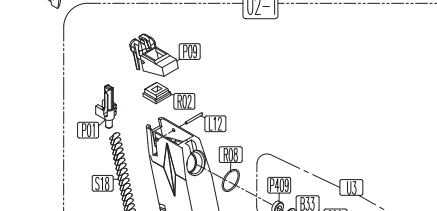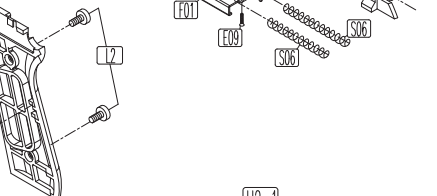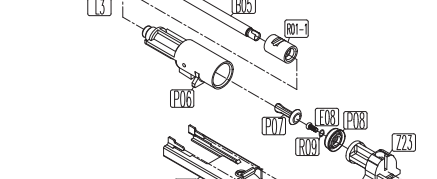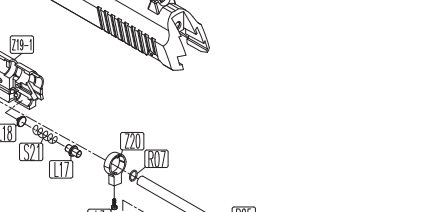

- ▲注意：取出上蓋時需小心回位導桿鬆脫彈出。
▲CAUTION: pay attention on the recoil spring guide and do not let it leap from the slide.

WARNING 警告

請務必嚴格遵守 使用說明指導書

READ THIS OWNER'S MANUAL COMPLETELY.

 
此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當靶靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指定的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airgun
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C(122°F). CO2 cartridges may over heat or explode at temperatures above 50°C(122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airgun.

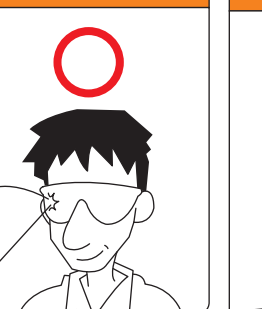


★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airgun at any people or domestic animals. Brandish this airgun in public is dangerous and may be a crime.




★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.



 
★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。
★Always transport an airgun in a locked carrying case. Make sure it is unloaded and on safe.

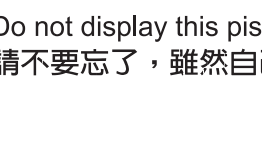

 ★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airgun.

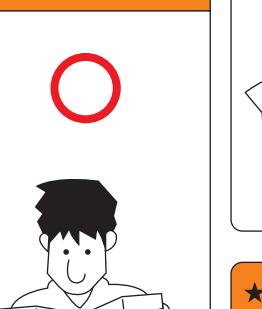

 
★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.

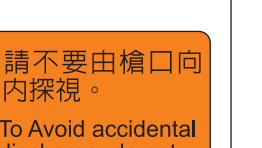

★請不要任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞，保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airgun may cause malfunction, void your warranty and may make it unsafe to use.



 ★請勿在公共場所展示此槍，以免引起誤會或犯罪。
請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

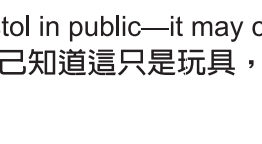

KMB-15 系列 零件表

KMB-15 SERIES PARTS LIST

編號	零件名稱	UNIT	編號	零件名稱	UNIT	編號	零件名稱	UNIT
P01	彈匣滑粒	FOLLOWER	Z45	槍管導管	OUTER BARREL	S21	槍管左右蓋壓簧	INNER BARREL GUIDE SPRING
P02	彈匣底件	MAGAZINE BASE JOINT	Z46-1	彈匣本體 (KMB)	MAGAZINE FRAME (KMB)	L2	槍柄螺絲	GRIP SCREW
P03	槍柄左	GRIP LEFT	Z51	本體	FRAME	L3	BAX調整螺絲	BAX ADJUSTOR
P04	槍柄右	GRIP RIGHT	Z12N	握柄配件	GRIP PIN	L5	擊鐵卡筴軸	HAMMER CATCH PIN
P06	射嘴	LOADING NOZZLE	A01	上蓋	SLIDE	L7	連發卡筴軸	FULL AUTO CATCH PIN
P07	氣流控制件	FLOATING VALVE				L12	彈匣上部軸	MAGAZINE RIP PIN
P08	氣缸迫緊	PISTON RUBBER	R01-1	KMB-15子彈迫緊	RUBBER CHAMBER	L13	扳機軸	TRIGGER PIN
P09	彈匣上部	MAGAZINE RIP	R02	氣嘴迫緊	GAS ROUTE CHAMBER	L16	單連發連桿軸	FIRING PIN PLATE PIN
P60	彈匣底內件	MAGAZINE BOTTOM CAP	R05	O型環 S-4	O-RING S-4	L17	後座力緩衝件	BLOMBACK STOP
P409	心棒迫緊	VALVE PACKING	R06	O型環 2x15	O-RING 2X15	L18	調整件定位件	BARREL ADJUSTOR JOINT
Z01	擊鐵箱左	CHASSIS LEFT	R07	O型環 S-6	O-RING S-6	L19	導管前部軸	OUTER BARREL FRONT PIN
Z02	擊鐵箱右	CHASSIS RIGHT	R08	O型環 1x8	O-RING 1X8	L20	擊鐵箱軸	CHASSIS PIN
Z03	擊鐵	HAMMER	R09	彈簧墊圈	SPRING PACKING	B05	槍管	BARREL
Z04	扳機	TRIGGER	F01	上蓋滑軌	SLIDE TRACK	B30	氣瓶頂針 (短彈匣用)	CARTRIDGE VALVE
Z05	擊鐵卡筴	HAMMER CATCH	F02	擊鐵導桿	HAMMER STRUT	B31	氣閥本體	VALVE FRAME
Z06	扳機連桿	TRIGGER BAR	F10	握柄配件定位軸	GRIP PIN	B32	心棒後部	VALVE GATE
Z07	連發切換件	FIRING PIN PLATE	F13	撞針固定軸	FIRING PIN POSITION PIN	B33	心棒	VALVE
Z08	切換件連桿	FIRING PIN PLATE LEVER				B215	氣瓶頂針迫緊	CARTRIDGE VALVE PACKING
Z09	連發卡筴	FULL AUTO CATCH	S01	扳機扭簧	TRIGGER SPRING	E01	鋼珠	SAFETY STEEL BALL
Z10	氣閥門	VALVE LATCH	S02	扳機連桿扭簧	TRIGGER BAR SPRING	E02	鋼珠	SAFETY STEEL BALL
Z11	撞針	FIRING PIN	S03	擊鐵卡筴扭簧	HAMMER CATCH SPRING	E04	鋼珠	SAFETY STEEL BALL
Z12	握柄配件	GRIP PIN	S04	擊鐵導桿壓簧	HAMMER STRUT SPRING	E05	鋼珠	SAFETY STEEL BALL
Z13	左保險	SAFETY LEFT	S05	導桿回位壓簧	RECOIL SPRING	E06	彈簧銷	SPRING PIN
Z14	右保險	SAFETY RIGHT	S06	射嘴回位壓簧	LOADING NOZZLE RECOIL SPRING	E07	鋼珠	SAFETY STEEL BALL
Z15	止動片	SLIDE STOP	S07	保險壓簧	SAFETY SPRING	E08	鋼珠	SAFETY STEEL BALL
Z16	導管卡筴	BARREL PIN	S08	切換件扭簧	FIRING PIN PLATE SPRING	E09	鋼珠	SAFETY STEEL BALL
Z17	卡鍵按鈕	BARREL PIN BUTTON	S09	連發卡筴扭簧	FULL AUTO CATCH SPRING	U1	六角扳手	HEXAGONAL WRENCH
Z18-1	槍管左蓋	NEER BARREL GUIDE LEFT	S10-1	止動片扭簧	SLIDE STOP SPRING	U2-1	KMB15彈匣組件	STANDARD SIZE MAGAZINE
Z19-1	槍管右蓋	NEER BARREL GUIDE RIGHT	S12	卡鍵按鈕壓簧	BARREL PIN BUTTON SPRING	U3	氣閥組件	VALVE (FIXED GUIDE)
Z20	調整件	VALVE LATCH SPRING	S13	氣閥門壓簧	BARREL ADJUSTOR SPRING	U4	氣瓶頂針組件	CARTRIDGE STAB SET
Z22	導桿	RECOIL SPRING GUIDE	S14	撞針扭簧	FIRING PIN SPRING			
Z23	氣缸	BREECH	S15	彈匣卡筴壓簧	MAGAZINE CATCH SPRING			
Z27	彈匣卡筴	MAGAZINE CATCH	S18	彈匣壓簧	MAGAZINE SPRING			
Z28	擊鐵導桿壓簧配件	MAGAZINE CATCH	S20	心棒壓簧	VALVE SPRING			

