



# **INSTALLATION MANUAL**

**JHSYCH LED CEILING FANS**

**[JHSYCH@outlook.com](mailto:JHSYCH@outlook.com)**

## Precautions

1. Do not disassemble or modify the goods by yourself to avoid electric shock.
2. Do not use the product in high-temperature, high-humidity, or outdoor environments.
3. Clean the lamps with a dry, soft cloth only. Do not use corrosive cleaners.
4. Avoid overloading sockets. Do not plug multiple high-power appliances into the same socket to prevent short circuits or fire hazards.
5. Follow the operating instructions during cleaning and maintenance to prevent electrical hazards.
6. Regularly inspect the ceiling fan light. If any malfunction occurs (e.g., abnormal noise, flickering, or damage), stop using it immediately and contact our mail (JHSYCH@outlook.com). Do not attempt self-repair or part replacement.

## Emergency Procedures


Immediately turn off the power and discontinue use if:

1. The lamp gets wet or is exposed to liquids/rain.
2. The lamp falls and is damaged.
3. Smoke, sparks, or unusual odors are detected.
4. The LED light source flickers abnormally or fails.

## Warnings






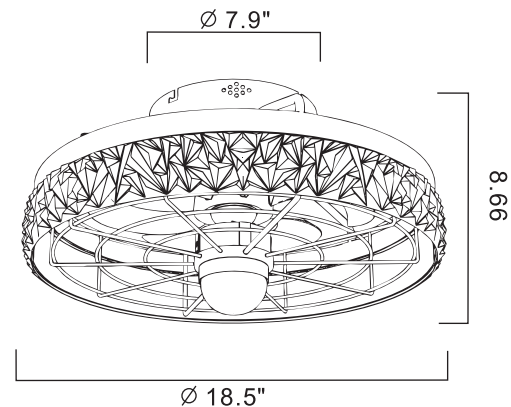





 
1. This appliance is not suitable for use by individuals (including children) with limited physical, sensory, mental capabilities, or lack of experience/knowledge, unless supervised by someone responsible for their safety.
2. Keep children away from the appliance unless under supervision to prevent misuse.
3. Install the fan light strictly according to the manual. Do not use adhesives or unapproved methods.
4. For ceiling-mounted fans, ensure the blades are at least 2.3 meters above the floor to ensure safety.
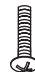
## PACKING LIST



**A Fan Assembly×1**

## INSTALLATION KIT


AA  Mounting Bracket 1×	BB  Wire Nut 3×	CC  Outlet Box Screw 2×	DD  Flat Washer 2×
EE  Expansion Screw 4×	FF  Plastic Anchor 4×	GG  "S" Hook 1×	HH  Canopy Screw 4×
II  Remote Holder Anchor 2×	JJ  Remote Holder Screw 2×	KK  Remote Control 1×	LL  Remote Holder 1×

## NOTE:

1. The listed quantity is for installation, extra hardware may be included.
2. Mounting bracket (AA) and canopy screws (HH) are pre-installed on fan assembly (A).


# INSTALLATION

## 1.Install the Mounting Bracket

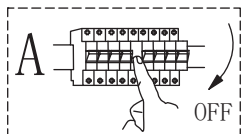


B

**Notice:** Before installation, ensure the voltage matches the product's requirements and turn off the power supply at the installation location for safety.

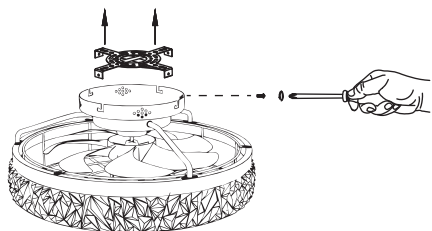

**Step 1:** Loosen and remove the canopy screws


(HH) from the round holes, and loosen the canopy screws (HH) in the 'L' holes but do not remove them, and then remove the mounting bracket (AA) from the canopy.

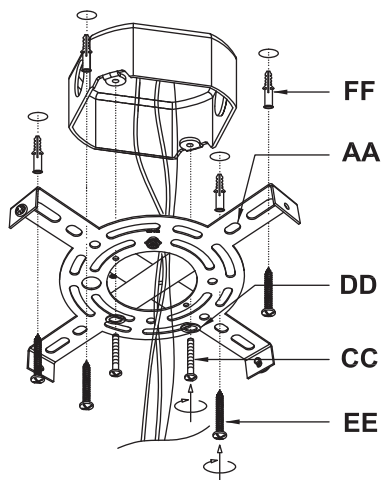

**Step 2:** Mark and drill screw holes in the ceiling, then insert the plastic anchors (FF).


**Step 3:** Use outlet box screws (CC) and flat washers (DD) to fix the mounting bracket (AA) to the outlet box, and then tighten it with Expansion Screw (EE).

## 2.Hang the Fan

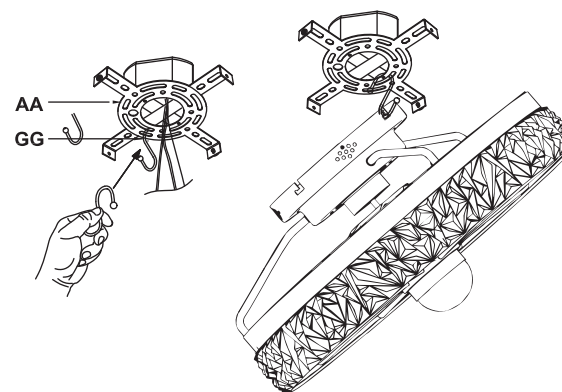

Hang the fixture onto the mounting bracket (AA) with "S" hook (GG) provided.

## 3.Connect the Wires

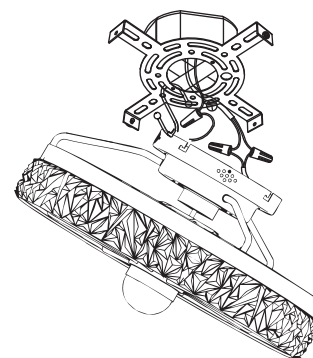


**Step 1:** Connect the wires from the fan to the house supply wires with wire nuts (BB), ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire.


**Step 2:** Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

**Note:** This fan only needs one set of input wires (black, white, and ground wire). Both of the fan and lights will be controlled by the remote controller. This fan can only be connected to an on/off switch if you have one. not a dimmer switch.

#### 4.Attach the Canopy

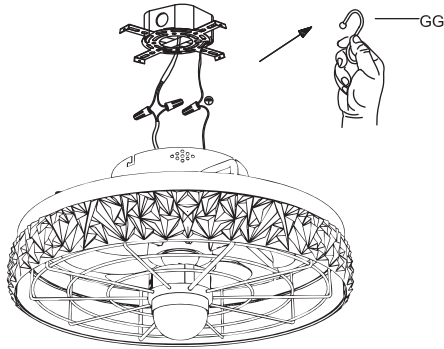


**Step 1:**Take away the "S"hook(GG).

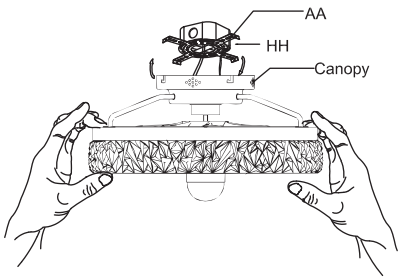

**Step 2:**Align the "L"slots from the canopy to the canopy screws(HH) on the mounting bracket (AA), rotate the canopy to lock it onto the mounting bracket(AA).

**Step 3:**Tighten the canopy screws (HH).

#### 5.Turn on Power Switch

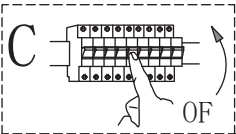

Turn on the power switch

### REMOTE CONTROL INSTRUCTIONS



#### NOTE:

**Please insert 2 batteries before using.  
AAA 1.5V battery x 2pcs (not included)**

- Light ON/OFF
- ALL OFF
- Color Temperature Switch
- Small Night Light
- Click or long press this button to enhance the brightness
- Click or long press this button to weaken the brightness
- Long press this button to increase color temperature
- Long press this button to decrease color temperature
- Fan rotates forward
- Fan rotates in reverse
- Turn off automatically after 2-hour countdown
- Fan speed, 1 is the weakest, 6 is the strongest
- Nature wind
- Fan OFF
- Disco light ON/OFF

#### REMOTE SIGNAL PAIRING:

1.Within 5 seconds upon turning on,long press "ALL OFF"button, the light flashes 2times,then the action is done.

2.If the remote control loses signal with the fan,Please re-initiate remote code matching: Long press the "PAIR CODE" button within 5 seconds when the light is turned on. If it beeps 2 times, then the code is successfully matched.

## APP CONTROL INSTRUCTIONS



APP DOWNLOAD

### Features:

It can realize the core functions of fast device pairing, local control and group control without the gateway. It can be applied to power supply, dual-color temperature lights, colored lights, fan lights, on-off switches etc.

### Operations:

1. APP Download: Scan the QR code to download the APP and register an account as per the instructions.

2. Add the device: Log in the account, and click "+" to add the device. You can edit the device name and room, and choose the device type (such as fan light).

3. Pairing: After adding the device, click the device icon to the detail page. Cut off the device for 1-2 seconds and then power on. Then click the "Pairing" button. If it beeps 2 times, then the pairing is successfully done. Multiple devices are able to be matched at the same time.

4. After the pairing is done, then you can use APP to control the devices.

## Trouble Shooting

### 1. Fan doesn't work

- Make sure the fixture is connected to an ON/OFF wall switch, not dimmer switch.
- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is on.
- Check if connected to the controller.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

### 2. Bulbs Do Not Light Up / Flicker / Noisy Operation

Tighten the light fitting.

- Re-tighten all screws on bracket, downrod.
- Check to see if any of the blades are cracked. If so, replace the blades.

### 3. Noisy Operation

- Tighten the light fitting
- Re-tighten all screws on bracket, downrod (do not over tighten).
- Check to see if any of the blades are cracked. If so, replace the blades.

### 4. Excessive wobbling

- Tighten all of the screws.

### 5. Remote does not work

- Make sure the battery is installed correctly.
- Pair the remote control again (See page 6).
- Install 2 new batteries.

### Clean And Care

To clean, wipe fixture with soft cloth. Spray from chemical cleaners can discolor the finish of fixture. Do not use scouring pads, powders, steel wool or abrasive paper to clean this fixture.

### Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. To order parts, please contact us at: JHSYCH@outlook.com. Use exact wording from diagrams when ordering parts.

## **Customer Support**

For any inquiries or assistance, please contact our after-sales team at:

[JHSYCH@outlook.com](mailto:JHSYCH@outlook.com)

We are here to help!

# **THANK YOU !**

for choosing our products

