

## DM8168 – DVR Reference Design

H/W USER GUIDE - Rev 0.6 (May 15th 2012)



# --Preliminary

**Copyright © 2011 Texas Instruments Incorporated. All rights reserved.**

Information in this document is subject to change without notice. Texas Instruments may have pending patent applications, trademarks, copyrights, or other intellectual property rights covering matter in this document. The furnishing of this documents is given for usage with Texas Instruments products only and does not give you any license to the intellectual property that might be contained within this document. Texas Instruments makes no implied or expressed warranties in this document and is not responsible for the products based from this document.

---

## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

### Products

Amplifiers	<a href="http://amplifier.ti.com">amplifier.ti.com</a>
Data Converters	<a href="http://dataconverter.ti.com">dataconverter.ti.com</a>
DSP	<a href="http://dsp.ti.com">dsp.ti.com</a>
Clocks and Timers	<a href="http://www.ti.com/clocks">www.ti.com/clocks</a>
Interface	<a href="http://interface.ti.com">interface.ti.com</a>
Logic	<a href="http://logic.ti.com">logic.ti.com</a>
Power Mgmt	<a href="http://power.ti.com">power.ti.com</a>
Microcontrollers	<a href="http://microcontroller.ti.com">microcontroller.ti.com</a>
RFID	<a href="http://www.ti-rfid.com">www.ti-rfid.com</a>
RF/IF and ZigBee® Solutions	<a href="http://www.ti.com/lprf">www.ti.com/lprf</a>

### Applications

Audio	<a href="http://www.ti.com/audio">www.ti.com/audio</a>
Automotive	<a href="http://www.ti.com/automotive">www.ti.com/automotive</a>
Broadband	<a href="http://www.ti.com/broadband">www.ti.com/broadband</a>
Digital Control	<a href="http://www.ti.com/digitalcontrol">www.ti.com/digitalcontrol</a>
Medical	<a href="http://www.ti.com/medical">www.ti.com/medical</a>
Military	<a href="http://www.ti.com/military">www.ti.com/military</a>
Optical Networking	<a href="http://www.ti.com/opticalnetwork">www.ti.com/opticalnetwork</a>
Security	<a href="http://www.ti.com/security">www.ti.com/security</a>
Telephony	<a href="http://www.ti.com/telephony">www.ti.com/telephony</a>
Video & Imaging	<a href="http://www.ti.com/video">www.ti.com/video</a>
Wireless	<a href="http://www.ti.com/wireless">www.ti.com/wireless</a>

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright 2011, Texas Instruments Incorporated

### ***Revision History (h/w)***

<b>Main board Version</b>	<b>Date</b>	<b>DVRRD H/W Revision History</b>
Rev0.1	2010.08	Initial version
Rev0.2	2010. 12	Change DDR2 to DDR3 Modify some power circuit
Rev0.3	2011.02	SENSOR_IN1's GP number is changed.( GP0[3] -> GP1[26] ) GP0[3] is tied to ground with pulled down resister
Rev0.3A	2011.05	1. Modify SATA port LED GPIO numbers 2. Modify the Video Sync separator input circuit on the VGA output port. 3. Modify filter setting on the Video Amp(THS7360) 4. Change power devices (1V0_CON) 5. Change 5158 AUDIO IF MODE to cascade mode (McASP interface). 6. Change the Ethernet PHY initial Mode (Auto-negotiation enable) to the 100Mbit mode for GIGABIT mode issue. 7. Change the Capacitor value 22uF to 47uF (or add 22uF) on the Ethernet PHY's internal power. 8. Add reset signal on the AIC3101 audio Codec. 9. Change the Nand Flash (K9F8GO8U0M : 1GByte) to K9F2GO8U0M(256MByte).
Rev0.4		1. Change power devices (1V0_AVS, VCC_1.8V, VCC_1.1V, VCC_1.3V)
Rev0.5	2011.09	1. Modify VTT power enable signal. 2. Modify sync signals of the RGB(VGA) output for future function. 3. Modify AC coupled capacitor value in the SATA port. 4. Change the ESD device in the USB port. 5. Change the TPS40400 PMBus address "00" to "70" (R706 : 10K -> 200K)

**Copyright © 2011 Texas Instruments Incorporated. All rights reserved.**

Information in this document is subject to change without notice. Texas Instruments may have pending patent applications, trademarks, copyrights, or other intellectual property rights covering matter in this document. The furnishing of this documents is given for usage with Texas Instruments products only and does not give you any license to the intellectual property that might be contained within this document. Texas Instruments makes no implied or expressed warranties in this document and is not responsible for the products based from this document.

---

---

Main board Version	Date	DVRRD H/W Revision History
Rev0.5A	2011. 10	<ol style="list-style-type: none"><li>1. The eSATA port is changed to the SATA PM(JMB321) port1.</li><li>2. The Netra SATA0 port is changed to the ODD SATA port.</li></ol>
Rev0.5B	2011. 12	<ol style="list-style-type: none"><li>1. Add the signal for 1V0_con power enable.</li><li>2. Change value of components for the AVS power device.</li></ol>
Rev0.6	2012, 05	<ol style="list-style-type: none"><li>1. Modify value R644, R646 (100 ohm -&gt; 22 ohm).</li><li>2. Modify power of the TPD7S019 (U112).</li><li>3. Add pull down 2.1kohm on the WD signal</li><li>4. Change value of components for the AVS power device</li></ol>

---

---

**TABLE OF CONTENTS**

---

<b>1</b>	<b>DM8168 DVR REFERENCE DESIGN.....</b>	<b>6</b>
<b>1.1</b>	<b>Hardware setup.....</b>	<b>6</b>
1.1.1	DM8168 DVR RDK Package Contents.....	6
1.1.2	DM8168 DVR RDK Front Panel.....	6
1.1.3	DM8168 DVR RDK Rear Port.....	11
1.1.4	Installation DM8168 DVR RDK .....	12
<b>1.2</b>	<b>INTRODUCTION .....</b>	<b>13</b>
1.2.1	Features of the DVRRD.....	13
<b>1.3</b>	<b>Physical Description .....</b>	<b>15</b>
1.3.1	Main Board .....	15
1.3.2	Front board .....	28
1.3.3	Rear Board.....	32
1.3.4	Power Board .....	36
<b>1.4</b>	<b>ERRATA .....</b>	<b>39</b>

## 1 DM8168 DVR Reference Design

The intention of this document is provide a single document from which user can get know how to use the DVRRD.

### 1.1 Hardware setup

#### 1.1.1 DM8168 DVR RDK Package Contents



Figure 1. DM8168 DVR RDK Package Contents

#### 1.1.2 DM8168 DVR RDK Front Panel



Figure 2. DM8168 DVR RDK front panel






 






 

 
##### POWER SWITCH

No.	Marking	Function1(Short Press)	Function2(Long Press)
0		Power On	Power Off






##### KEYPAD

No.	Marking	Function1(Short Press)	Function2(Long Press)
1		Ch1 Camera Enable / Disable	
		Input character "1" in Text mode	
2		Ch2 Camera Enable / Disable	
		Input character "2" in Text mode	


3	<b>3</b>	Ch3 Camera Enable / Disable	
		Input character "3" in Text mode	
4	<b>4</b>	Ch4 Camera Enable / Disable	
		Input character "4" in Text mode	
5	<b>5</b>	Ch5 Camera Enable / Disable	
		Input character "5" in Text mode	
6	<b>6</b>	Ch6 Camera Enable / Disable	
		Input character "6" in Text mode	
7	<b>7</b>	Ch7 Camera Enable / Disable	
		Input character "7" in Text mode	
8	<b>8</b>	Ch8 Camera Enable / Disable	
		Input character "8" in Text mode	
9	<b>9</b>	Ch9 Camera Enable / Disable	
		Input character "9" in Text mode	
10	<b>10</b>	Ch10 Camera Enable / Disable	
		Input character "A" in Text mode	
11	<b>11</b>	Ch11 Camera Enable / Disable	
		Input character "B" in Text mode	
12	<b>12</b>	Ch12 Camera Enable / Disable	
		Input character "C" in Text mode	
13	<b>13</b>	Ch13 Camera Enable / Disable	
		Input character "D" in Text mode	
14	<b>14</b>	Ch14 Camera Enable / Disable	
		Input character "E" in Text mode	
15	<b>15</b>	Ch15 Camera Enable / Disable	
		Input character "F" in Text mode	
16	<b>16</b>	Ch16 Camera Enable / Disable	
		Input character "G" in Text mode	
17	<b>LIVE</b>	Change Live mode	
		Input character "H" in Text mode	

18		Change Playback mode	
		Input character "I" in Text mode	
19		Change Screen Layout	
		Input character "J" in Text mode	
20		reserved	
		Input character "K" in Text mode	
21		Display for Previous camera	
		Input character "L" in Text mode	
22		Display for Next camera	
		Input character "M" in Text mode	
23		Change to camera automatically	
		Input character "N" in Text mode	
24		Fast Rewind on playback	
		Input character "O" in Text mode	
25		Rewind on playback	
		Input character "P" in Text mode	
26		Play or pause on playback	
		Input character "Q" in Text mode	
27		Forward on playback	
		Input character "R" in Text mode	
28		Fast Forward on playback	
		Input character "S" in Text mode	
29		Stop on playback	
		Input character "T" in Text mode	
30		reserved	PTZ is only supported by UI.
		Input character "U" in Text mode	
31		Urgency Record	
		Input character "V" in Text mode	
32		Call Setup Window	
		Input character "W" in Text mode	




33		Move Up	
34		Move Left	
		Back space	
35		Select or Enter	
36		Move Right	
37		Move Down	

#### Jog Shuttle

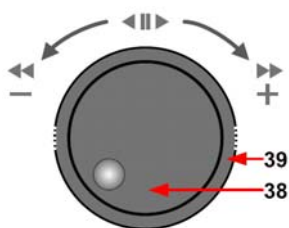


No.	Marking	Function
38		JOG : Fast forward or Fast rewind on playback
39		SHUTTLE : playback speed control


#### Remote Control(option)

No.	Marking	Function
40		IR : Remote control(1)




#### USB PORT

No.	Marking	Function
41		USB 1 PORT (note: the lower port is reserved.)

ODD

No.	Marking	Function
42		Eject/Insert
43		DOOR : Media Insert

LED

No.	Marking	Function
44		Power On Indicator
45		Record HDD Indicator
46		Network Connect Indicator

NOTE) (1) not implemented.

### DM8168 DVR RDK Rear Port

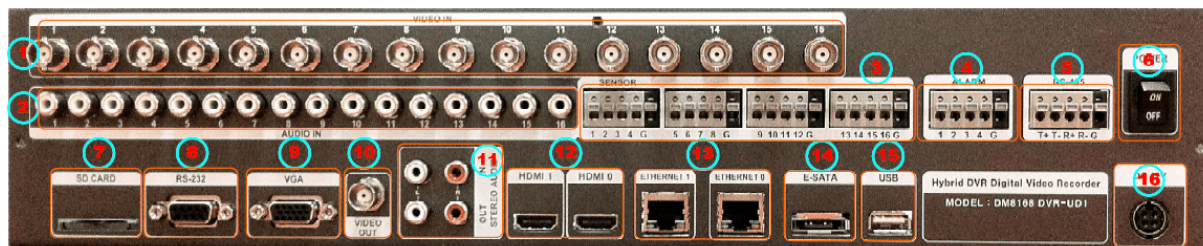


Figure 3. DM8168 DVR RDK Rear Port

No.	FUNCTION	No.	FUNCTION
1	Video input channel 1~16	9	VGA port
2	Audio input channel 1~16	10	Composite Video output
3	Sensor input(TTL LEVEL) ch1~16	11	Stereo Audio input / output
4	Alarm Output(NO,NC)-open collector ch1~4	12	HDMI output 2ports
5	RS-485 port	13	10/100/1000 Ethernet 2ports
6	DVR Main power switch	14	e-SATA Port
7	SD CARD interface port	15	USB Port
8	RS-232 port	16	DC 12V input

### 1.1.3 Installation DM8168 DVR RDK

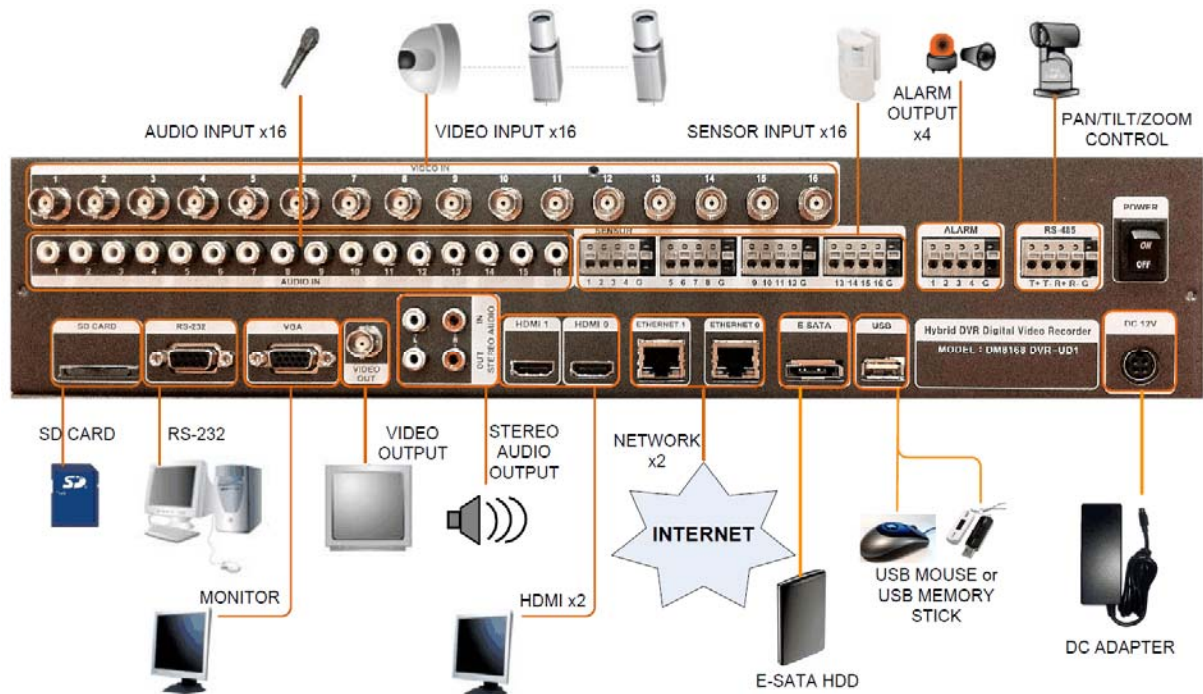


Figure 4. Installation DM8168 DVR RDK

## 1.2 INTRODUCTION

### 1.2.1 Features of the DVRRD

The DM8168 DVRRD is a standalone DVR reference Design for the TMS320DM8168 processor.

DVRRD Rev0.6 Block diagram

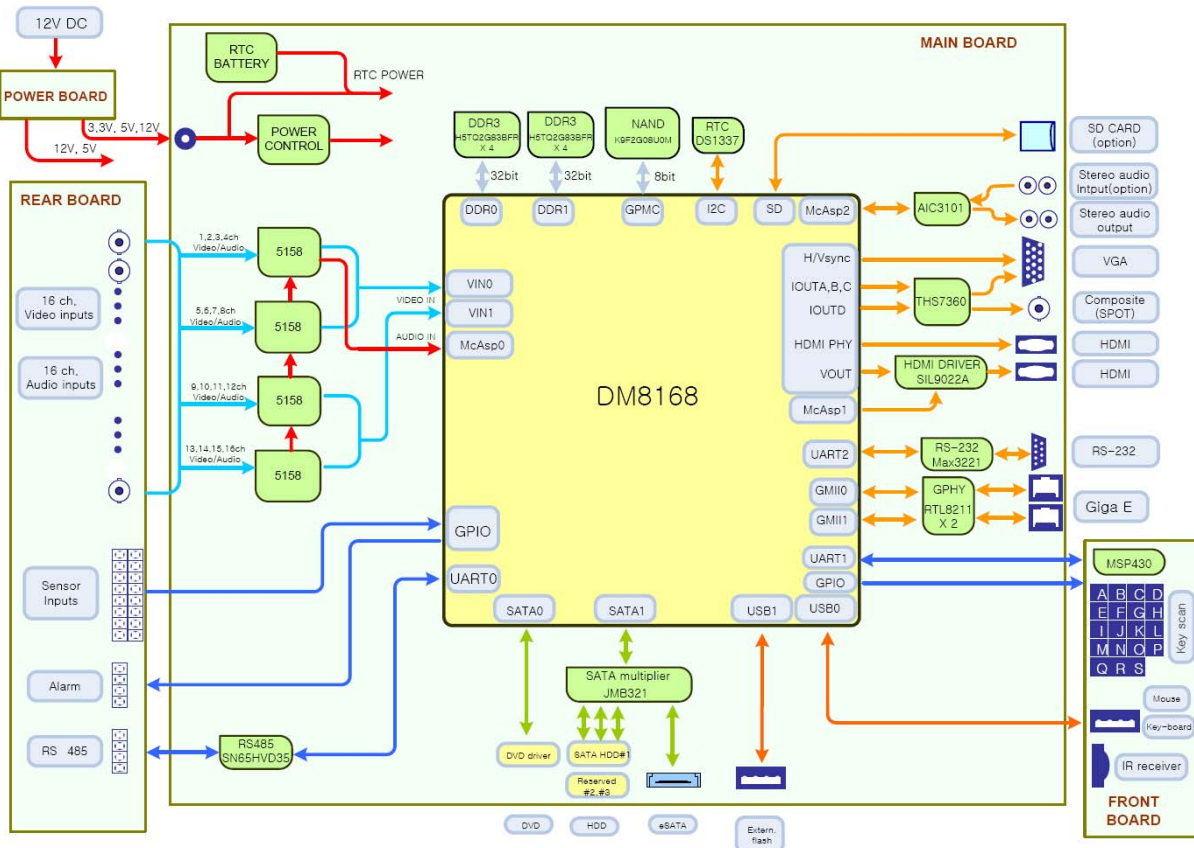


Figure 5. DVRRD Block diagram

#### key Features

- ❑ A Texas instruments TMS320DM8168 process with an ARM Cortex –A8 RISC MPU operating up to 1.2GHz, a C674x VLIW DSP (1GHz) and three programmable High-Definition Video Image Coprocessor (HDVICP2) Engine.
- ❑ Max 16 video input ports - composite.
- ❑ Video output – Composite, RGB (VGA monitor), HDMI 2PORTS.
- ❑ Up to 2GBytes of DDR3 DRAM
- ❑ 256Mbyte NAND Flash, 128Byte EEPROM.
- ❑ Max 16 Audio input port.
- ❑ RS-232 1port, RS-485 1port
- ❑ Sensor input 16ports, Alarm output 4ports
- ❑ 41 keys input
- ❑ USB 2.0 2-ports

- ☐ SATA interface 4 ports
- ☐ eSATA interface 1 port
- ☐ 10/100/1000 Ethernet interface 2 ports

**1.2.1.1      *Supplied Hardware***

The DVRRD includes the following hardware items:

- ☐ DVRRD main board
- ☐ DVRRD front board ( key pads, IR receiver, USB 1 port)
- ☐ DVRRD rear board (Video 16 input connector, Audio 16 input connector, sensor 16 input connector, alarm 4 port connector, rs-485 1port connector)
- ☐ DVRRD power board (output : 3V, 5V, 5V, 12V  
Input : 12VDC )

**1.2.1.2      *Supplied Schematics files***

The DVRRD includes the following schematics:

- ☐ DVRRD main board – Orcad(dsn file) and pdf(gerber file)
- ☐ DVRRD front board – Orcad(dsn file) and pdf(gerber file)
- ☐ DVRRD rear board – Orcad(dsn file) and pdf(gerber file)
- ☐ DVRRD power board – Orcad(dsn file) and pdf(gerber file)

## 1.3 Physical Description

### 1.3.1 Main Board

#### 1.3.1.1 Board Layout

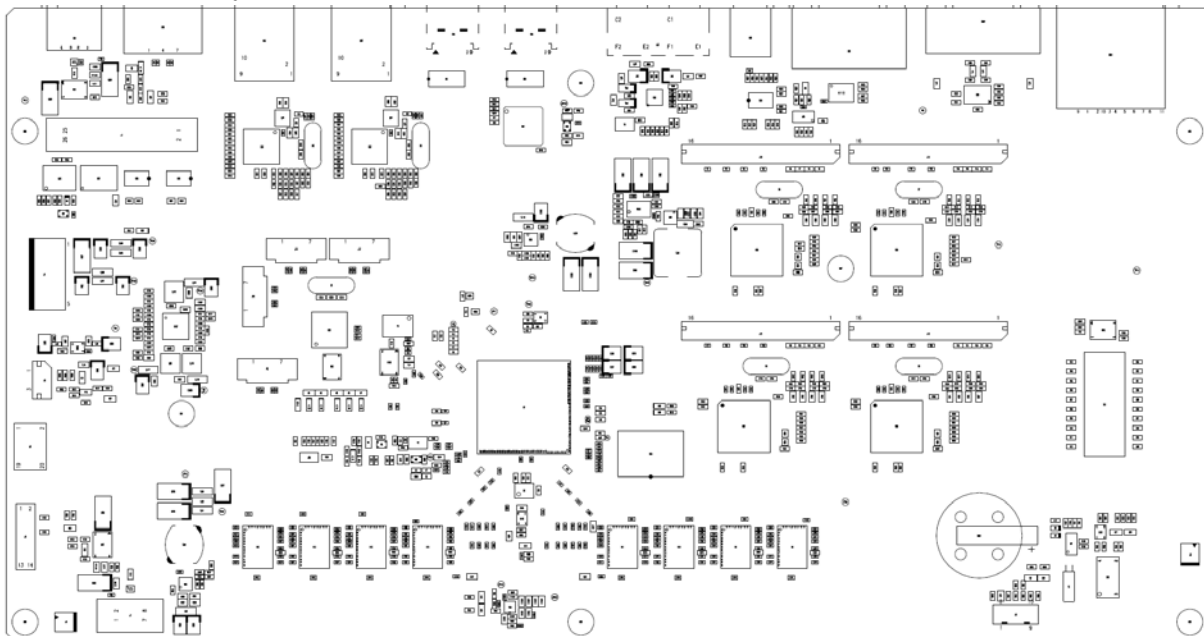


Figure 6. Main Board (Rev0.6) Layout Top side


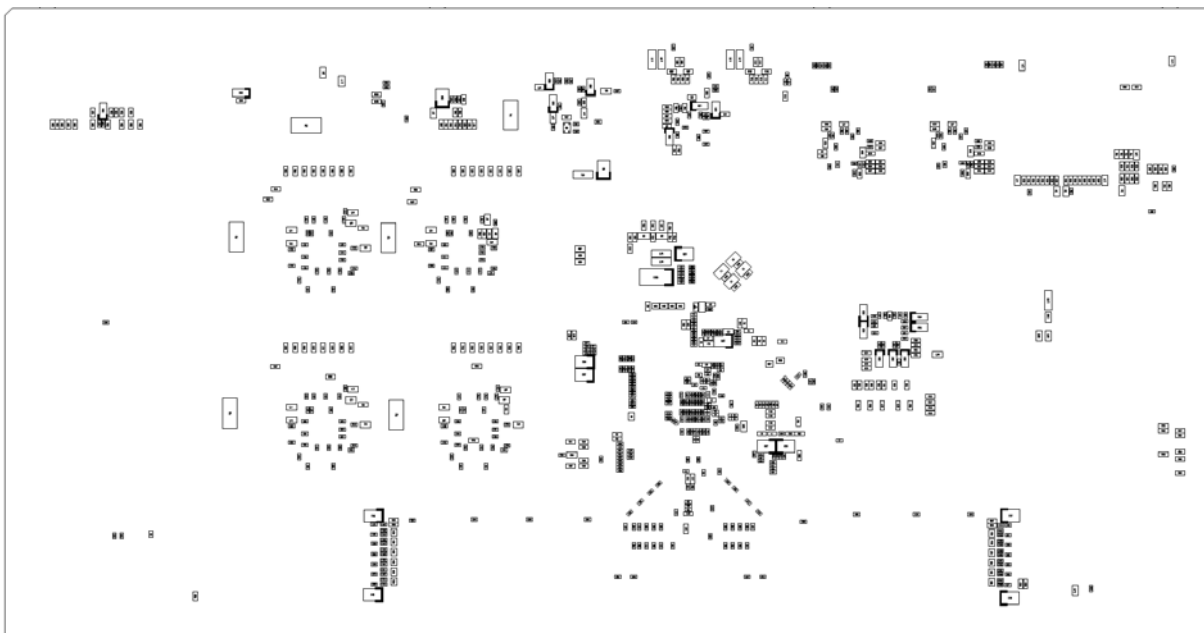


Figure 7. Main Board (Rev0.6) Layout Bottom side

### 1.3.1.2 Power
 
#### 1.3.1.2.1 J2 (Power Connector)



PIN#	Signal
1	3.3V
2	GND
3	5V
4	GND
5	12V

Figure 8. Power connector

J2 is connected to Power Board (J1) via cable.

#### 1.3.1.2.2 J3 (Power Control Connector)




PIN#	Signal
1	GND
2	POWER_ON
3	FRONT_3V3

Figure 9. Power control

J3 is connected to Power Board(J6) via cable.

Power board is controlled by Front power switch thru J3 connector.

#### 1.3.1.2.3 BHT1 (Battery Holder)

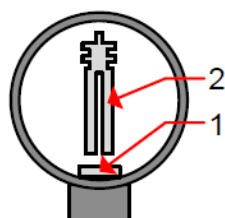


PIN#	Signal
1	3V
2	GND

Figure 10. Battery holder

BHT1 provides backup power to the RTC(U7:DS1337) when the power is not applied to the main board.

#### 1.3.1.2.4 J6, J9 (Case Fan Power Connector)

 

PIN#	Signal
1	GND
2	12V

Figure 11. Case fan power

J6, J9 are connected to Case Fan via cable.



### 1.3.1.2.5 SW1(Boot Mode Switch)

 


Figure 12. Boot Mode switch

SW1 boot terminal signal function

SW1 NUMBER	SIGNAL NAME	DESCRIPTION
1	BTMODE[0]	Boot Mode Selection pins
2	BTMODE[1]	
3	BTMODE[2]	
4	BTMODE[3]	
5	BTMODE[4]	
6	CSOMUX[0]	GPMC CS0 default Address/Data multiplexing mode. 00 = Not multiplexed 01 = A/D muxed 10 = A/A/D muxed 11 = Reserved
7	CSOMUX[1]	
8	CSOBW	GPMC CS0 default Data bus Width input. 0 = 8bit data bus 1 = 16bit data bus
9	CSOWAIT	GPMC CS0 default GPMC Wait enable input. 0 = Wait disabled 1 = Wait enabled
10	NOT USED	

Boot Mode function table is as follows.

BTM [4]	BTM [3]	BTM[2]	BTM[1]	BTM[0]	First	Second	Third	Fourth
0	0	0	0	1	UART2	XIP w/WAIT	MMC	SPI
0	0	0	1	0	UART2	SPI	NAND	NANDI2C
0	0	0	1	1	UART2	SPI	XIP	MMC
0	0	1	0	0	EMAC	SPI	NAND	NANDI2C
0	0	1	1	1	EMAC	MMC	SPI	XIP
0	1	0	0	0	PCIE_32			
0	1	0	0	1	PCIE_64			
0	1	1	1	1	GP Fast Ext.	UART	EMAC	PCIE_64
1	0	0	0	0	XIP	UART	EMAC	MMC
1	0	0	0	1	XIP w/WAIT	UART	EMAC	MMC
1	0	0	1	0	NAND	NANDI2C	SPI	UART
1	0	0	1	1	NAND	NANDI2C	MMC	UART
1	0	1	0	0	NAND	NANDI2C	SPI	EMAC
1	0	1	0	1	NANDI2C	MMC	EMAC	UART
1	0	1	1	0	SPI	MMC	UART	EMAC
1	0	1	1	1	MMC	SPI	UART	EMAC
1	1	0	0	0	SPI	MMC	PCIE_32	
1	1	0	0	1	SPI	MMC	PCIE_64	
1	1	1	1	1	GP Fast Ext	EMAC	UART	PCIE_32

### 1.3.1.2.6 SW2(RESET Switch)


 


Figure 13. Reset switch

SW2 is a push button switch that will reset DM8168.

### 1.3.1.3 JTAG Interface

#### 1.3.1.3.1 J5 (14 pin JTAG Connector)

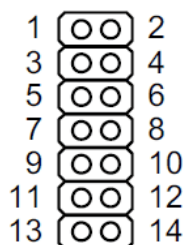

PIN#	Signal	PIN#	Signal
1	TMS	2	TRSTn
3	TDI	4	TDIS(GND)
5	TVD(VCC_3V3)	6	KEY(NC)
7	TDO	8	GND
9	TCKRTN	10	GND
11	TCLK	12	GND
13	EMU0	14	EMU1


Figure 14. 14Pin JTAG Interface

When using this type JTAG controller, assert TRSTn to initialize the device after power up and externally drive TRSTn high before attempting any emulation or boundary scan operations.

Following the release of RESETn, the low-to-high transition of TRSTn must be seen to latch of EMU1 and EMU0.

By Default JTAG MODE is configured to ICE PICK MODE.(EMU[1:0]="11")

#### 1.3.1.3.2 J4 (20 pin ARM JTAG Interface, reserved)

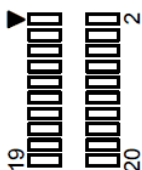

PIN#	Signal	PIN#	Signal
1	TMS	2	TRSTn
3	TDI	4	GND
5	VCC_3V3	6	NC
7	TDO	8	GND
9	RTCK	10	GND
11	TCK	12	GND
13	EMU0	14	EMU1
15	EMU_RSTn	16	GND
17	EMU2	18	EMU3
19	EMU4	20	GND

Figure 15. 20pin ARM JTAG Interface

#### 1.3.1.4 Video and Audio Input

##### 1.3.1.4.1 J10, J11, J12, J13 (Analog Video and Audio Input)

 



Figure 16. Analog Video and Audio Input

PIN#	J10 Signal	J11 Signal	J12 Signal	J13 Signal
1	AGND	AGND	AGND	AGND
2	AUDIO_IN4	AUDIO_IN8	AUDIO_IN12	AUDIO_IN16
3	AUDIO_IN3	AUDIO_IN7	AUDIO_IN11	AUDIO_IN15
4	AUDIO_IN2	AUDIO_IN6	AUDIO_IN10	AUDIO_IN14
5	AUDIO_IN1	AUDIO_IN5	AUDIO_IN9	AUDIO_IN13
6	AGND	AGND	AGND	AGND
7	AGND	AGND	AGND	AGND
8	VIDEO_IN1	VIDEO_IN5	VIDEO_IN9	VIDEO_IN13
9	VIDEO_IN1_AGND	VIDEO_IN5_AGND	VIDEO_IN9_AGND	VIDEO_IN13_AGND
10	VIDEO_IN2	VIDEO_IN6	VIDEO_IN10	VIDEO_IN14
11	VIDEO_IN2_AGND	VIDEO_IN6_AGND	VIDEO_IN10_AGND	VIDEO_IN14_AGND
12	VIDEO_IN3	VIDEO_IN7	VIDEO_IN11	VIDEO_IN15
13	VIDEO_IN3_AGND	VIDEO_IN7_AGND	VIDEO_IN11_AGND	VIDEO_IN15_AGND
14	VIDEO_IN4	VIDEO_IN8	VIDEO_IN12	VIDEO_IN16
15	VIDEO_IN4_AGND	VIDEO_IN8_AGND	VIDEO_IN12_AGND	VIDEO_IN16_AGND
16	AGND	AGND	AGND	AGND

J10, J11, J12 and J13 are interfaced to the TVP5158.  
Each connector is connected to Rear board(J1,J2,J3 and J4) via cable.

### 1.3.1.5 Video and Audio Out

#### 1.3.1.5.1 CN8 (Composite Output)

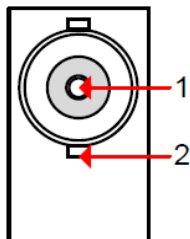

PIN#	Signal
1	Composite Video signal
2	GND

Figure 17. Composite video out

Composite video output with BNC connector.

#### 1.3.1.5.2 CN7 (VGA, DSUB-15PIN)

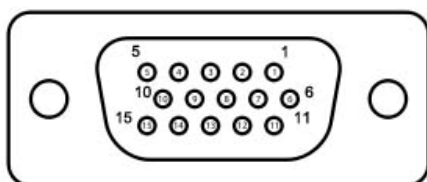


Figure 18. VGA output

PIN#	Signal	Description	PIN#	Signal	Description
1	DAC_ROUT	RED	9	NC	
2	DAC_GOUT	GREEN	10	GND	SYNC GND
3	DAT_BOUT	BLUE	11	NC	
4	NC		12	NC	
5	GND	GND	13	HSYNC_OUT	HSYNC
6	GND	RED GND	14	VSYNC_OUT	VSYNC
7	GND	GREEN GND	15	NC	
8	GND	BLUE GND			

Connect this video output to monitor so that live, playback pictures would be monitored.

**1.3.1.5.3 CN5, CN6 (2 Ports HDMI Output)**

 


Figure 19. HDMI output

PIN#	Signal	Description	PIN#	Signal	Description
1	D2+	TMDS Data2+	11	CK SHIELD	TMDS Clock Shield
2	D2 SHIELD	TMDS Data2 Shield	12	CK-	TMDS Clock-
3	D2-	TMDS Data2-	13	CE REMOTE	CEC(control)
4	D1+	TMDS Data1+	14	NC.14	Reserved(N.C. on device)
5	D1 SHIELD	TMDS Data1 Shield	15	DDC CLK	SCL(DDC clock)
6	D1-	TMDS Data1-	16	DDC DATA	SDA(DDC data)
7	D0+	TMDS Data0+	17	GND	DDC/CEC Ground
8	D0 SHIELD	TMDS Data0 Shield	18	+5V	+5 V Power
9	D0-	TMDS Data0-	19	HP DET	Hot Plug Detect
10	CK+	TMDS Clock+			

**1.3.1.5.4 CN7 (AUDIO In/Out, 4Ports RCA Connector)**

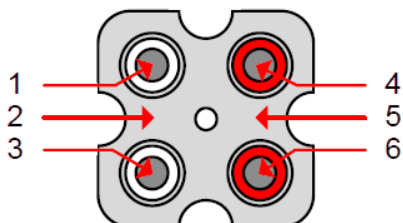


Figure 20. Audio interface

PIN#	Signal	Description
1	F1	AUDIO IN LEFT
2	C1	GND
3	E1	AUDIO OUT LEFT
4	F2	AUDIO IN RIGHT
5	C2	GND
6	E2	AUDIO OUT RIGHT

### 1.3.1.6 Communication Interface

#### 1.3.1.6.1 CN3, CN4 (2 Ports Ethernet, RJ45 Jack)

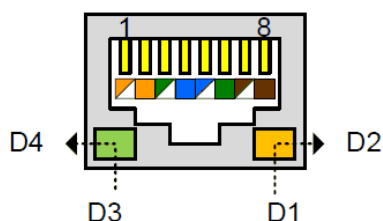


Figure 21. Ethernet Interface(RJ45)

PIN#	Signal	Description
1	TPFOP	TXP
2	TPFON	TXN
3	TPFIP	RXP
4		
5		
6	TPFIN	RXN
7		
8		
D1	3.3V	LED POWER
D2	ACT	Green LED control
D3	3.3V	LED POWER
D4	LINK	Yellow LED control

CN3 and CN4 are interfaced to each Ethernet PHY chip U36 and U37.  
Connect an Ethernet cable with RJ45 jack to the DVR connector.  
ACT LED indicate that there is transmit or receive activity after Link UP.  
LINK LED will be off when link is failed.

#### 1.3.1.6.2 CN10 (RS-232 Connector, DB-9)

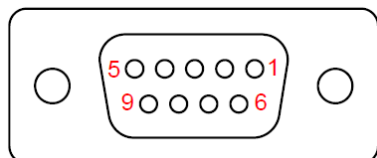


Figure 22. RS-232 Interface

PIN#	Signal
1	
2	TXD
3	RXD
4	
5	GND
6	
7	
8	
9	

DM8168's UART2 is used for console Port(RS-232) true DB-9 connector, CN10.

### 1.3.1.7 USB Interface

#### 1.3.1.7.1 CN1 (Rear panel USB, USB A-Type Single)

 


Figure 23. USB Interface

PIN#	Signal	Description
1	USB_P2	5V
2	USB_DM1	DM( DSPORT 1)
3	USB_DP1	DP( DSPORT 1)
4	VUSB_GND	GND

#### 1.3.1.7.2 J7(Front panel USB, 8pin Headerbox)

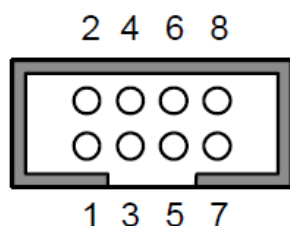


Figure 24. Front USB Interface

PIN#	Signal	Description
1	NC	
2	USB0_VBUS_CON	+5V
3	NC	
4	USB0_DM	DM
5	NC	
6	USB0_DP	DP
7	GND	
8	GND	GND

J7 is connected to front board(J6) via cable.

### 1.3.1.8 Storage Interface

#### 1.3.1.8.1 J14, J15, J16, J17 (4 SATA Ports)

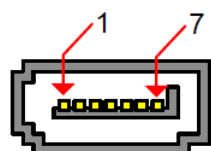


Figure 25. SATA Interface

PIN#	J14 Signal SATA Port0	J15 Signal ODD SATA Port	J16 Signal SATA Port2	J17 Signal SATA Port3	Description
1	GND	GND	GND	GND	GND
2	TXP0	TXP0(DM8168)	TXP2	TXP3	SATA TXP0,2,3(JMB321)
3	TXN0	TXN1(DM8168)	TXN2	TXN3	SATA TXN0,2,3(JMB321)
4	GND	GND	GND	GND	GND
5	RXN0	RXN1(DM8168)	RXN2	RXN3	SATA RXN0,2,3(JMB321)
6	RXP0	RXP1(DM8168)	RXP2	RXP3	SATA RXP0,2,3(JMB321)
7	GND	GND	GND	GND	GND

J14, J15, J16 and J17 are connected to SATA HDD/ODD via cable.



### 1.3.1.8.2 CN2 (eSATA, SATA PORT1 of JMB321)

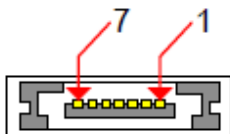


Figure 26. E-SATA Interface

PIN#	Signal	Description
1	GND	GND
2	SATA_TXP1	SATA TXP1(JMB321)
3	SATA_TXN1	SATA TXN1(JMB321)
4	GND	GND
5	SATA_RXN1	SATA RXN1(JMB321)
6	SATA_RXP1	SATA RXP1(JMB321)
7	GND	GND

CN2 is connected to SATA port1 of the JMB321.

### 1.3.1.8.3 CN11 (SD CARD)

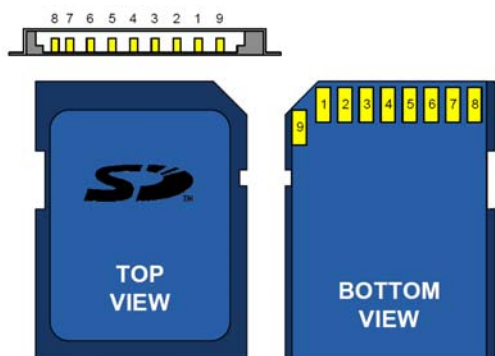


Figure 27. SD Card Interface and SD Storage

PIN#	Signal	Description
1	CD/DAT3	Card detection / Connector data line 3
2	CMD	Command/Response line
3	Vss1	GND
4	Vdd	Power supply
5	CLK	Clock
6	Vss2	GND
7	DAT0	Connector data line 0
8	DAT1	Connector data line 1
9	DAT2	Connector data line 2

CN11 is the connector for SD Storage.

### 1.3.1.9 Front board Interface

#### 1.3.1.9.1 J8(10Pin 2mm Headerbox)

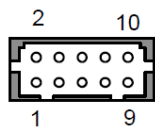


Figure 28. Front board Interface

PIN#	Signal	Description
1	nPWR_OFF	Main power on/off input
2	GND	GND
3	NC	Reserved
4	FRONT_TXD	Front board UART TXD
5	FRONT_RXD	Front board UART RXD
6	GND	GND
7	GP1[21]	PWR_SHUTDOWN_READY
8	MRESET	MAIN RESET(reserved)
9	FRONT_3V3	+3.3V Output to Front board
10	ETH_ACT	Ethernet Active indicator signal

J8 is connected to Front Board (J5) via cable.

### 1.3.1.10 Rear board Interface

#### 1.3.1.10.1 J1(26Pin Headerbox)

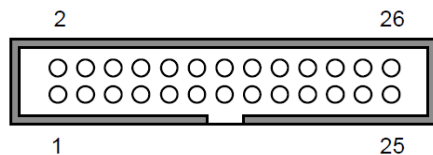


Figure 29. Rear board Interface

PIN#	Signal	Description	PIN#	Signal	Description
1	SENSOR IN1	Sensor Input 1	2	SENSOR IN2	Sensor Input 2
3	SENSOR IN3	Sensor Input 3	4	SENSOR IN4	Sensor Input 4
5	SENSOR IN5	Sensor Input 5	6	SENSOR IN6	Sensor Input 6
7	SENSOR IN7	Sensor Input 7	8	SENSOR IN8	Sensor Input 8
9	SENSOR IN9	Sensor Input 9	10	SENSOR IN10	Sensor Input 10
11	SENSOR IN11	Sensor Input 11	12	SENSOR IN12	Sensor Input 12
13	SENSOR IN13	Sensor Input 13	14	SENSOR IN14	Sensor Input 14
15	SENSOR IN15	Sensor Input 15	16	SENSOR IN16	Sensor Input 16
17	ALARM OUT1	Alarm out 1	18	ALARM OUT2	Alarm out 2
19	ALARM OUT3	Alarm out 3	20	ALARM OUT4	Alarm out 4
21	TX+	RS485 TX+	22	TX-	RS485 TX-
23	RX+	RS485 RX+	24	RX-	RS485 RX-
25	GND	GND	26	GND	GND

J1 is connected to Rear board (J5) via cable.

## 1.3.2 Front board

### 1.3.2.1 Board Layout



Figure 30. Front Board(Rev0.3) Layout Top Side



Figure 31. Front Board(Rev0.3) Layout Bottom side

### 1.3.2.2 KEY Matrix

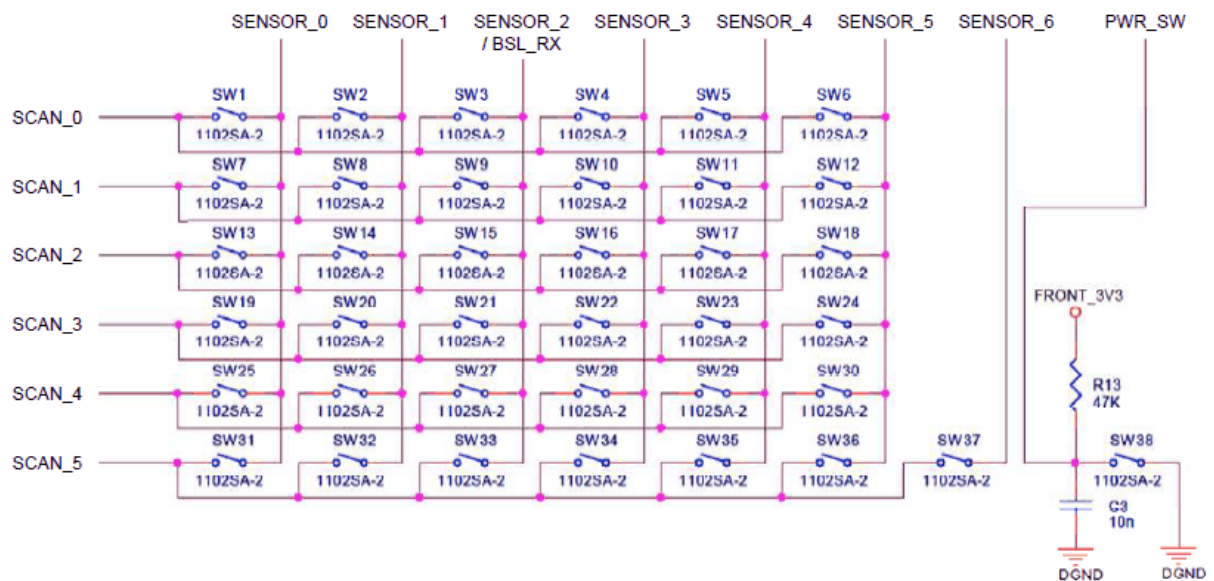


Figure 32. Front board key matrix circuit.

### 1.3.2.3 Power Jumper

#### 1.3.2.3.1 J2(power input select)



Figure 33. Front board power select jumper

PIN#	Signal	Description
1	FRONT_3V3	Front board +3.3V
2	VCC_TOOL	VCC from Tool

Front board can be supplied 3.3V by a MSP430 Emulation Tool when Main board doesn't supply 3.3V.

### 1.3.2.4 Debug Interface

#### 1.3.2.4.1 J3(Spy-Bi-Wire and BSL)

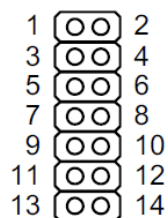


Figure 34. Front board debug interface

PIN#	Signal	PIN#	Signal
1	SBWTDIO	2	VCC_TOOL
3	NC	4	NC
5	NC	6	NC
7	SBWTCK	8	TEST
9		10	
11		12	BSL_TX
13		14	BSL_RX

J3 is MSP-FET430UIF flash emulation tool interface connector for MSP430.

### 1.3.2.5 Main Board Interface

#### 1.3.2.5.1 J5 (Main board control interface)

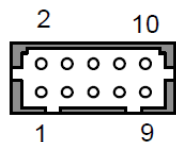



Figure 35. Main board control interace

PIN#	Signal	Description
1	MAIN_PWR_ON	Main board power on
2	GND	GND
3	NC	Reserved
4	FRONT_TXD	Front board UART TXD
5	FRONT_RXD	Front board UART RXD
6	GND	GND
7	PWR_SHUTDOWN_READY	Power shutdown ready
8	GIO	General I/O(reserved)
9	FRONT_3V3	+3.3V Output to Front board
10	ETH_ACT	Ethernet Active

J5 is connected to Main Board(J8) via cable.

### 1.3.2.6 USB Interface

#### 1.3.2.6.1 J6 (Main board USB Interface, 8Pin Headerbox)

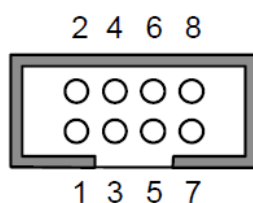

PIN#	Signal	PIN#	Signal(Reserved)
1	USB_P1	2	USB_P2
3	USB_DM1	4	USB_DM2
5	USB_DP1	6	USB_DP2
7	VUSB_GND	8	VUSB_GND

Figure 36. Front board USB Interface from main board

J6 is connected to main board(J7) via cable.

#### 1.3.2.6.2 P1(Dual Port USB Connector)

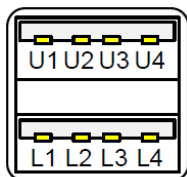


Figure 37. Dual port USB connector

PIN#	Signal	Description	Port
U1	USB_P1	5V	TOP
U2	USB_DM1	DM( DSPORT 1)	
U3	USB_DP1	DP( DSPORT 1)	
U4	VUSB_GND	GND	
L1	USB_P2	5V	Bottom (reserved)
L2	USB_DM2	DM( DSPORT 2)	
L3	USB_DP2	DP( DSPORT 2)	
L4	VUSB_GND	GND	

P1 is for the USB Device like USB mouse.

### 1.3.3 Rear Board

#### 1.3.3.1 Board Layout

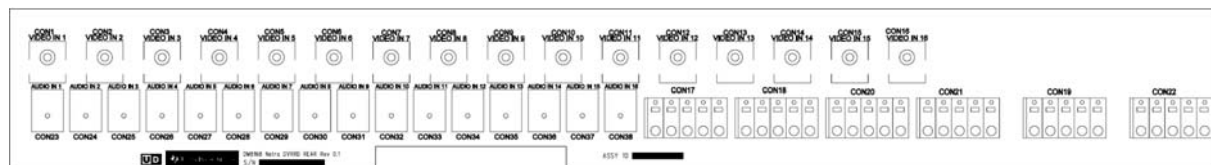


Figure 38. Rear Board(Rev0.1) Layout Top Side



Figure 39. Rear Board(Rev0.1) Layout Bottom Side

#### 1.3.3.2 Main Board Interface

##### 1.3.3.2.1 J1, J2, J3, J4 (Main board Video and Audio Interface)

 


Figure 40. Main board video and audio interface

PIN#	J1 Signal	J2 Signal	J3 Signal	J4 Signal
1	AGND	AGND	AGND	AGND
2	AUDIO_IN4	AUDIO_IN8	AUDIO_IN12	AUDIO_IN16
3	AUDIO_IN3	AUDIO_IN7	AUDIO_IN11	AUDIO_IN15
4	AUDIO_IN2	AUDIO_IN6	AUDIO_IN10	AUDIO_IN14
5	AUDIO_IN1	AUDIO_IN5	AUDIO_IN9	AUDIO_IN13
6	AGND	AGND	AGND	AGND
7	AGND	AGND	AGND	AGND
8	VIDEO_IN1	VIDEO_IN5	VIDEO_IN9	VIDEO_IN13
9	VIDEO_IN1_AGND	VIDEO_IN5_AGND	VIDEO_IN9_AGND	VIDEO_IN13_AGND
10	VIDEO_IN2	VIDEO_IN6	VIDEO_IN10	VIDEO_IN14
11	VIDEO_IN2_AGND	VIDEO_IN6_AGND	VIDEO_IN10_AGND	VIDEO_IN14_AGND
12	VIDEO_IN3	VIDEO_IN7	VIDEO_IN11	VIDEO_IN15
13	VIDEO_IN3_AGND	VIDEO_IN7_AGND	VIDEO_IN11_AGND	VIDEO_IN15_AGND
14	VIDEO_IN4	VIDEO_IN8	VIDEO_IN12	VIDEO_IN16
15	VIDEO_IN4_AGND	VIDEO_IN8_AGND	VIDEO_IN12_AGND	VIDEO_IN16_AGND
16	AGND	AGND	AGND	AGND

J1, J2, J3 and J4 are each connected to main board (J10, J11, J12 and J13) via cable.



**1.3.3.2.2 J5 (Main board Sensor, Alarm, RS-485 Interface, 26Pin Headerbox)**


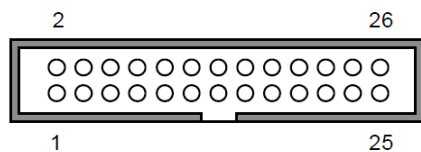


Figure 41. Main board Sensor, Alarm, RS-485 Interface

PIN#	Signal	Description	PIN#	Signal	Description
1	SENSOR IN1	Sensor Input 1	2	SENSOR IN2	Sensor Input 2
3	SENSOR IN3	Sensor Input 3	4	SENSOR IN4	Sensor Input 4
5	SENSOR IN5	Sensor Input 5	6	SENSOR IN6	Sensor Input 6
7	SENSOR IN7	Sensor Input 7	8	SENSOR IN8	Sensor Input 8
9	SENSOR IN9	Sensor Input 9	10	SENSOR IN10	Sensor Input 10
11	SENSOR IN11	Sensor Input 11	12	SENSOR IN12	Sensor Input 12
13	SENSOR IN13	Sensor Input 13	14	SENSOR IN14	Sensor Input 14
15	SENSOR IN15	Sensor Input 15	16	SENSOR IN16	Sensor Input 16
17	ALARM OUT1	Alarm out 1	18	ALARM OUT2	Alarm out 2
19	ALARM OUT3	Alarm out 3	20	ALARM OUT4	Alarm out 4
21	TX+	RS485 TX+	22	TX-	RS485 TX-
23	RX+	RS485 RX+	24	RX-	RS485 RX-
25	GND	GND	26	GND	GND


J5 is connected to main board (J1) via cable.

### 1.3.3.3 Video In

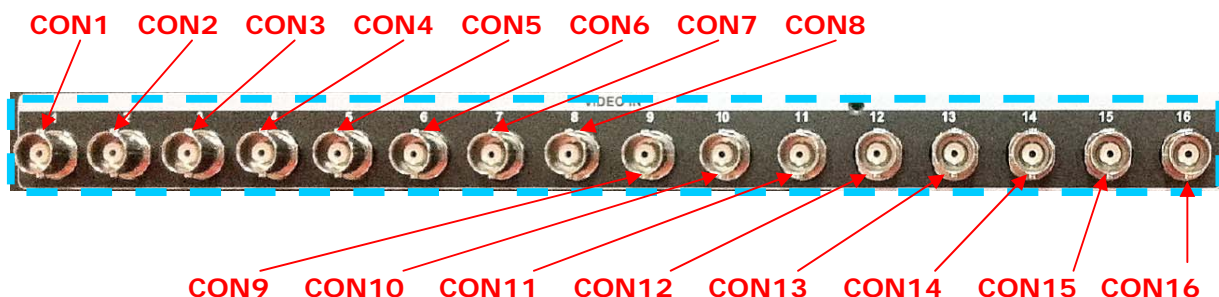


CON1~CON16 is video signals input with BNC jack.  
Connectors are connected to Main board video input interface(TVP5158 Video input).

### 1.3.3.4 Audio In

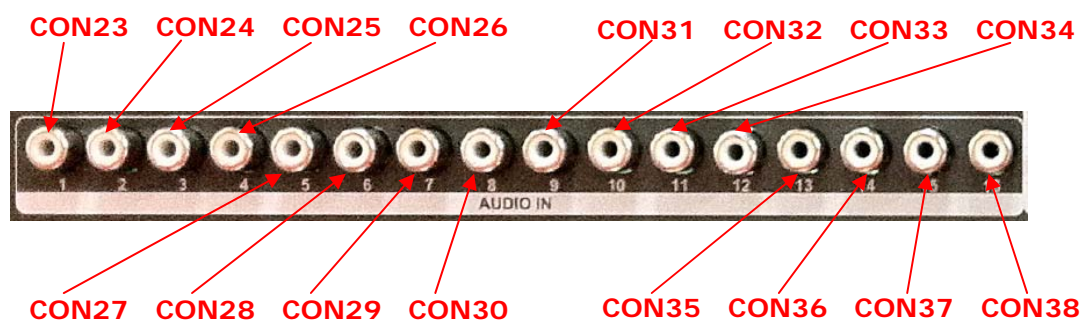


CON23~CON38 are audio signals input with RCA jack.  
Audio signals are connected to Main Board (J10, J11, J12 and J13) via rear board (J1, J2, J3 and J4).

### 1.3.3.5 Sensor In

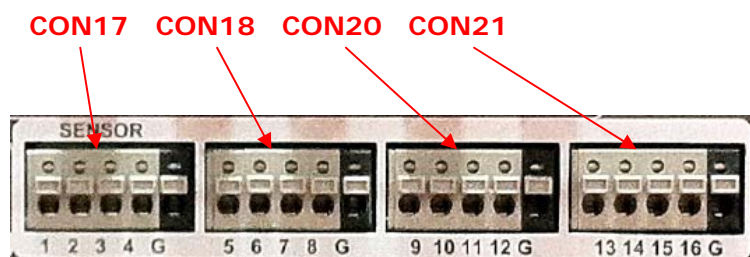


External devices event signal is connected to sensor input.  
Mechanical or electrical switches can be wired to the sensor Inputs and GND connectors.  
SENSOR\_IN signals are connected to Main Board (J1) via rear board (J5).

#### 1.3.3.6 Alarm out

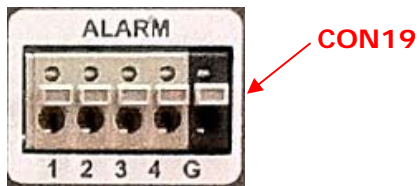

The DVR system signals can be connected to external system for alarm events. ALARM\_OUT signals are connected to Main Board(J1) via rear board(J5).

#### 1.3.3.7 RS 485

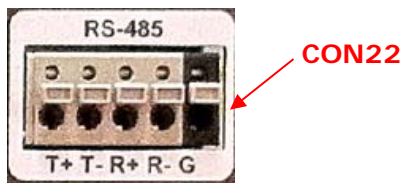

The RS485 interface can be used to control PTZ(PAN, TILT, ZOOM) cameras. RS485 signal is connected to Main Board(J1) via rear board(J5).

### 1.3.4 Power Board

#### 1.3.4.1 Board Layout

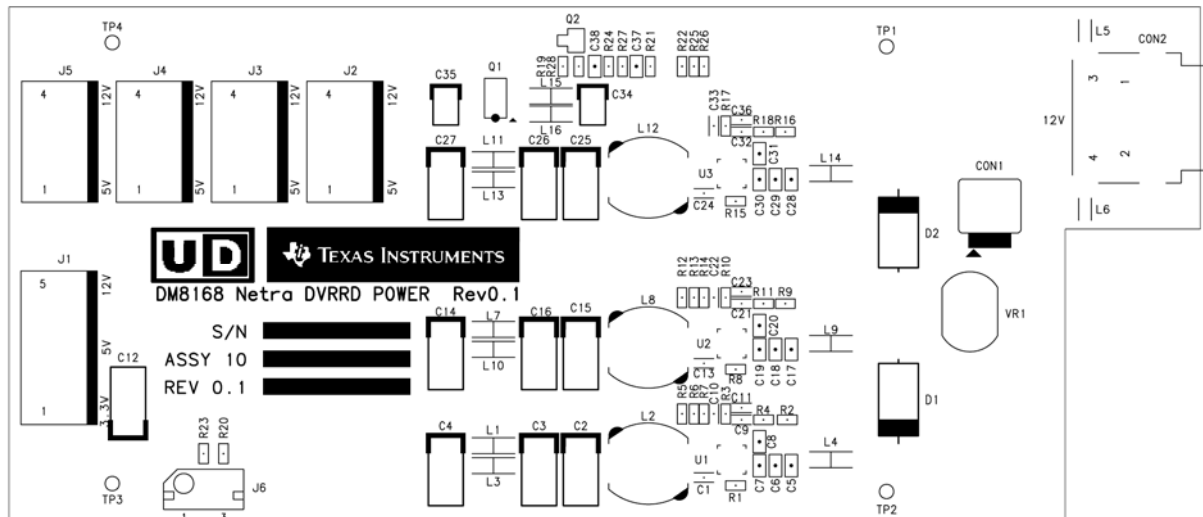


Figure 42. Power Board (Rev0.1) Layout Top Side



Figure 43. Power Board (Rev0.1) Layout Bottom Side

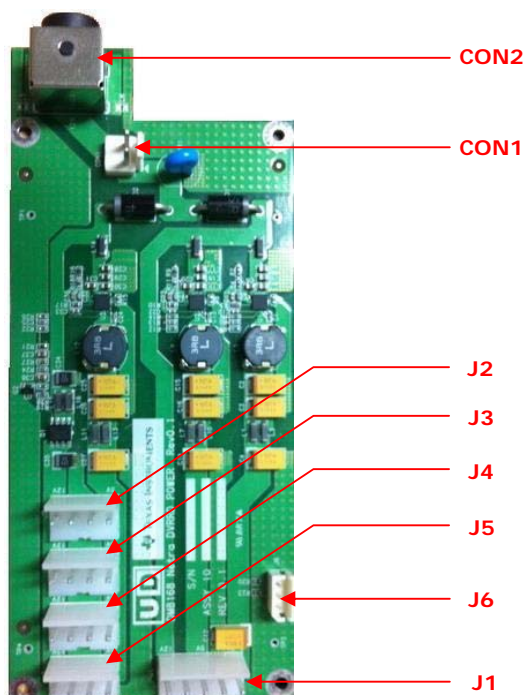


Figure 44. Power Board Picture

#### 1.3.4.2 Power Input

##### 1.3.4.2.1 CON2 (Adapter Input Connector)

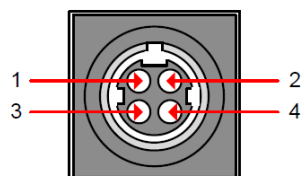


Figure 45. +12V Adapter connector of Power board

PIN#	Signal
1	12V
2	12V
3	GND
4	GND

CON2 is DC Power Jack for 12V Input.  
CON2 can be connected to +12V Adapter.

#### 1.3.4.3 Power Switch

##### 1.3.4.3.1 CON1

 


Figure 46. Power switch of Power board

PIN#	Signal
1	12V IN
2	VCC of Power board

CON1 is connected to DC Power ON/OFF Switch via cable.

#### 1.3.4.4 Power Output

##### 1.3.4.4.1 J1

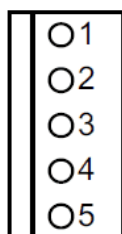


Figure 47. Main board power connector

PIN #	Signal
1	3.3V
2	GND
3	5V
4	GND
5	12V

J1 is Main board power connector.  
J1 is connected to mainboard(J2) via power cable.

##### 1.3.4.4.2 J2, J3, J4, J5

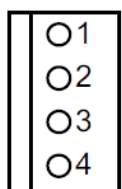


Figure 48. HDD Power connector

PIN #	Signal
1	5V
2	GND
3	GND
4	12V

J2, J3, J4 and J5 are HDD power connector.  
These can be connected to Power connector of the SATA HDDs via each SATA power cable.

#### 1.3.4.5 Power control

##### 1.3.4.5.1 J6



Figure 49. Power control connector

PIN#	Signal
1	GND
2	POWER_ON
3	FRONT_3V3



J6 is Power control connector.  
J6 is connected to main board (J3) via cable.

## 1.4 ERRATA

1	Revision(s) Affected	Rev0.2 and earlier
	Details	The GP0[3]/TCLKIN cannot be used as General-purpose input.
	Workaround	Remove RN30  Note1: If the RN30 is removed, the Sensor1~4 cannot be used.
2	Revision(s) Affected	Rev0.3
	Details	The TLV320AIC3101 has no reset input signal.
	Workaround	Must be jumped between U38(31pin) and the RSTOUTn signal
3	Revision(s) Affected	Rev0.5 and earlier(refer to DM816x errata: SPRZ329)
	Details	When the board is powered on, the Ethernet PHY chip auto-negotiates and establishes a link at either 10/100/1000 Mbps speed, if the link is established at 1Gbps, the Ethernet boot does not work for PHY chips(RTL8211DG) that do not provide the TxCLK clock signal. In these case, the Ethernet boot fails and the 1Gbps mode does not work.
	Workaround	There is no H/W workaround for this issue.  Ensure that the PHY does not auto-negotiate to 1Gbps by default, until boot occurs. At a later stage, the second-level bootloader or OS driver can enable 1-Gbps mode in the PHY via MDIO and restart auto-negotiation to switch to gigabit mode. A PHY chip might provide an input pin to disable/enable 1-Gbps mode by default, which can be overridden by using MDIO register settings.
4	Revision(s) Affected	Rev0.3 and earlier
	Details	VGA output quality is poor.  Ths7360's filter selection is wrong
	Workaround	Remove : R416(10K), R419(10K), R443(75)  Populate: R415(10K), R418(10K)  Rev0.3A is changed it.
5	Revision(s) Affected	Rev0.3 and earlier
	Details	Netra McASP driver does not support non-cascaded mode(TVP5158 Audio interface)
	Workaround	It is changed the McASP mode to cascade mode in Rev0.3A.  There is not a schedule to update driver(for non-cascaded mode) yet.
6	Revision(s) Affected	Rev0.3 and earlier
	Details	USB disconnection is happened in Some of boards, because of unstable AVS power.

		Unstable AVS power affects the 5V power Level and the Netra detect dropping of the 5V power (under 4.7V), Then the Netra disable the USB_DRVVBUS signal.
	Workaround	Add 330uF on the tps40041 input side (on the C893 or the C894).  It will be changed AVS power device in Rev0.4.
7	Revision(s) Affected	Rev0.3 and earlier
	Details	Ethernet port is unstable in Some of boards Because of there is unstable 1.05V that is internal Switch Regulator's output of the RTL8211.
	Workaround	Change C582, C587, C608, C615 (22uF) to 47uF.
8	Revision(s) Affected	Rev0.5 and earlier
	Details	Ethernet port does not work When gigabit mode.  When the PHY(RTL8211) does not provide the TxCLK to the NETRA in the GIGA mode, Mac of the NETRA Does not work.
	Workaround	1. Change PHY's Auto-Negotiation configuration. Before : AN[1:0] = "11" (auto-negotiation enable) After : AN[1:0] = "10" (100M mode) Port0 : Remove R340, Populate R338(4.7K). Port1 : Remove R382, Populate R381(4.7K).  2. Update Uboot binary  After the MAC working, Updated Uboot binary can enable Auto-negotiation in the PHY via MDIO and restart auto-negotiation to switch to gigabit mode enable.
9	Revision(s) Affected	Rev0.4 and earlier
	Details	High Level of the TPS51200's EN control input signal must be Min 1.7V. But the input high level is just 1.4V now.  Even if TPS51200 is run well now. It must be modified.
	Workaround	Remove R690 (10K), but it is just temporary solution.  Rev0.5 will be modified the high input level as Min 1.7V
10	Revision(s) Affected	Rev0.3A
	Details	1V0_CON Power (U96)'s enable signal (1V0_AVS_GD) is not connected to any control signal.  So, U96 is always enabled.
	Workaround	The 1V0_AVS_GD signal must be modified as below schematic.

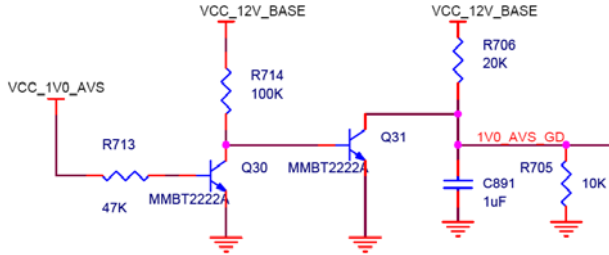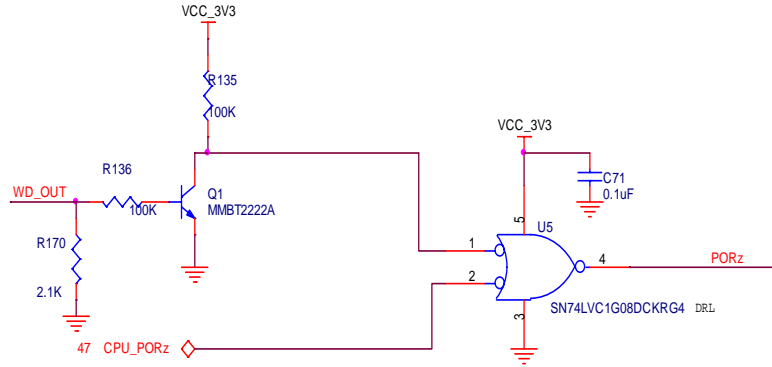

		
11	Revision(s) Affected	Rev0.3A and earlier
	Details	Some SATA AC coupled Capacitors have wrong value.
	Workaround	Remove : C45, C47, C49, C51 Modify value (0.1uF -> 10nF): C39, C40, C41, C42, C55, C56.
12	Revision(s) Affected	Rev0.5B and earlier
	Details	SATA Link speed issue. If the SATA3 (6Gbps) HDD is connected to the PM(JMB321) SATA port, Link speed is set to 1.5Gbps. And If some SATA3 (6Gbps) HDDs are connected to the Netra SATA port, Link is fail.
	Workaround	Use jumper for limitation link speed up to 3Gbps on the SATA3 (6Gbps) HDD. Then, link speed is set to 3Gbps
13	Revision(s) Affected	Rev0.5B, Rev0.5A and Rev0.5
	Details	VGA out issue. VGA output is unstable with some monitors. The Hsync and the Vsync signal are not good.
	Workaround	Modify value(100 ohm -> 22 ohm) : R644, R643
14	Revision(s) Affected	Rev0.5B and earlier
	Details	When PORz is asserted, the WD_OUT is held high. So. The system would not come out of reset.
	Workaround	Add a pull down 2.1Kohm (R170) on the WD_OUT. 
15	Revision(s) Affected	Rev0.5B, Rev0.5A and Rev0.5

	Details	There are wrong powers on the TPD7S019(U112)																	
	Workaround	<table><tr><td></td><td>Current(wrong)</td><td>Correction</td></tr><tr><td>U112-2 (VCC_VID)</td><td>VCC_DENC</td><td>VCC_5V0</td></tr><tr><td>U112-7 (VCC_DDC)</td><td>VCC_5V0</td><td>VCC_DENC</td></tr></table> <p>It will be modified in the Rev0.6.</p>				Current(wrong)	Correction	U112-2 (VCC_VID)	VCC_DENC	VCC_5V0	U112-7 (VCC_DDC)	VCC_5V0	VCC_DENC						
	Current(wrong)	Correction																	
U112-2 (VCC_VID)	VCC_DENC	VCC_5V0																	
U112-7 (VCC_DDC)	VCC_5V0	VCC_DENC																	
16	Revision(s) Affected	Rev0.6 and earlier																	
	Details	There are two options for VGA sync signal <ol style="list-style-type: none"><li>1. Use LMH1980MM to re-generate the H/V SYNC from RGB signal(R439, R440), this is valid for PG1.1(Netra version) or earlier version.</li><li>2. Use the H/V SYNC directly from the Netra (R625, R565), this is valid for PG2.0(Netra version) or above version.</li></ol>																	
	Workaround	Refer to below table option. <table><tr><td>Board version</td><td>Sync separator(U41) (1)</td><td>H/V SYNC directly from the Netra</td></tr><tr><td>Rev0.4 and earlier</td><td>supported</td><td>Not supported</td></tr><tr><td>Rev0.5/0.5A/0.5B with PG1.1</td><td>supported</td><td>Not supported</td></tr><tr><td>Rev0.5B with PG2.0</td><td>Not Supported Remove : R439, R440</td><td>Supported Populate : R625, R565</td></tr><tr><td>Rev0.6</td><td>Not supported</td><td>Supported</td></tr></table> <p>Note (1) The sync separator is temporary solution for the PG1.1 that don't support the H/V sync signal.</p>			Board version	Sync separator(U41) (1)	H/V SYNC directly from the Netra	Rev0.4 and earlier	supported	Not supported	Rev0.5/0.5A/0.5B with PG1.1	supported	Not supported	Rev0.5B with PG2.0	Not Supported Remove : R439, R440	Supported Populate : R625, R565	Rev0.6	Not supported	Supported
Board version	Sync separator(U41) (1)	H/V SYNC directly from the Netra																	
Rev0.4 and earlier	supported	Not supported																	
Rev0.5/0.5A/0.5B with PG1.1	supported	Not supported																	
Rev0.5B with PG2.0	Not Supported Remove : R439, R440	Supported Populate : R625, R565																	
Rev0.6	Not supported	Supported																	