

Change
Schedule
Settings

Schedule


Mode

Change Mode
Settings

Return to
Main Page

Back

```
graph LR; Schedule[Schedule] --> ChangeSchedule[Change Schedule Settings]; Mode[Mode] --> ChangeMode[Change Mode Settings]; Back[Back] --> ReturnMain[Return to Main Page];
```

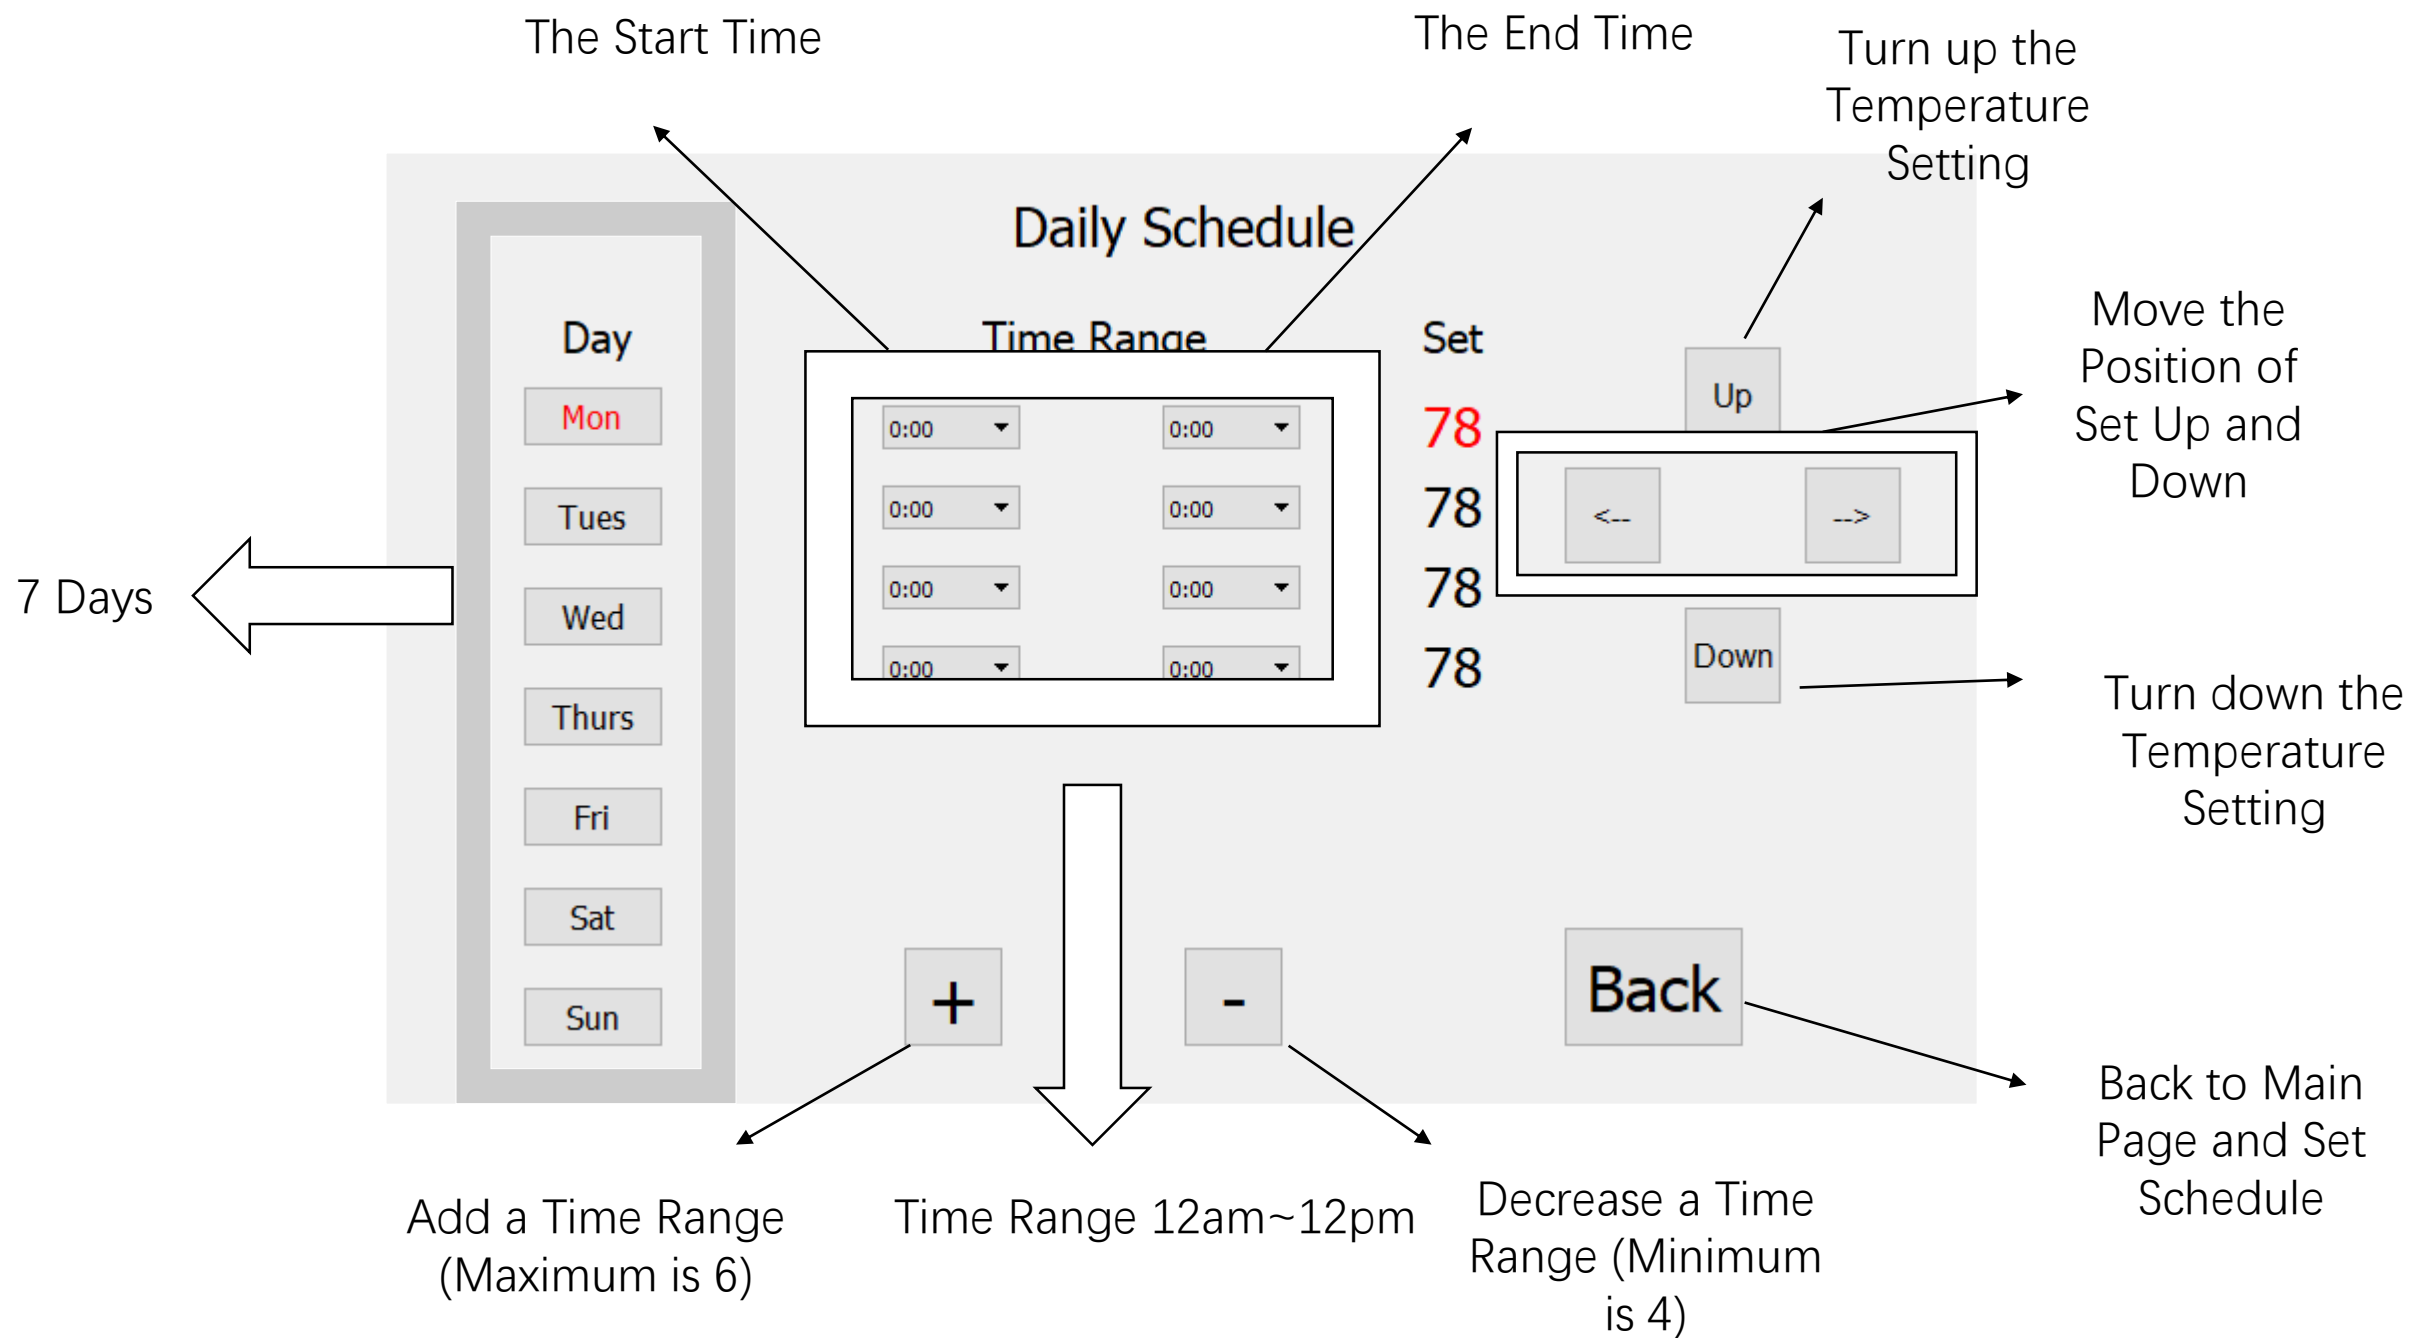

Daily Schedule


Day	Time Range		Set	
Mon	0:00	0:00	78	Up
Tues	0:00	0:00	78	<--
Wed	0:00	0:00	78	-->
Thurs	0:00	0:00	78	Down
Fri	0:00	0:00	78	
Sat				
Sun				

+

-

Back

New Adding Time Range

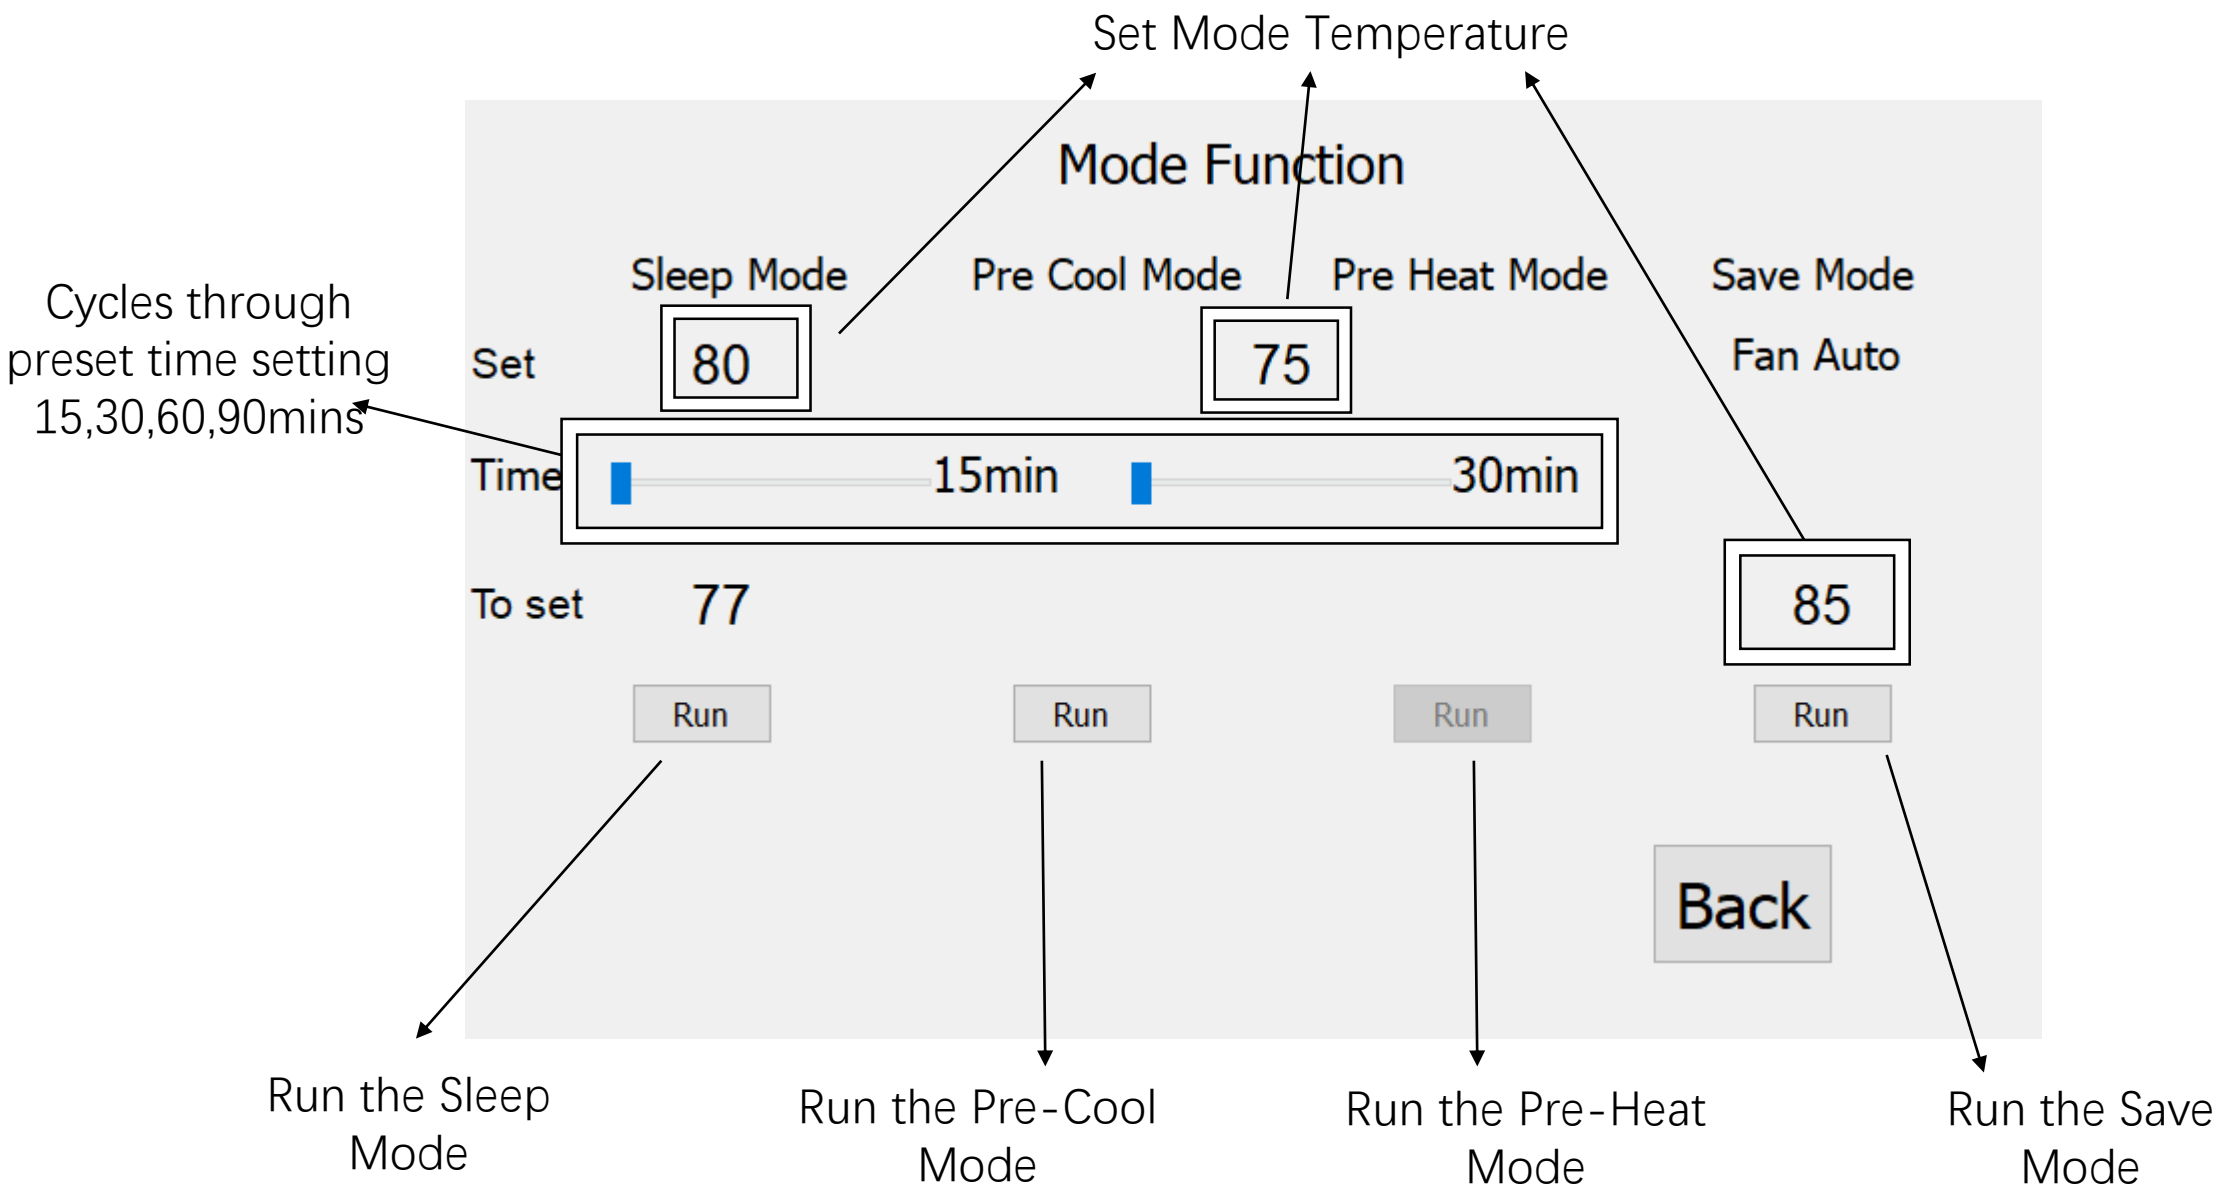

Mode Function:

(1) Save Mode

Save mode is intended to help user reduce household power consumption. When the user leaves the house, the Save Mode can be turned on. The system then does the following:

1. If the Temperature mode is set to Cool, the Save Mode Temperature increases the set temperature to 5 degrees Fahrenheit above the current set temperature.
2. If the Temperature mode is set to Heat, the Save Mode Temperature decreases the set temperature to 5 degrees Fahrenheit below the current set temperature.


(2) Pre-Heat/Pre-Cool Mode

When the user sets up the Pre-Heat or Pre-Cool mode, the system takes into account the estimated-time-of-arrival of the user and begins a heat/cool cycle 15 minutes before arrival, during which it brings up or down the temperature to the set temperature. This feature is intended to make the house temperature comfortable for the user on arrival.

(3) Sleep Mode

Sleep Mode is intended to give a better sleeping experience. The Sleep Mode modifies the temperature settings in order to suit the body temperature changes as well as the environmental temperature flux, thus keeping the user comfortable throughout the night.

Save Mode Running

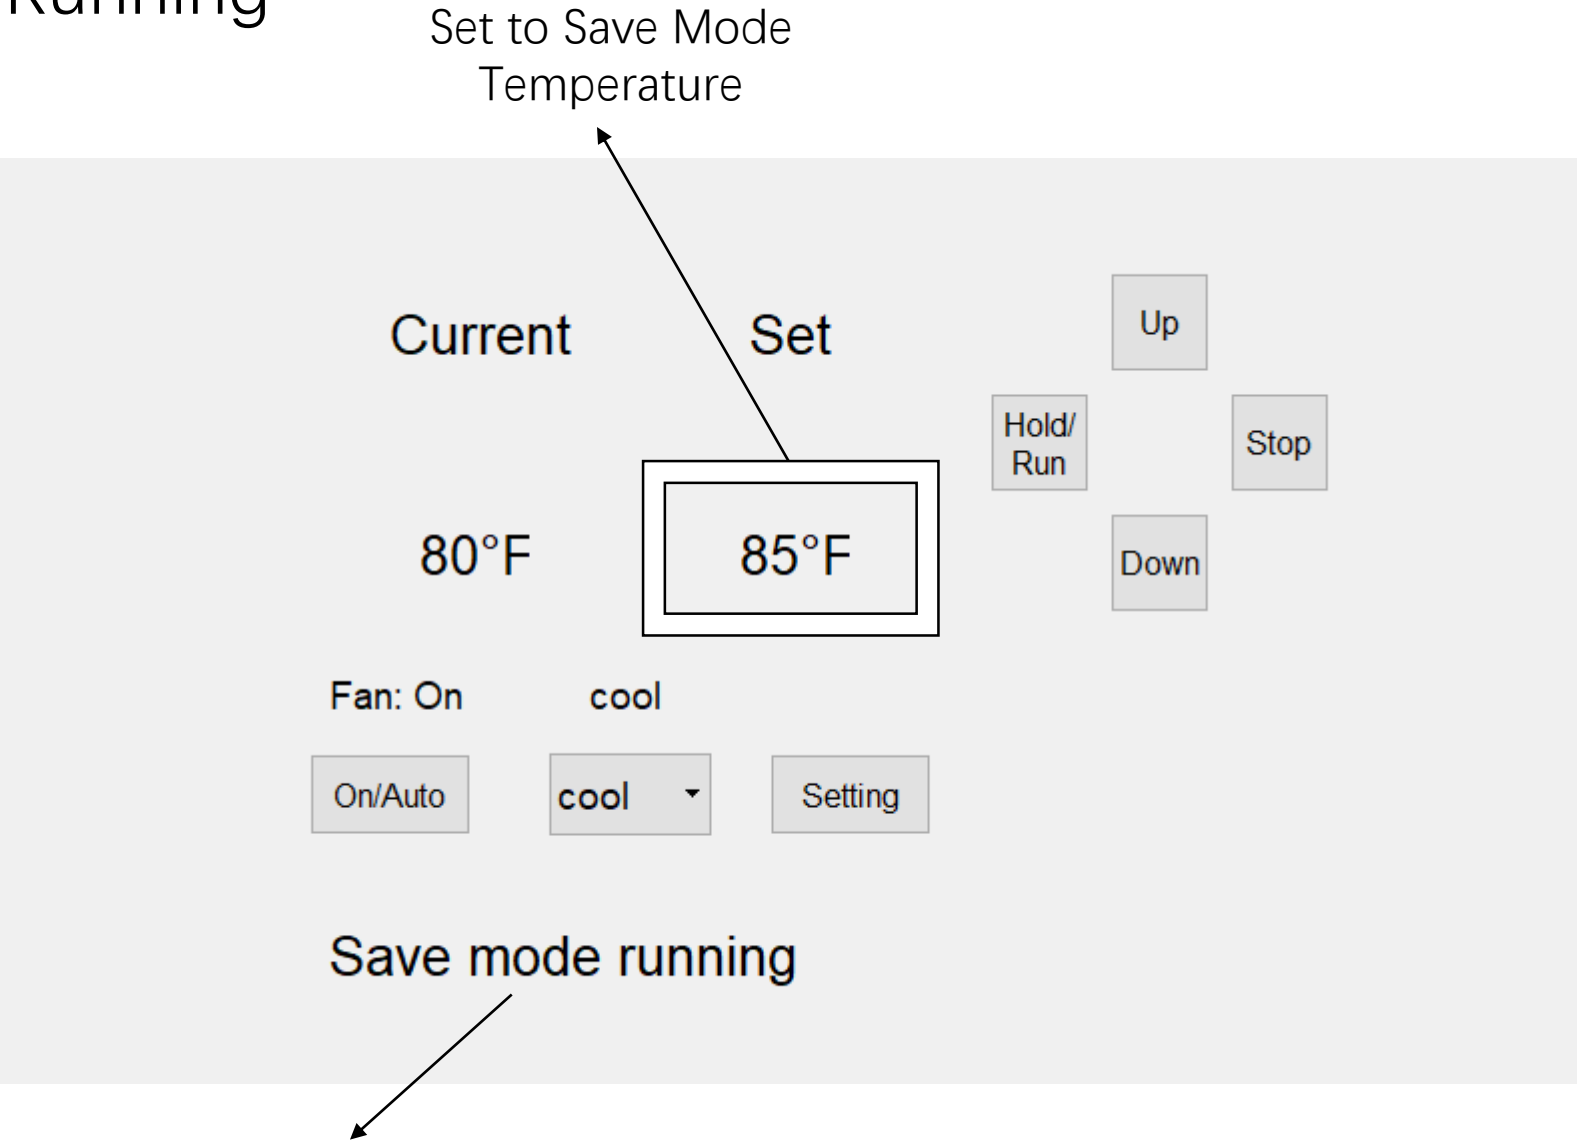

When Save Mode is Running, this
Will Show on Main page

Save Mode Running

Cycles through Preset Time
Setting 30,60,90mins

Mode Function

Sleep Mode

Pre Cool Mode

Pre Heat Mode

Save Mode

Set

Fan Auto

Time

15min

30min

To set

Run

Run

Run

86

Stop

Back

When Save Mode Running,
Button cannot Press

Stop the Save
Mode Running

Mention:

1. The Wi-Fi-Thermostat allows for users to set time schedules on the thermostat only using the thermostat interface. The phone application however can Hold or Run the time schedules.

2. Fan Modes:

- a. In the Fan ON Mode, the Fan runs whether the AC Compressor is on or not.
- b. In the Fan AUTO Mode, the fan works only when the AC Compressor is on.