



RTS Power Supply Removal and Installation Guide

version 1.0 | 07/27/2009



Power off the RTS Kiosk and unplug prior to maintenance.




Tools Needed:

- Magnetic Phillips head screw driver
- 3/8" Wrench

Timeframe:

Approximatley 25 minutes for power supply removal / installation process.

STEPS FOR REMOVAL

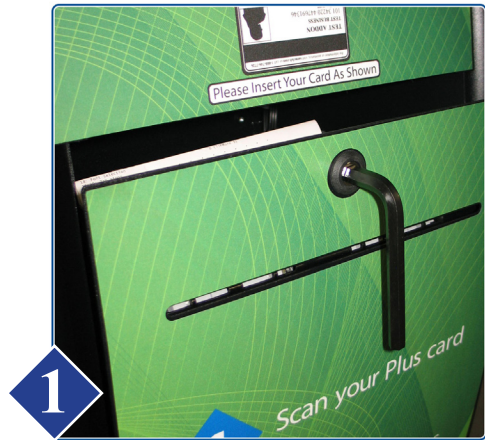


1 Open the door of the kiosk.




2 Unplug all cables and power from PC.



3 Use wrench to loosen nuts (but don't remove) securing the power supply mount.

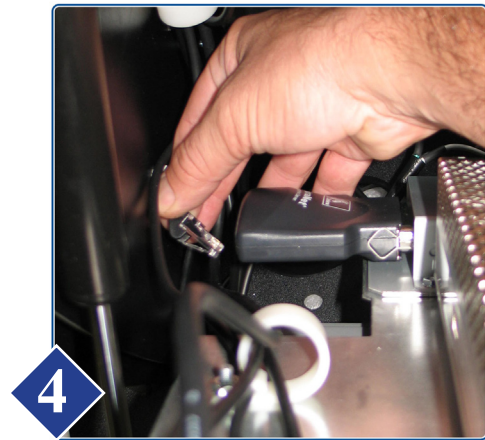


4 Unplug ethernet cable from printer server.

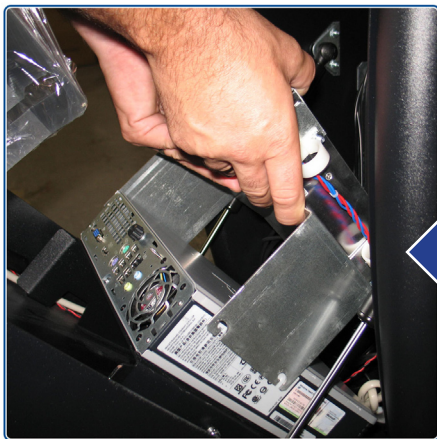

5 Gently lift power supply mount from PC bracket.

STEPS FOR INSTALLATION

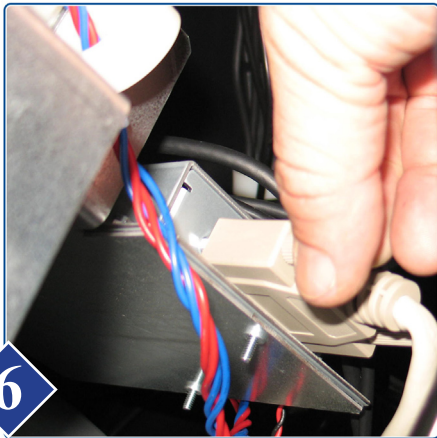

6

Unplug printer cable from right side of unit.



7

Unplug input & output connections and remove power supply mount from kiosk.




8

Remove 3 screws securing the power supply to mount.



9

Position replacement power supply onto mount.

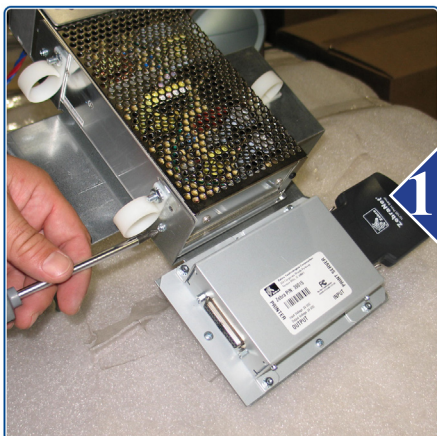


10

Replace the 3 screws that were removed in step 8.

STEPS FOR INSTALLATION




11 Plug input & output connections to power supply.

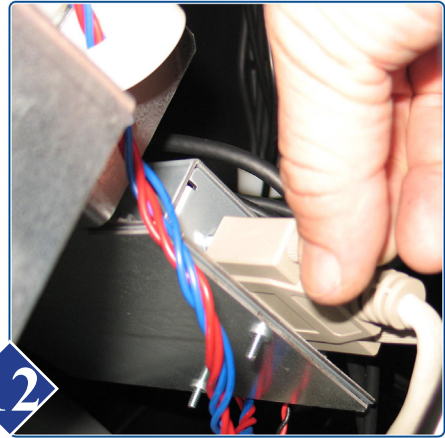

12 Plug in printer cable.



13 Gently place power supply mount back into kiosk.

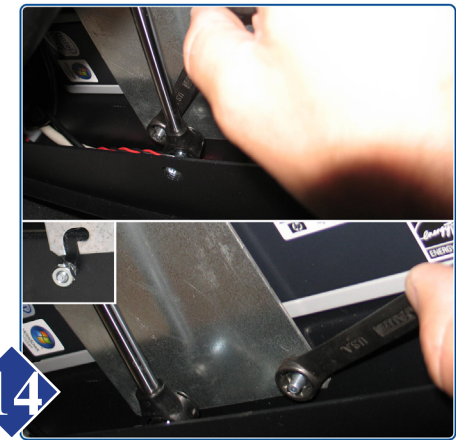

14 Tighten the 4 nuts securing the power supply mount to the PC bracket.



15 Plug ethernet cable into printer server.



Plug in all remaining cables and power into PC.



Close and secure kiosk.

FINAL STEP

Use return shipping label included inside the replacement printer box and drop off package to UPS Center for return shipping no later than the following day.

Please do not remove, damage, or marker over the Serial Label on the box. This information is used to catalog completion of replacement install and return.