



RTS PC Removal and Installation Guide

version 1.0 | 07/20/2009

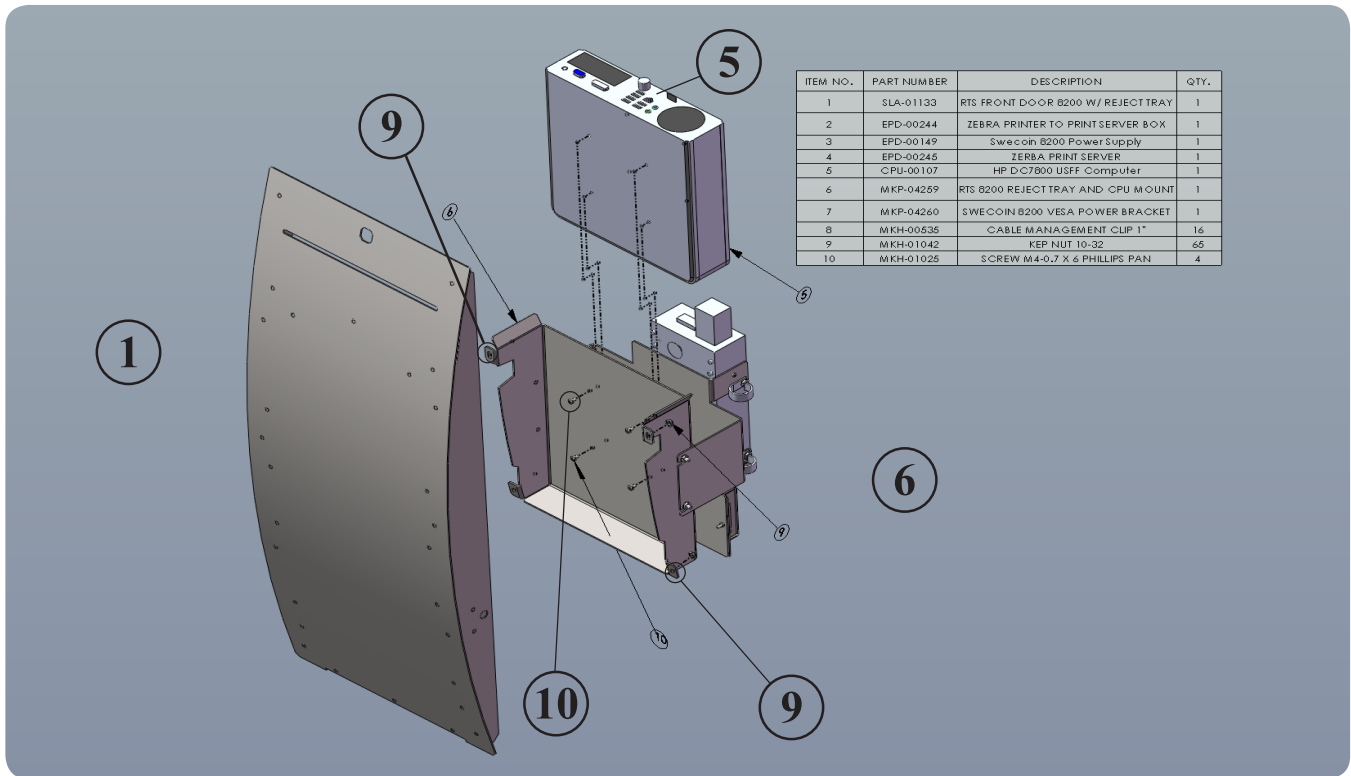


Fig. 1 - Reference Index



Power off the RTS Kiosk and unplug prior to maintenance.



Tools Needed:

- Phillips head screw driver
- 3/8" nut driver or socket with a magnetic tip
- 4 spare nuts are included (if needed)

STEPS FOR REMOVAL




1

Open the door of the kiosk.



2

Unplug all cables from PC.

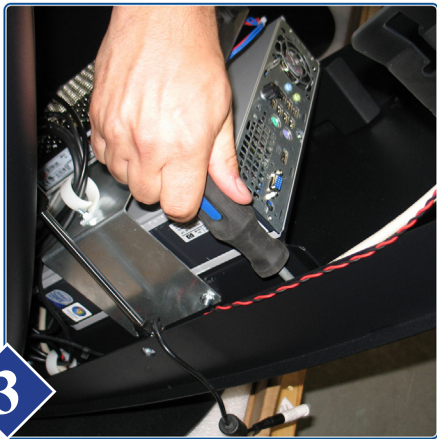


3

Remove QTY: 4 nuts (9) from the door that hold the tray and PC mount (6) as shown in FIG. 1



4

Remove QTY: 4 screws (10) from the tray and PC mount (6) as shown in FIG. 1

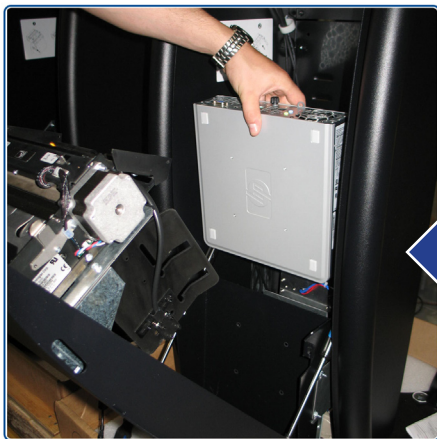

5

Remove PC and repack in replacement PC's box for return shipping.

STEPS FOR INSTALLATION




Unpack and insert the good PC into bracket.




Install QTY: 4 screws (10) to the tray and PC mount (6) to mount the PC as shown in FIG. 1, pg.1



Install QTY: 4 nuts (9) to the door that hold the tray and PC mount (6) as shown in FIG. 1, pg. 1

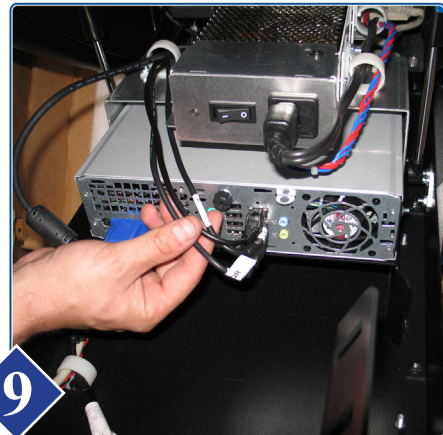

Plug in all of the cables to the PC (5).

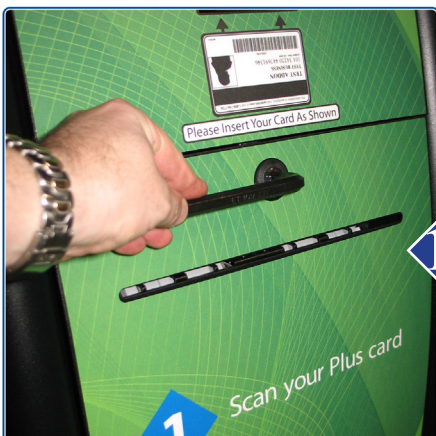

Close the door of the kiosk.

FINAL STEPS



Use return shipping label included inside the replacement PC's box. Please do not remove, damage, or marker over the Serial Label on the box.

This information is used to catalog completion of replacement install and return.