


## Wireless

Starting with TraqDash firmware release 2.80, there is support for a wireless SD card that will allow downloading of data remotely via a WiFi connection. The TraqDash will create a local, private WiFi network and make the session files available to download. Connect your PC to the network, enter the password, and open a browser.

Once configured, the WiFi network is automatically transmitted whenever the TraqDash has power so you can download in the pits or the paddock. Just remember to leave the TraqDash powered up.

To configure the WiFi, install the Traqmate wireless SD card and allow it to update your bootloader and firmware. Power cycle the system once to apply the new changes. (Systems purchased with wireless come pre-configured)

Then go to the System Settings Screen and select WiFi/SD. The default unique network name will be TraqDashWiFi with the last 4 digits of your TraqDash serial number. The default password is traqmate. You can change these to protect the security of your data.

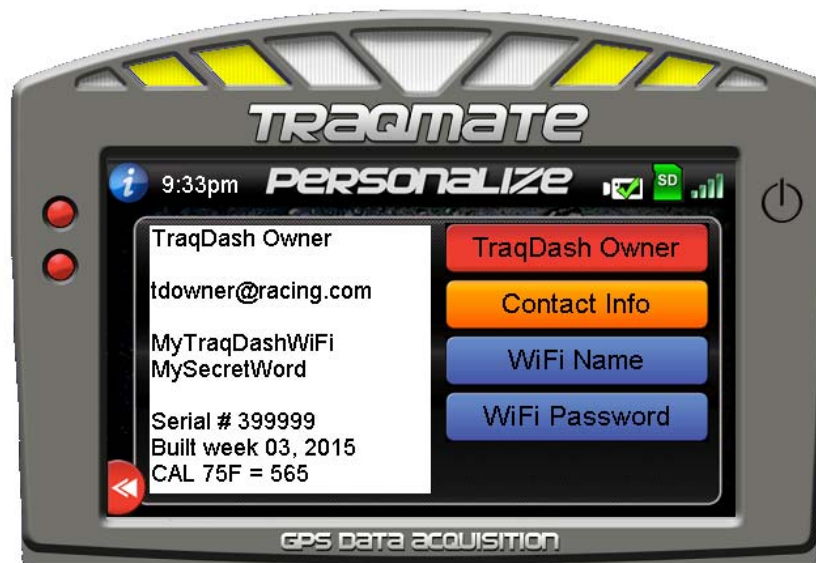

Note that the WiFi network name and password are shown in the white area on the left of the screen.