


Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

1. OUTSIDE VEHICLE

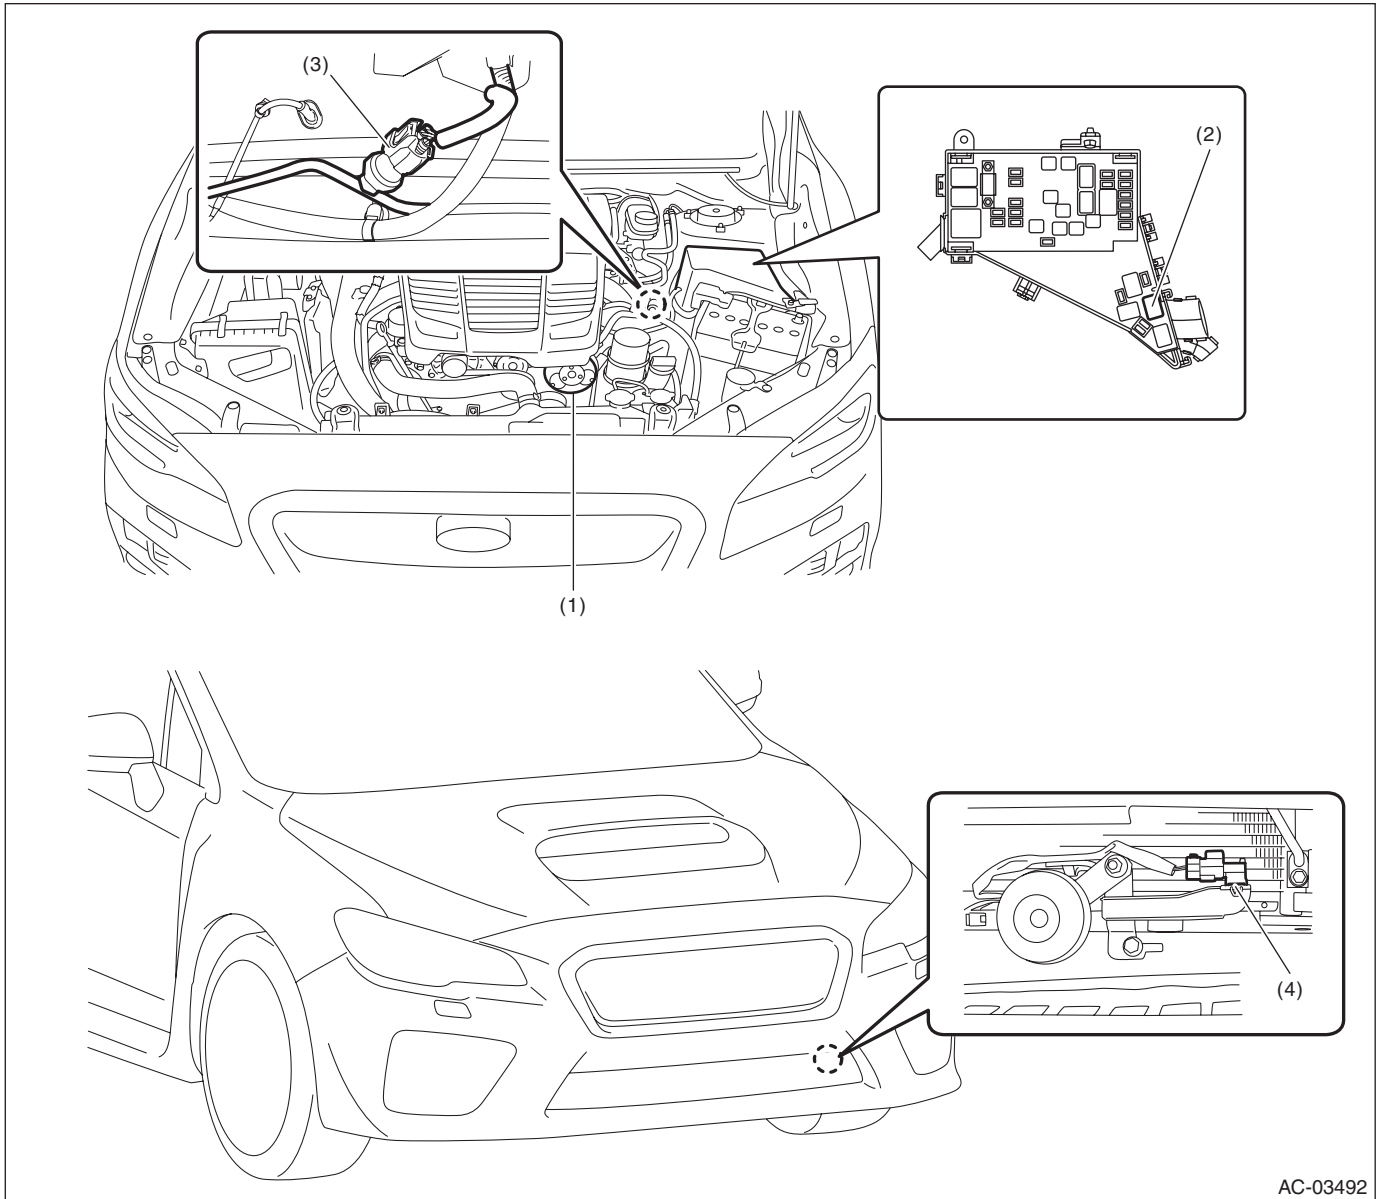

AC-03492

(1) A/C compressor
(2) A/C relay


(3) Pressure switch

(4) Ambient sensor

Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

2. COMPARTMENT

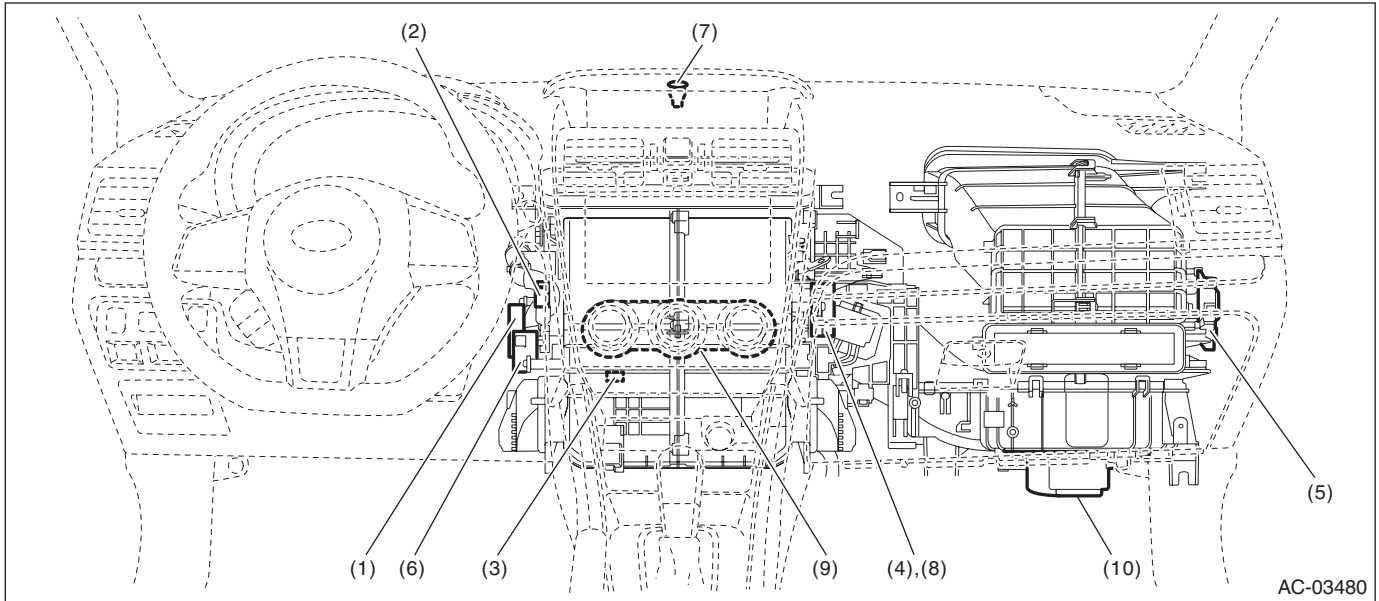

(1) Air mix door actuator LH*2

(2) In-vehicle sensor

(3) Evaporator sensor

(4) Air mix door actuator RH*2

(5) Intake door actuator

(6) Mode door actuator

(7) Sunload sensor

(8) Air mix door actuator*1

(9) A/C control panel

(10) Blower motor

*1: Without left/right independent air conditioning function

*2: With left/right independent air conditioning function