

5. Horn Switch

A: NOTE


Horn switch is a unit with the driver’s airbag module. For operation procedures, refer to “Driver’s Airbag Module” in “AIRBAG SYSTEM”. <Ref. to AB-33, Driver’s Airbag Module.>

B: INSPECTION

1. CHECK HORN SWITCH

- 1) Remove the driver’s airbag module. <Ref. to AB-33, REMOVAL, Driver’s Airbag Module.>
- 2) Check that the horn switch connector is connected properly.
- 3) Measure the resistance between connectors.

Preparation tool:
Circuit tester

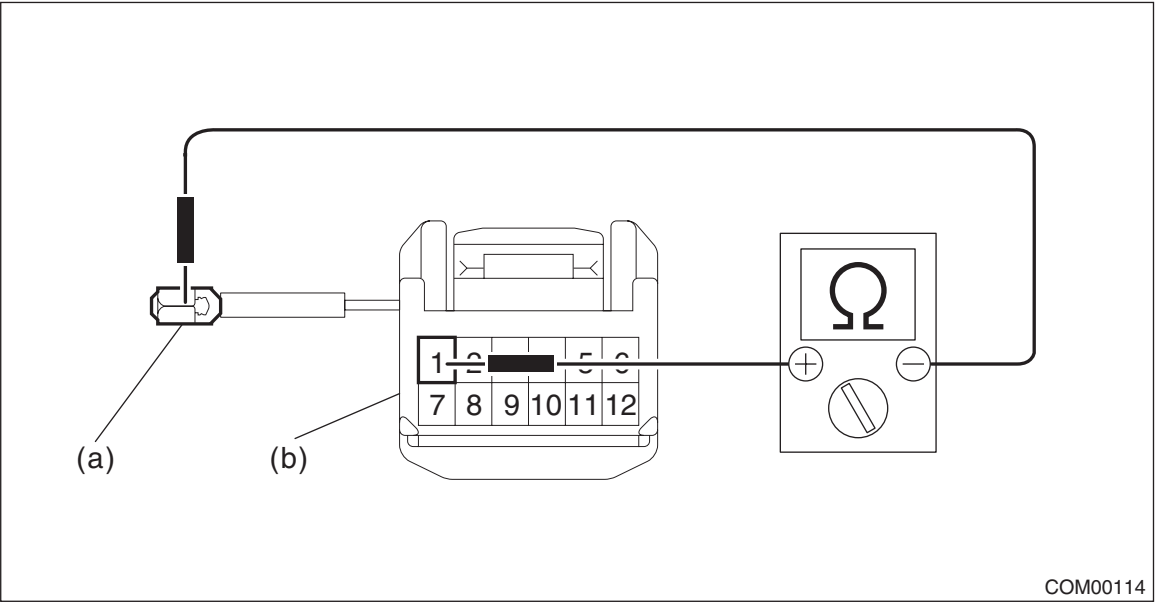

(a) Ground terminal (b) Horn switch terminal


Terminal No.	Inspection conditions	Standard
Horn switch terminal — ground terminal	Always	Less than 1 Ω

- 4) Replace the driver’s airbag module if the inspection result is not within the standard value.

2. CHECK ROLL CONNECTOR

- 1) Remove the roll connector. <Ref. to AB-60, REMOVAL, Roll Connector.>
- 2) Measure the resistance between connector terminals.

Preparation tool:
Circuit tester

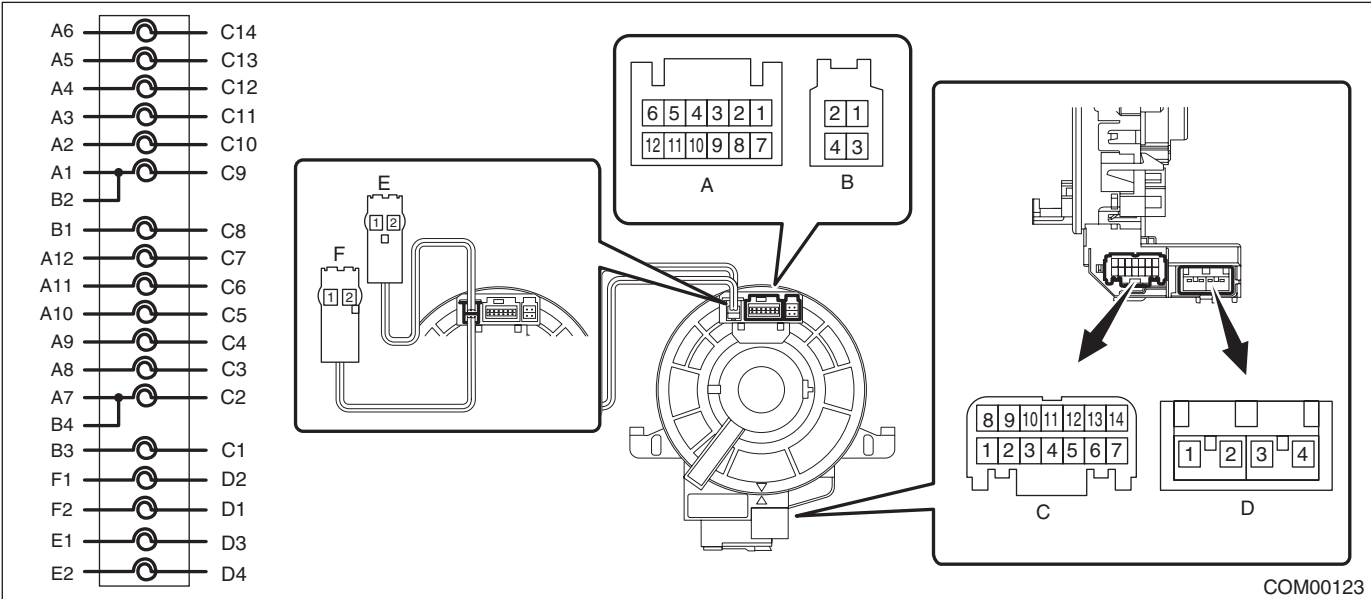

COM00123

Terminal No.	Inspection conditions	Standard
A1 — C9	Always	Less than 1 Ω

- 3) Replace the roll connector if the inspection result is not within the standard value.

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Relay and Fuse	7
3. Power Window System	9
4. Power Window Control Switch	11
5. Front Door Glass	19
6. Front Regulator and Motor Assembly	23
7. Remote Control Mirror System	25
8. Outer Mirror Assembly	26
9. Remote Control Mirror Switch	31
10. Rearview Mirror	33
11. Rear Door Glass	34
12. Rear Regulator and Motor Assembly	37
13. Windshield Glass	39
14. Rear Window Glass	47
15. Rear Window Defogger System	50
16. Wiper Deicer System	53