


7. Front Wiper Arm


A: REMOVAL

- 1) Remove the cover - windshield wiper arm.
- 2) Remove the nuts, and remove the arm assembly - windshield wiper.

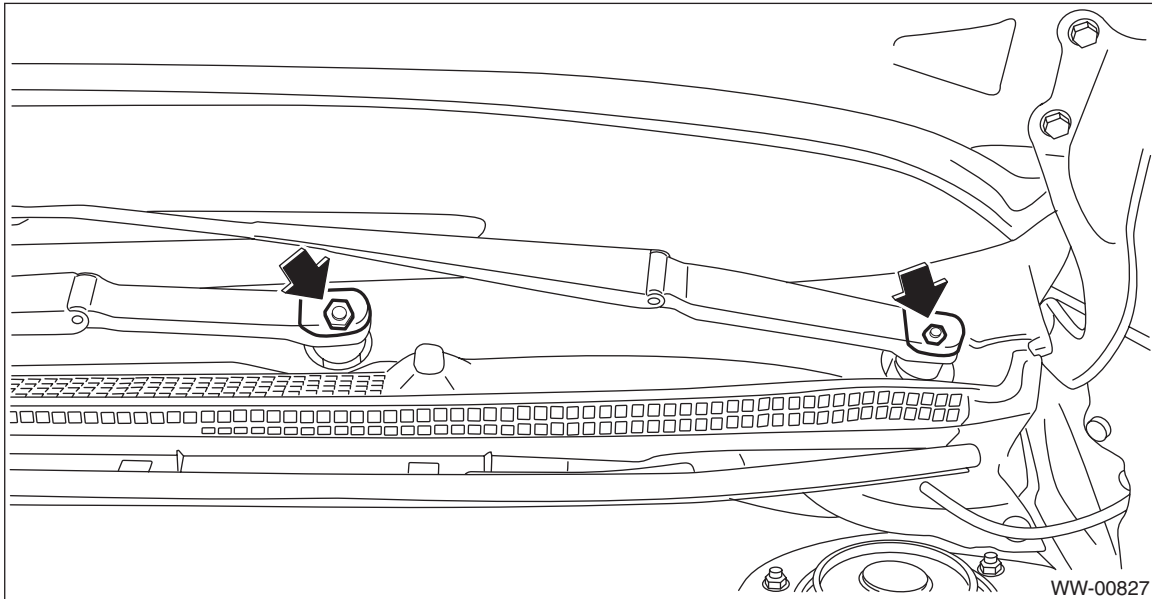

B: INSTALLATION

- 1) Install the arm assembly - windshield wiper.
 - (1) Assemble the arm assembly - windshield wiper so that the blade assembly - windshield wiper is aligned to the ceramic print point mark of the windshield glass.

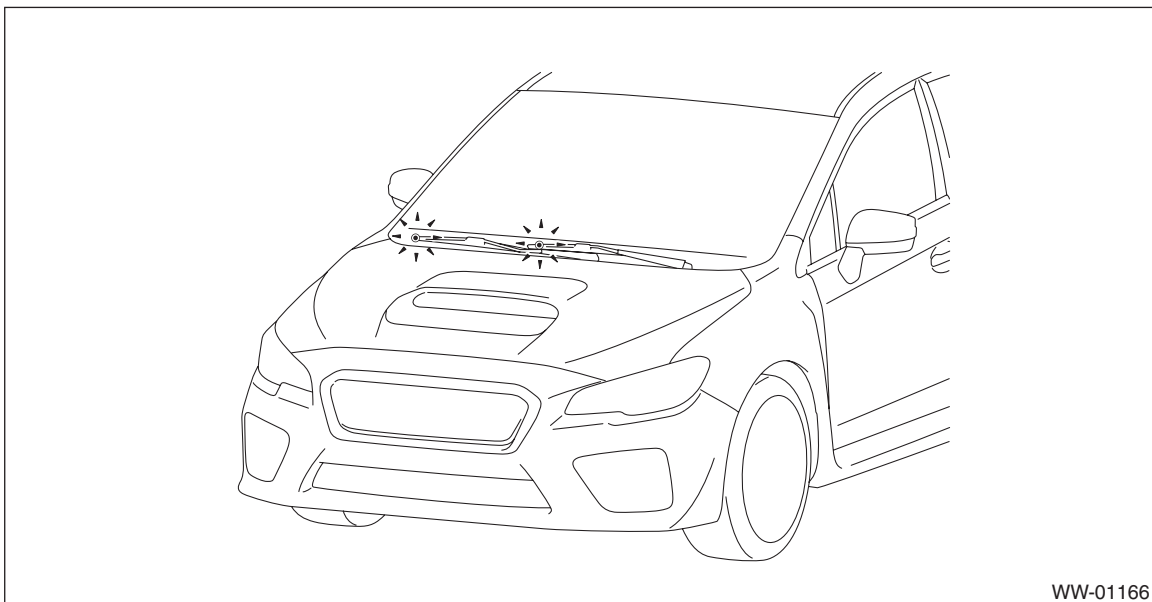


Front Wiper Arm

WIPER AND WASHER SYSTEMS

- (2) Tighten the arm assembly - windshield wiper to specified torque and install the cap.

Tightening torque:


26 N·m (2.7 kgf-m, 19.2 ft-lb)

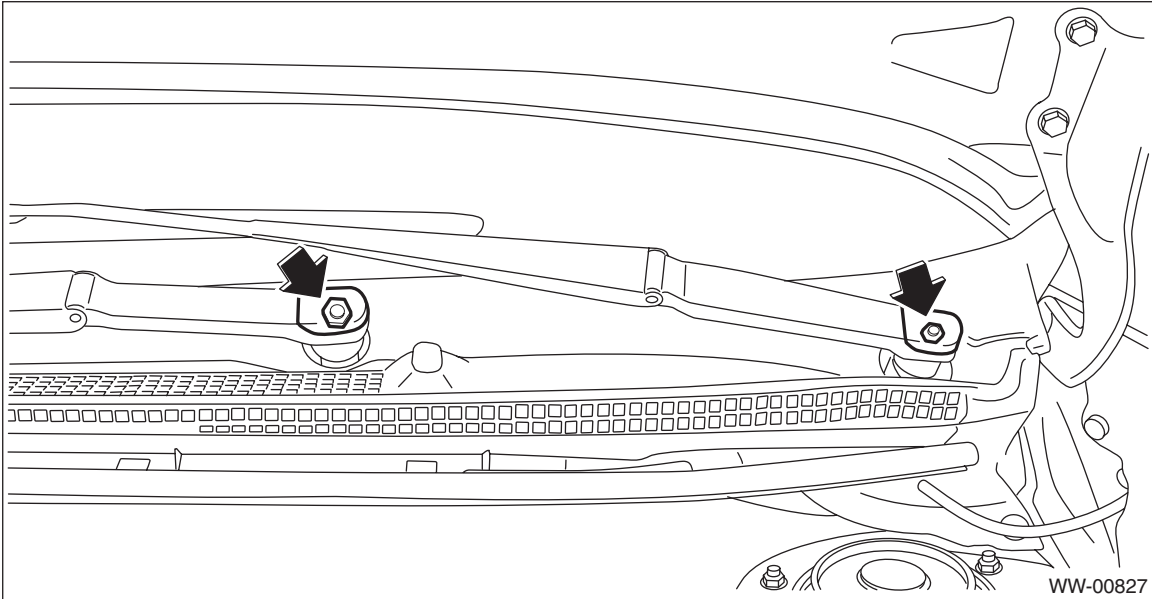

- 2) Check the position of windshield wiper. <Ref. to WW-20, ADJUSTMENT, Front Wiper Arm.>

C: ADJUSTMENT

- 1) Operate the windshield wiper once.
- 2) Check that the wiper blade is aligned with the point mark.

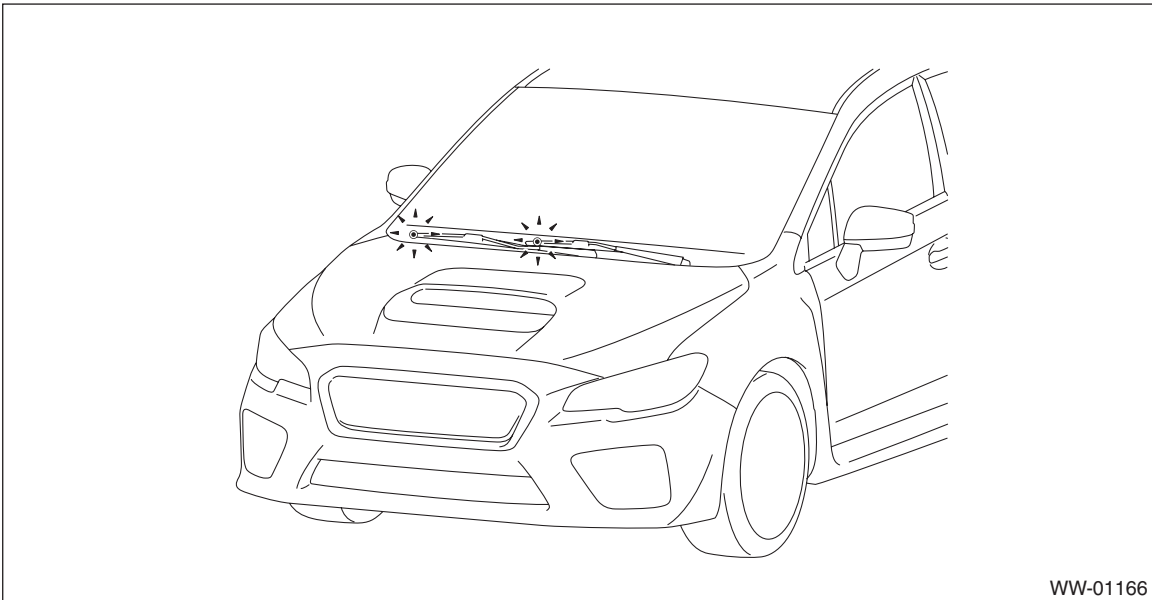

- 3) If the wiper blade is not aligned with the point mark, perform the removal and installation of the windshield wiper. <Ref. to WW-19, REMOVAL, Front Wiper Arm.>