

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

8. Sunshade

A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Remove the lid assembly - sunroof. <Ref. to SR-7, REMOVAL, Glass Lid.>

3) Remove the trim panel - roof assembly. <Ref. to EI-99, REMOVAL, Roof Trim.>

4) Remove the sunshade assembly.


CAUTION:

Be careful not to damage the sunshade assembly.

(1) Attach protective tape (a) on the handle of sunshade assembly.

(2) Remove the left and right stoppers (b).

(3) Remove the sunshade assembly while pulling the center of the brace downward.

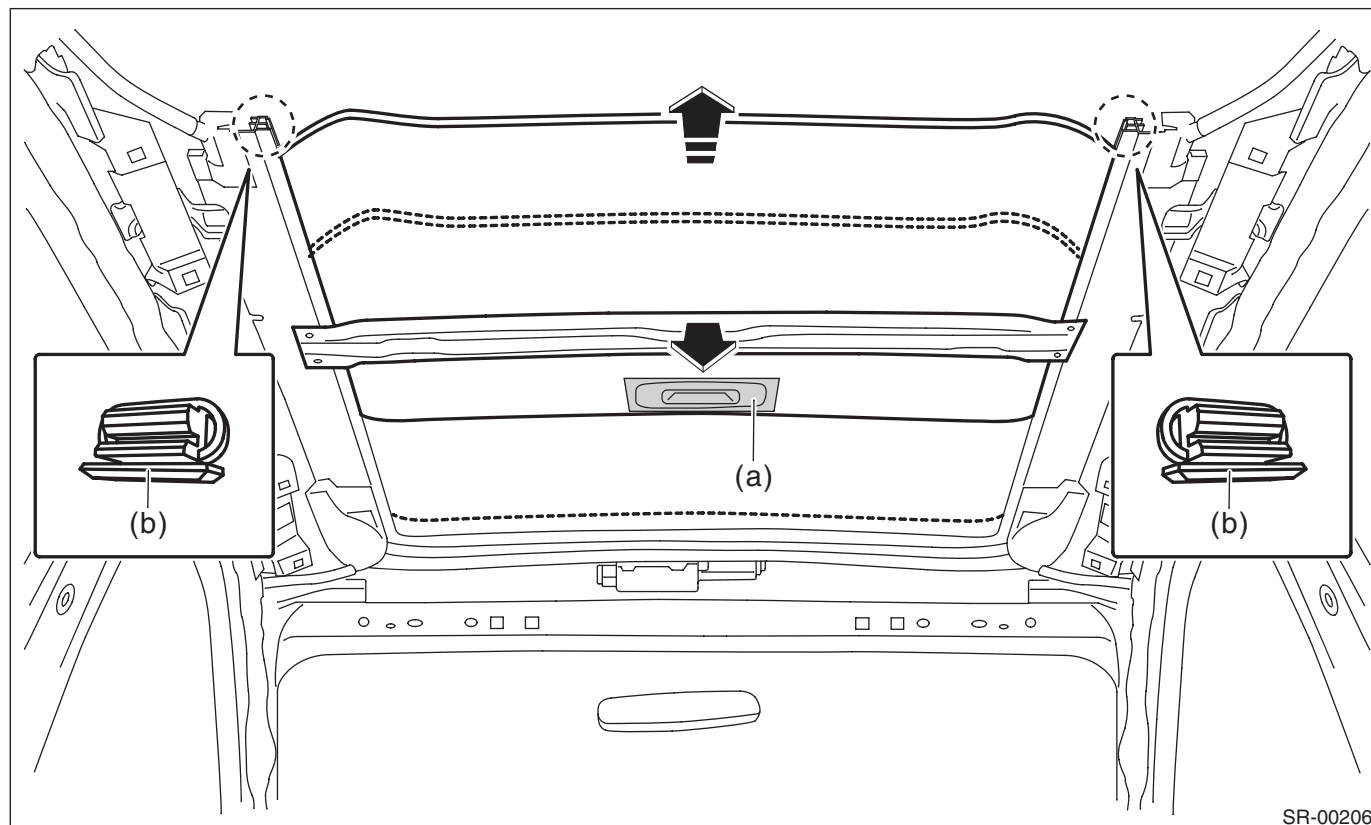

B: INSTALLATION

1) Install the sunshade assembly.

2) Install the trim panel - roof assembly. <Ref. to EI-102, INSTALLATION, Roof Trim.>

3) Install the lid assembly - sunroof. <Ref. to SR-7, REMOVAL, Glass Lid.>

4) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.


C: INSPECTION

1. MOVING LOAD OF SUNSHADE ASSEMBLY

- 1) Attach a spring scale together with a cloth to the edge of sunshade assembly.
- 2) Pull the spring scale to check the moving load of the sunshade assembly.

Moving load of sunshade assembly:

14 ± 6 N (1.43 kgf, 3.1 lbf ± 0.61 kgf, 1.3 lbf)

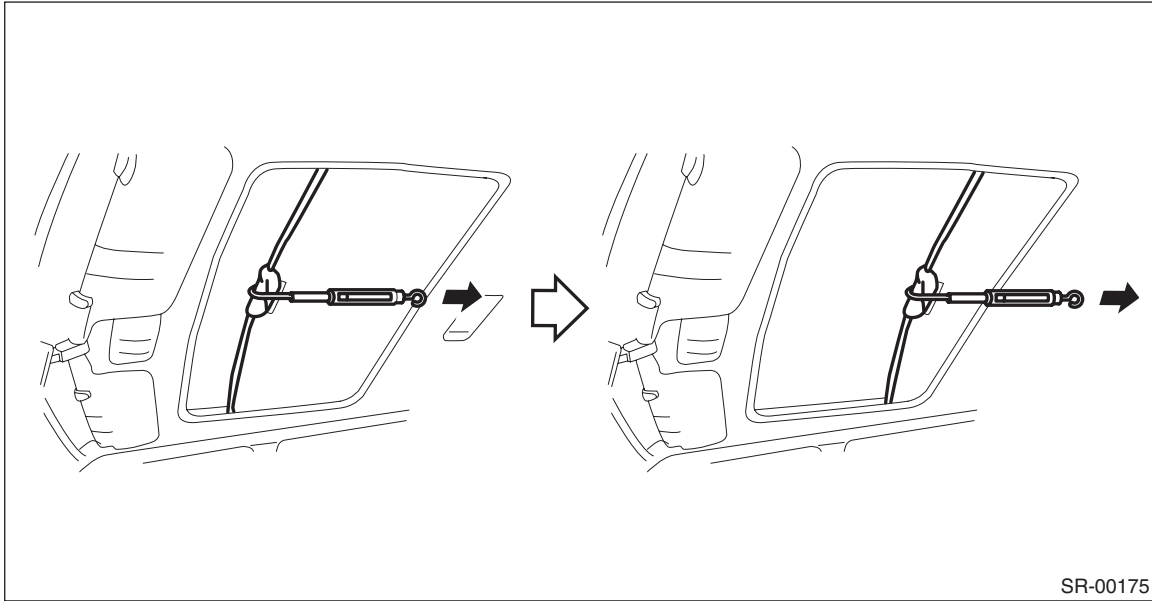

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while the sunshade assembly is sliding smoothly.

- 3) If the inspection result exceeds the standard, check that the sunshade assembly or the rail assembly - sunroof is installed properly. If necessary, replace the sunshade assembly or the rail assembly - sunroof.

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Under Cover	21
3. Mud Guard	23
4. Floor Under Protector	25
5. Fuel Tank Protector	26
6. Front Hood Duct	27
7. Front Grille	28
8. Front Bumper	30
9. Rear Bumper	41
10. Cowl Panel	45
11. Roof Molding	48
12. Side Garnish	50
13. Trunk Lid Garnish	51
14. Rear Spoiler	52
15. Heat Shield Cover	54
16. Ornament	55
17. Door Trim	56
18. Instrument Panel Lower Cover	61
19. Glove Box	63
20. Center Console	66
21. Console Box	67
22. Instrument Panel Assembly	69
23. Lower Inner Trim	81
24. Upper Inner Trim	85
25. Rear Quarter Trim	89
26. Rear Shelf Trim	92
27. Trunk Room Trim	95
28. Sun Visor	97
29. Assist Grip	98
30. Roof Trim	99
31. Floor Mat	105