

### 10.Weather Strip


#### A: REPLACEMENT

##### 1. FLANGE

- 1) Remove each weather strip - body side flange while pulling the rubber. Be careful not to tear the rubber.
- 2) Replace the weather strip - trunk lid while pulling the rubber. Be careful not to tear the rubber.

##### NOTE:

While removing the weather strip - trunk lid, be careful not to allow adhesive to contact the trim panel - trunk side.

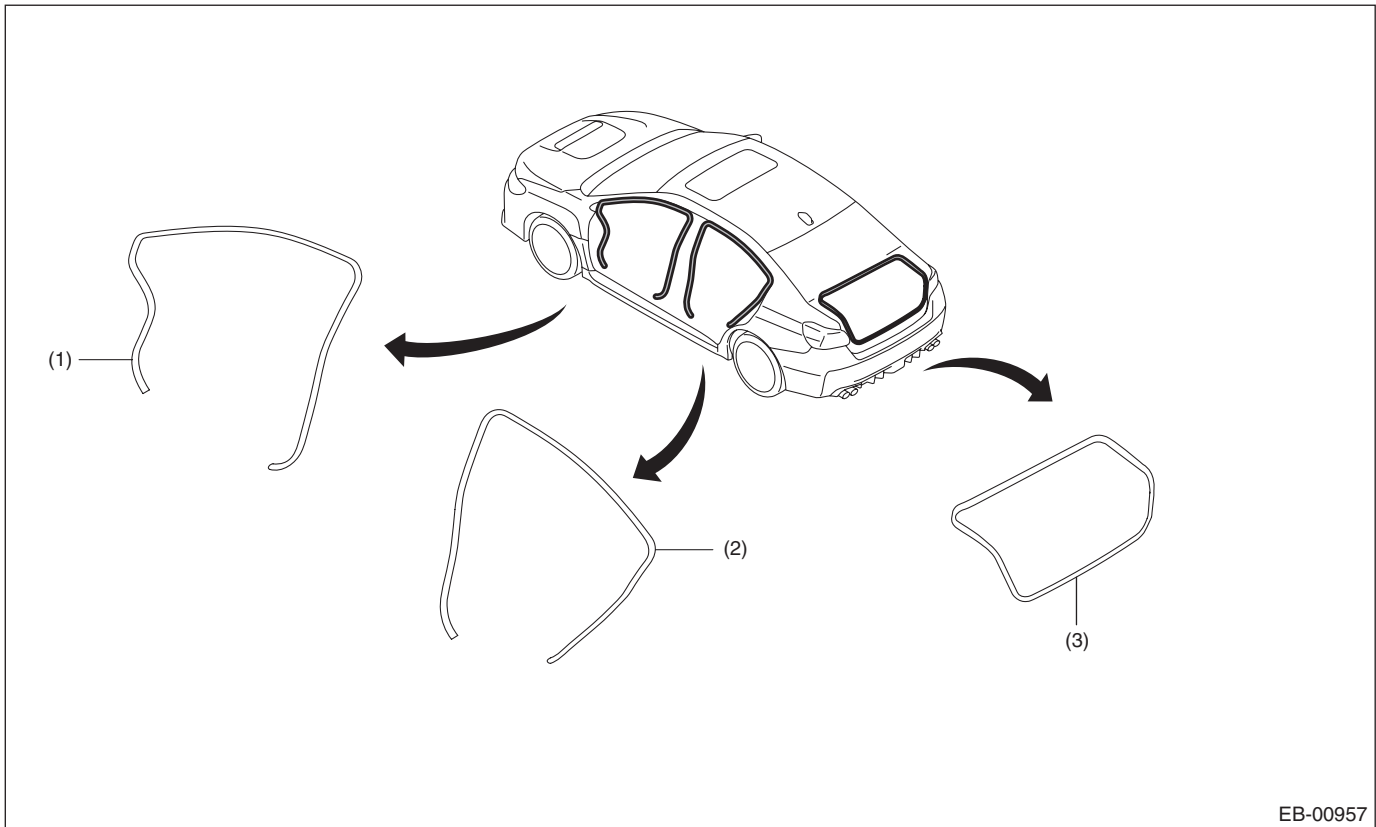

EB-00957

(1) Weather strip - body side flange front

(2) Weather strip - body side flange rear



(3) Weather strip - trunk lid

## 2. DOOR

1) Remove the weather strip after removing the clip. Be careful not to tear the rubber.

### CAUTION:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

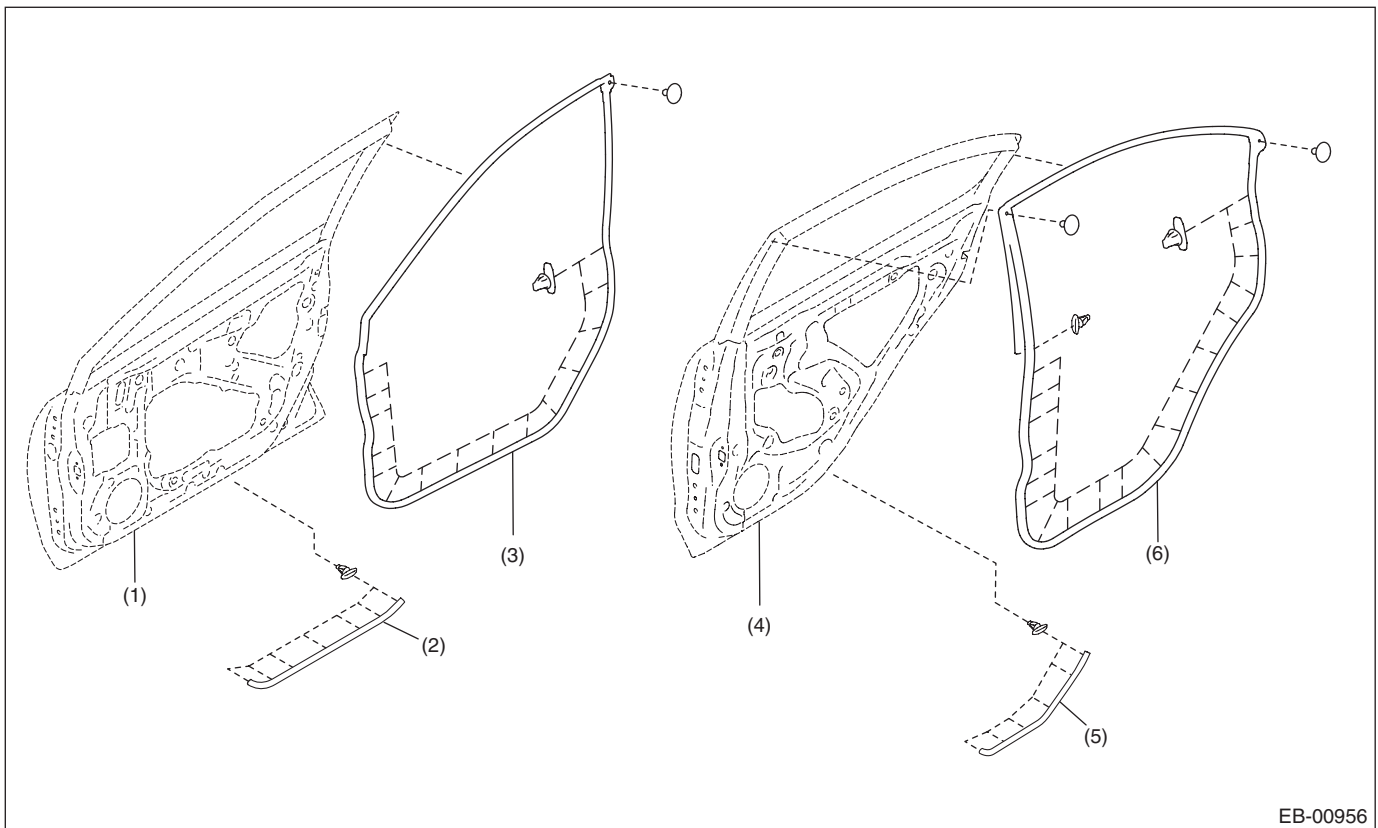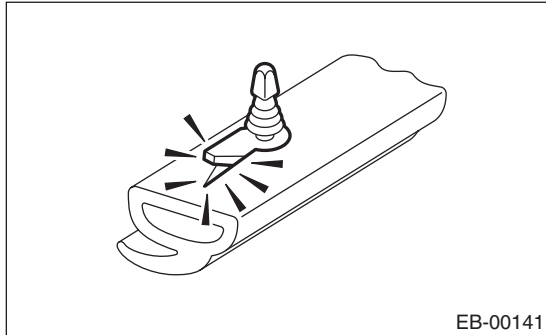

- |  |                                |                                       |
|--|--------------------------------|---------------------------------------|
| (1) Panel ASSY - front door            | (3) Weather strip - front door | (5) Weather strip - rear door - lower |
| (2) Weather strip - front door - lower | (4) Panel ASSY - rear door     | (6) Weather strip - rear door         |

**Weather Strip**

EXTERIOR BODY PANELS

---

# CRUISE CONTROL SYSTEM

# CC

---

	Page
1. General Description .....	2
2. Relay and Fuse .....	3
3. Cruise Control System .....	4
4. Cruise Control Module .....	5
5. Cruise Control Command Switch .....	6
6. Combination Meter .....	8
7. Stop Light & Brake Switch .....	9
8. Clutch Switch .....	10
9. Inhibitor Switch .....	11
10. Transmission Control Module (TCM) .....	12
11. Neutral Position Switch .....	13
12. Diagnostics with Phenomenon .....	14