


# Fuel Tank Protector

FUEL INJECTION (FUEL SYSTEMS)

## 26.Fuel Tank Protector

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolt and nuts and remove the fuel tank protector.

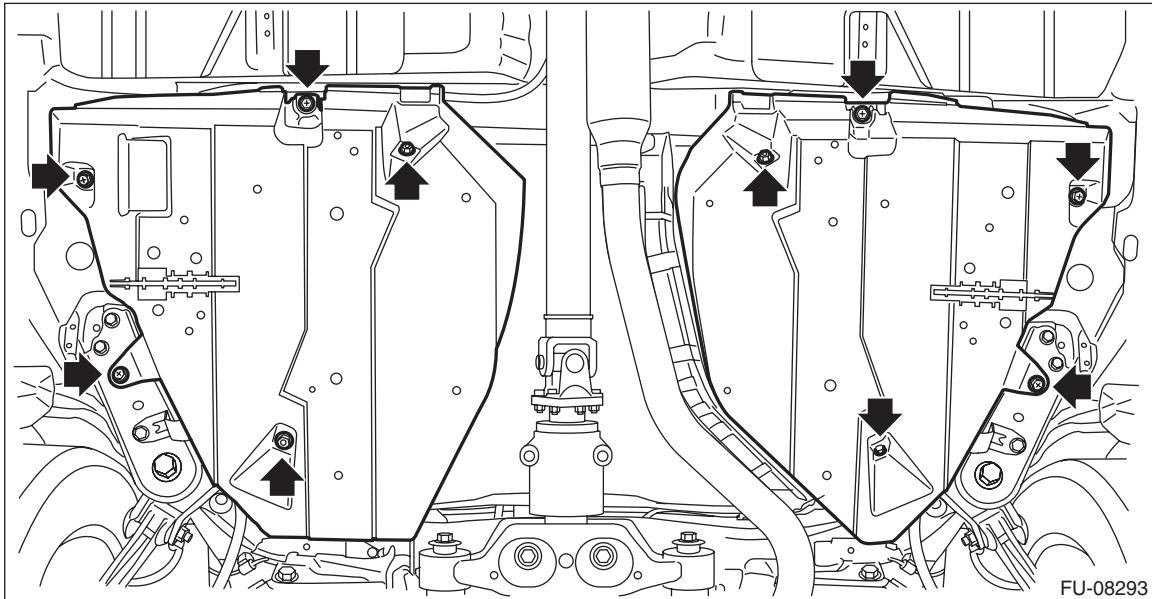

### B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Use a new self-locking nut.

**Tightening torque:**

**T1: 9 N·m (0.9 kgf-m, 6.6 ft-lb)**

**T2: 18 N·m (1.8 kgf-m, 13.3 ft-lb)**

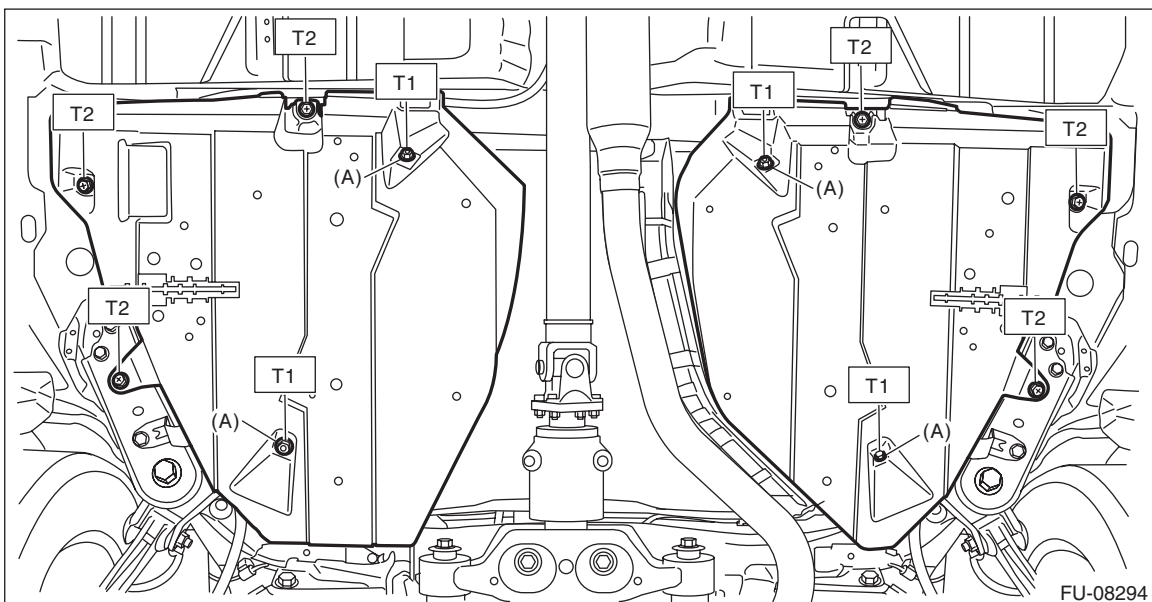

(A) Self-locking nut