


10.Rearview Mirror

A: REMOVAL


CAUTION:

Be careful not to damage the mirror surface and the glass - front window.

1) Release the claws, and then remove the cover.

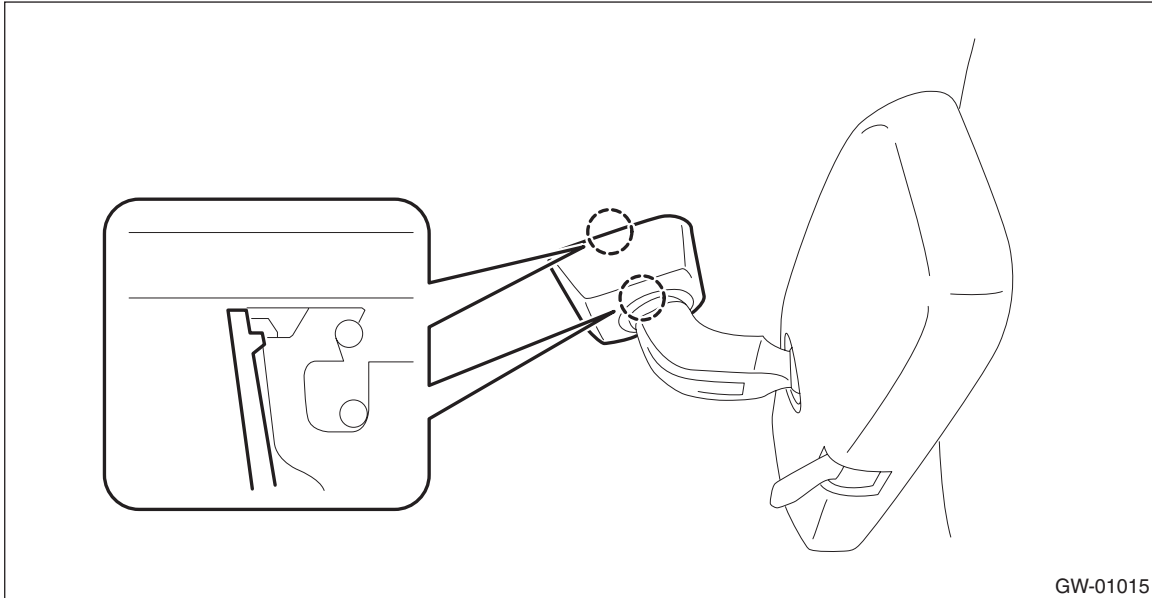

2) Release the lock lever, and slide the mirror assembly - inner rearview to remove.

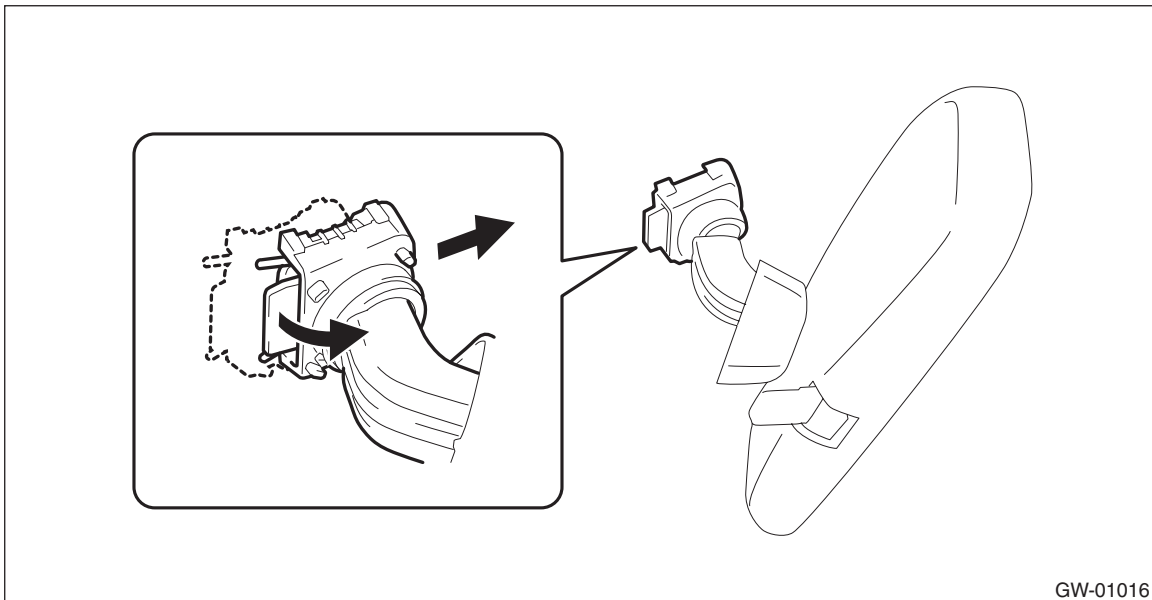

3) When the mirror mount is damaged, use something like piano wire or a spatula to remove.

B: INSTALLATION

1) To install the mirror assembly - inner rearview, slide and push it until the claw engages.

2) Install the cover to the mirror assembly - inner rearview.

C: INSPECTION

Check the mirror and mirror mount for damage.